


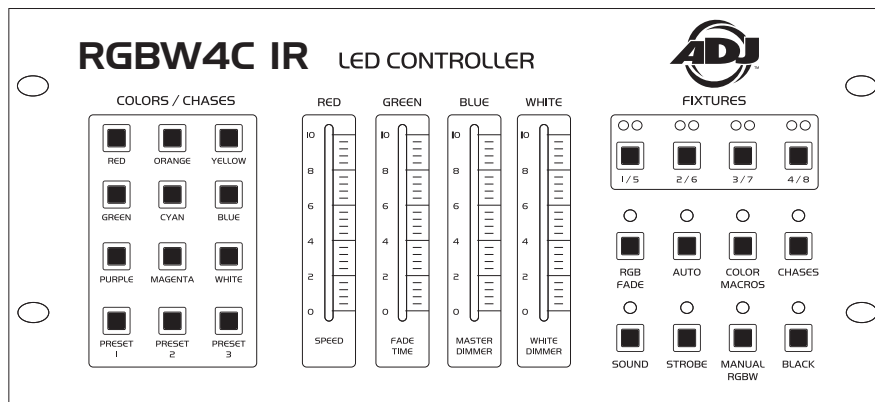

RGBW4C IR

©2015 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

ADJ Products, LLC and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, unsufficient and negligent assembly, installation, rigging, and operation of this product.



User Instructions

Europe Energy Saving Notice

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the enviroment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

Unpacking: Thank you for purchasing the RGBW4C IR by ADJ Products, LLC. Every RGBW4C IR has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all equipment necessary to operate the unit has arrived intact. In the event damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Please do not return this unit to your dealer without contacting customer support first.

Introduction: The RGBW4C IR is a 32-channel RGB, RGBW or RGBA LED controller. Up to 8 LED fixtures or fixture groups can independently be controlled via four fixture buttons. The units control panel includes; 9 “Static Color/Chase” buttons, which contain pre-programmed colors and chase programs, 3 programmable color preset buttons, 4 multi function faders that control RGBW intensities, as well as program speed, fade time, and master dimmer. There are 8 buttons used to select the operation mode, including RGB Fade, Auto Run, Color Macro, Chase, Sound Active, Strobe, Manual RGBW and Blackout modes. The RGBW4C IR is one of the simplest and most versatile LED controllers available today. It is ideal for D.J.’s, nightclubs, lounges, bars, and anyone that wants easy control of LED Par’s, Bar’s, Flood’s, or Panel’s.

Customer Support: ADJ Products, LLC provides a toll free customer support line, to provide help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.adj.com for any comments or suggestions. Service Hours are Monday through Friday 8:00 a.m. to 4:30 p.m. Pacific Standard Time.

Voice: (800) 322-6337

Fax: (323) 582-2941

E-mail: support@americandj.com

To purchase parts online visit <http://parts.americandj.com>

Warning! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

To optimize the performance of this product, please read these operating instructions carefully to familiarize yourself with the basic operations of this unit. These instructions contain important safety information regarding the use and maintenance of this unit. Please keep this manual with the unit, for future reference.

- 9 Static Colors
- RGBW Faders To Create Desired Color
- 9 Chases
- Auto, Program, RGBW, Chase, and Sound Active Modes
- Adjustable Program and Fade Speed
- Adjustable Sound Sensitivity
- Strobing
- Blackout
- ADJ LED RC2 Compatible (Sold Separately)

The RGBW4C IR carries a 1 year (365 days) limited warranty. Please fill out the enclosed warranty card to validate your purchase and warranty. You may also register your product online at www.americandj.com. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. If the unit is under warranty you must provide a copy of your proof of purchase invoice. Please contact ADJ customer support for a R.A. number.

Power Supply: Before plugging your unit in, be sure the source voltage in your area matches the required voltage for your ADJ RGBW4C IR. The ADJ RGBW4C IR is 120v only. Only use the included power supply to power RGBW4C IR.

DMX-512: DMX is short for Digital Multiplex. This is a universal protocol used by most lighting and controller manufactures as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA "IN" and DATA "OUT" XLR terminals located on all DMX fixtures (most controllers only have a DATA "OUT" terminal).

DMX Linking: DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. Therefore, the first fixture controlled by the controller could be the last fixture in the chain. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

Data Cable (DMX Cable) Requirements (For DMX and Master/Slave Operation): Your DMX controller require a standard 3-pin XLR connector for data input and data output (Figure 1). We recommend Accu-Cable DMX cables. If you are making your own cables, be sure to use standard 110-120 Ohm shielded cable (This cable may be purchased at almost all pro lighting stores). Your cables should be made with a male and female XLR connector on either end of the cable. Also remember that DMX cable must be daisy chained and cannot be split.



Figure 1

Notice: Be sure to follow figures two and three when making your own cables. Do not use the ground lug on the XLR connector. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behavior.

 


Figure 2

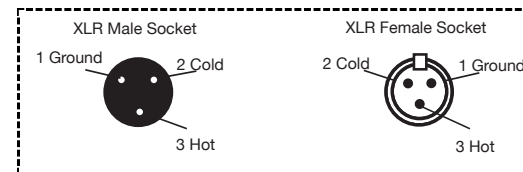


Figure 3

XLR Pin Configuration	
Pin 1 =	Ground
Pin 2 =	Data Compliment (negative)
Pin 3 =	Data True (positive)

Special Note: Line Termination. When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 110-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number Z-DMX/T) will decrease the possibilities of erratic behavior.




Termination reduces signal errors and avoids signal transmission problems and interference. It is always advisable to connect a DMX terminal, (Resistance 120 Ohm 1/4 W) between PIN 2 (DMX-) and PIN 3 (DMX +) of the last fixture.

Figure 4

5-Pin XLR DMX Connectors. Some manufactures use 5-pin DMX-512 data cables for DATA transmission in place of 3-pin. 5-pin DMX fixtures may be implemented in a 3-pin DMX line. When inserting standard 5-pin data cables in to a 3-pin line a cable adaptor must be used, these adaptors are readily available at most electric stores. The chart below details a proper cable conversion.

3-Pin XLR to 5-Pin XLR Conversion		
Conductor	3-Pin XLR Female (Out)	5-Pin XLR Male (In)
Ground/Shield	Pin 1	Pin 1
Data Compliment (- signal)	Pin 2	Pin 2
Data True (+ signal)	Pin 3	Pin 3
Not Used		Pin 4 - Do Not Use
Not Used		Pin 5 - Do Not Use

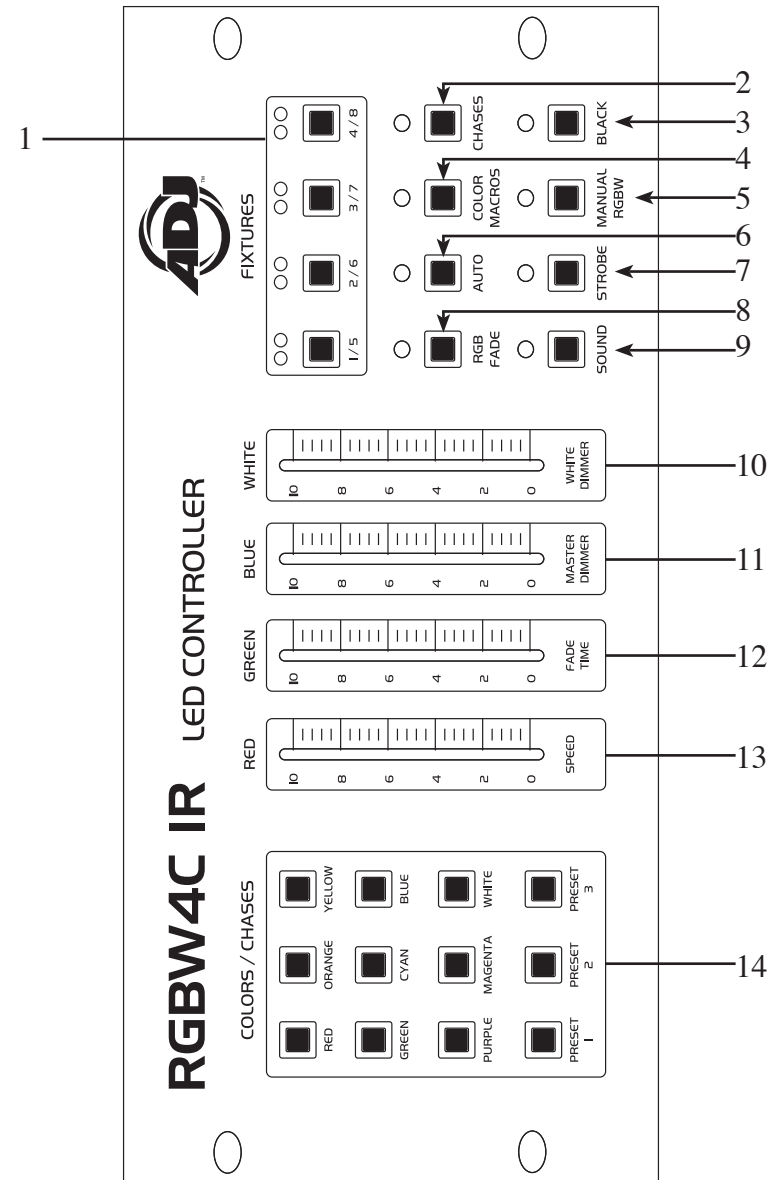

1. **FIXTURE SELECTION** - The RGBW4C IR can control up to 8 LED fixtures. Press one of the buttons and the corresponding LEDs above the button will light indicating which LED fixture can be controlled.
Example: Press the 1/5 button one time and the left LED will light indicating that fixture 1 can now be controlled. Press the button a second time and the right LED will light, indicating that fixture 5 can now be controlled. Press the button a third time and both LEDs will light, indicating that both fixtures can now be controlled. When you press the button the fourth time both LEDs will turn off, indicating that you cannot control the fixtures.
2. **CHASE BUTTON** - Press this button to activate chase mode. Press any of the color buttons in the COLORS/CHASES grid (14) to select your desired chase.
3. **BLACKOUT** - Activates and deactivates blackout mode
4. **COLOR MACROS** - Press this button to activate the COLOR MACROS. The COLOR MACROS can be controlled using the following:
 - The RED/SPEED FADER (13) will create your own color to remain static.
 - The GREEN/FADE TIME FADER (12) will control the fade speed.
 - The BLUE/MASTER DIMMER FADER (11) will control the RGB LEDs intensity.
 - The WHITE/WHITE DIMMER FADER (10) will control the white LEDs intensity.
5. **MANUAL RGBW** - Pressing this button activates manual RGBW. When this mode is active you can press any of the color buttons located in the COLORS/CHASE grid (14). You can also use the RED/SPEED FADER (13) to control the red LEDs intensity, the GREEN/FADE TIME FADER (12) to control the green LEDs intensity, etc.
6. **AUTO PROGRAM** - Pressing this button will activate the auto program. The Auto Program can be controlled using the following:
 - The RED/SPEED FADER (13) will control the program speed.
 - The GREEN/FADE TIME FADER (12) will control the fade speed.
 - The BLUE/MASTER DIMMER FADER (11) will control the RGB LEDs intensity.
 - The WHITE/WHITE DIMMER FADER (10) will control the white LEDs intensity.
7. **STROBE** - Activates and deactivates strobing. Use the RED/SPEED (13) fader to adjust the strobe speed.
8. **RGB FADE** - Pressing this button activates RGB FADE.

- The RGB FADE can be controlled using the following:
- The RED/SPEED FADER (13) will control the program speed.
 - The GREEN/FADE TIME FADER (12) will control the fade speed.
 - The BLUE/MASTER DIMMER FADER (11) will control the RGB LEDs intensity.
 - The WHITE/WHITE DIMMER FADER (10) will control the white LEDs intensity.
9. **SOUND ACTIVE MODE** - Pressing this button will activate the sound active mode, the sensitivity of the sound active mode can be adjusted using knob located on the rear of the controller. Other adjustments can be made using the following:
 - The GREEN/FADE TIME FADER (12) will control the fade speed.
 - The BLUE/MASTER DIMMER FADER (11) will control the RGB LEDs intensity.
 - The WHITE/WHITE DIMMER FADER (10) will control the white LEDs intensity.
 10. **WHITE/WHITE DIMMER FADER** - Use this fader to control the output intensity of the white LEDs.
 11. **BLUE/MASTER DIMMER FADER** - This fader has two functions.
 - This fader can be used to control the blue LEDs intensity in MANUAL RGBW MODE.
 - In AUTO PROGRAM, CHASE MODE, RGB FADE, COLOR MACROS, & SOUND ACTIVE MODE this fader will control the RGB LEDs output intensity.
 12. **GREEN/FADE TIME FADER** - This fader has two functions.
 - This fader can be used to control the green LEDs intensity in MANUAL RGBW MODE.
 - In AUTO PROGRAM, CHASE MODE, RGB FADE, COLOR MACROS, & SOUND ACTIVE MODE this fader will control the fade time.
 13. **RED/SPEED FADER** - This fader has three functions.
 - This fader can be used to control the red LEDs intensity in MANUAL RGBW MODE.
 - In AUTO PROGRAM, CHASE MODE & RGB FADE this fader will control program speed.
 - In COLOR MACROS MODE this fader will create your color to remain static.
 14. **COLORS/CHASES/PRESETS** - Press the COLOR buttons to activate desired COLOR MACROS, or when in CHASE MODE the color buttons will activate chases. See the built-in chases on page 10.



15. POWER SWITCH - Accepts a DC 9V~12V, 300mA minimum, power supply.
16. DC INPUT - Accepts a DC 9V~12V, 300mA minimum, power supply.
17. DMX OUT - Used to send DMX signal to the compatible LED fixtures.
18. IR RECEIVER SENSOR INPUT - Input for the included IR receiver sensor.
19. SOUND SENSITIVITY - Use this knob to adjust the sound sensitivity.

Note: When the power is switched Off and then back On, the controller will return to the last operating mode.

Sound Active Mode:

1. Press the SOUND ACTIVE button and the corresponding LED above the button will light.
2. Use the SOUND SENSITIVITY knob located at the rear to adjust the sound sensitivity level.
3. Use the faders (10, 11, & 12) to adjust the LED intensity & fade time. The RED/SPEED fader (13) cannot be used in this mode.

Chase Mode:

1. Press the CHASE button and the corresponding LED above the button will light.
2. Press 1 of the 9 COLOR buttons (14) located in the Color/Chases region to activate a chase. Please see the chase chart on page 12.
3. Once your desired chase program has been selected, use the faders (10, 11, 12, & 13) to adjust the LED intensity, fade time, and chase speed.

Auto Mode:

1. Press the AUTO button and the corresponding LED above the button will light.
2. Use the faders (10, 11, 12, & 13) to adjust the LED intensity, fade time, and chase speed.

Color Macros Mode:

1. Press the COLOR MACROS button and the corresponding LED above the button will light.
2. Use the faders (10, 11, 12, & 13) to adjust the preferable static color, LED intensity, and fade time.

RGB Fade Mode:

1. Press the RGB FADE button and the corresponding LED above the button will light.
2. Use the faders (10, 11, 12, & 13) to adjust the LED intensity, fade time, and chase speed.

Manual RGBW Color Mode:

1. Press the MANUAL RGBW button and the corresponding LED above the button will light.

RGBW4C IR Operation

2. Press any of the 9 color buttons or use the RGBW faders to make your own desired color.
3. Use the faders (10, 11, 12, & 13) to adjust the LED intensities.

Preset Mode: Using these buttons you are able to save and recall a chase, color, or program.

1. To save a chase, color, or program, press 1 of the 3 PRESET button for at least 3 seconds. When all of the LEDs flash 3 times, this informs you that the save was successful.
2. To recall the saved chase, color, or program, press the corresponding PRESET button.

RGBW4C IR Chase Chart

BUTTONS IN COLORS/CHASES REGION	CHASE MODE DESCRIPTION
RED button	Red/Green chase
ORANGE button	Green/Blue chase
YELLOW button	Red/Blue chase
GREEN button	Red/Cyan chase
CYAN button	Green/Purple chase
BLUE button	Yellow/Blue chase
PURPLE button	Red/Green/Blue/Yellow/Purple/Cyan/White chase
MAGENTA button	Red/Green/Blue/Red/Blue/ Yellow /Cyan/ Yellow chase
WHITE button	Yellow/Purple chase

RGBW4C IR ADJ LED RC2 Control

The **ADJ LED RC2** infrared remote has many different functions that can help you control your RGBW4C IR. To control the RGBW4C IR, plug the included IR receiver into IR receiver input located on the rear of the controller. You must aim the remote at the IR sensor and be no more the 30 feet away.

DMX MODE - This button will let you select which fixtures to control. Press this button and then use buttons 1-8 to select your desired fixtures. The LED above the FIXTURE buttons that you have selected will light up when you have chosen that fixture.

Example: Press the DMX MODE button, then press the #7 button. The LED above FIXTURE button #7 will light up. You are now controlling fixture #7. Press the #7 button again deactivate control of fixture #7.

BLACKOUT - Pressing this button will blackout any fixture(s) being controlled at the time. When blackout is active, the LED above the BLACKOUT button will flash. Press the button again to deactivate blackout.

SELECT PROG - Pressing this button will cycle among RGBW Fade mode, Auto Run mode, Color Macros mode, Chase mode, and Manual RGBW dimmer mode. Each press of the button will switch to the next mode.

- **RGBW Fade Mode** - When the controller is set to RGBW Fade mode, the LED above the button will glow. Press the SPEED button, and use the “+” & “-” buttons to adjust the program running speed. Press the SPEED button twice to enter fade speed adjustment, and use the “+” & “-” buttons to adjust the fade speed. Press the SET ADDR button and use the “+” & “-” buttons adjust the Master Dimmer. Press the W button and use the “+” & “-” buttons to adjust the White intensity.
- **Auto Run Mode** - When the controller is set to Auto Run mode, the LED above the button will glow. Press the SPEED button, and use the “+” & “-” buttons to adjust the program running speed. Press the SPEED button twice to enter fade speed adjustment, and use the “+” & “-” buttons to adjust the fade speed. Press the SET ADDR button and use the “+” & “-” buttons adjust the Master Dimmer. Press the W button and use the “+” & “-” buttons to adjust the White intensity.

- **Color Macros Mode** - When the controller is set to Color Macros mode, the LED above the button will glow. Press the “+” & “-” buttons to find your desired static color. Press the SPEED button to enter fade speed adjustment, and use the “+” & “-” buttons to adjust the fade speed. Press the SET ADDR button and use the “+” & “-” buttons adjust the Master Dimmer. Press the W button and use the “+” & “-” buttons to adjust the White intensity.
- **Chase Mode** - When the controller is set to Chase mode, the LED above the button will glow. Press the SPEED button, and use the “+” & “-” buttons to adjust the chase speed. Press the SPEED button twice to enter fade speed adjustment, and use the “+” & “-” buttons to adjust the fade speed. Press the SET ADDR button and use the “+” & “-” buttons adjust the Master Dimmer. Press the W button and use the “+” & “-” buttons to adjust the White intensity.
- **Manual RGBW Color Mode** - When the controller is set to Manual RGBW Color mode, the LED above the button will glow. Press the R/G/B/W buttons, and use the “+” & “-” buttons to adjust each colors output intensity.

SOUND ACTIVE MODE - Press the SL/SA button to activate Sound Active mode. The LED above the button will glow indicating that your are in Sound Active mode. Use the SOUND SENSITIVITY dial on the reare of the unit to adjust the sound sensitivity. Press the SPEED button to enter fade speed adjustment, and use the “+” & “-” buttons to adjust the fade speed. Press the SET ADDR button and use the “+” & “-” buttons adjust the Master Dimmer. Press the W button and use the “+” & “-” buttons to adjust the White intensity.

PRESET MODE - In any working mode, press the A button, then press and hold either of the 1, 2, or 3 buttons for more then 3 seconds to save that scene to the corresponding PRESET button on the controller. If your save was successful all PRESET button LEDs will flash 3 times. To recall the scene press the 0 button then press the number button where your desired scene is located.

Example: Press the A button, then press the #2 button for more then 3 seconds to save the scene to PRESET button 2. If the save was successful all PRESET button LEDs will flash 3 times. To recall the scene

in PRESET button 2, press the 0 button, then press the #2 button.

FLASH - Press this button to activate the strobing. The LED above the button will glow indicating that strobing is active. You can control the flash rate by pressing the “+” and “-” buttons. Press this button again to deactivate strobing.

MANUFACTURER'S LIMITED WARRANTY

- A. ADJ Products, LLC hereby warrants, to the original purchaser, ADJ Products, LLC products to be free of manufacturing defects in material and workmanship for a prescribed period from the date of purchase (see specific warranty period on reverse). This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service you must obtain a Return Authorization number (RA#) before sending back the product—please contact ADJ Products, LLC Service Department at 800-322-6337. Send the product only to the ADJ Products, LLC factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, ADJ Products, LLC will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, ADJ Products, LLC shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which ADJ Products, LLC concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the ADJ Products, LLC factory unless prior written authorization was issued to purchaser by ADJ Products, LLC; if the product is damaged because not properly maintained as set forth in the instruction manual.
- D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check up. During the period specified above, ADJ Products, LLC will replace defective parts at its expense with new or refurbished parts, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of ADJ Products, LLC under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of ADJ Products, LLC. All products covered by this warranty were manufactured after August 15, 2012, and bear identifying marks to that effect.
- E. ADJ Products, LLC reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by ADJ Products, LLC in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and/or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall ADJ Products, LLC be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

This warranty is the only written warranty applicable to ADJ Products, LLC Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

MANUFACTURER'S LIMITED WARRANTY PERIODS:

- **Lighting Products = 1-year (365 days) Limited Warranty** (Such as: Special Effect Lighting, Intelligent Lighting, UV lighting, Strobos, Fog Machines, Bubble Machines, Mirror Balls, Par Cans, Trussing, Lighting Stands etc. excluding LED and lamps)
- **Laser Products = 1 Year (365 Days) Limited Warranty** (excluding laser diodes which have a 6 month limited warranty)
- **L.E.D. Products = 2-year (730 days) Limited Warranty** (excluding motors, PCB boards, and power supplies, which have a 1-year (365 day Limited Warranty) batteries which have a 180 day limited warranty). Only the L.E.D.s carry a 2-year warranty (excluding StarTec Series which carries a 1 Year Limited Warranty)
- **ADJ DMX Controllers = 2 Year (730 Days) Limited Warranty** (excluding faders and tact switches)

Specifications

POWER SUPPLY:	12V DC, 500mA UL Approved.
POWER CONSUMPTION:	3.6W
OUTPUT:	3-Pin XLR
AUDIO TRIGGER:	Built-In Microphone
DIMENSIONS:	327mm(L) x 140mm(W) x 48mm(H) 13" (L) x 5.5" (W) x 2" (H)
WEIGHT:	2.4Lbs./ 1.1Kgs.
WARRANTY:	1 Year (365 Days)

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

ADJ Products, LLC
6122 S. Eastern Ave. Los Angeles, CA 90040 USA
Tel: 323-582-2650 / Fax: 323-725-6100
Web: www.adj.com / E-mail: info@americandj.com

A.D.J. Supply Europe B.V.
Junostraat 2
6468 EW Kerkrade
Netherlands

Follow Us On:



facebook.com/americandj
twitter.com/americandj
youtube.com/adjlighting

service@adjgroup.eu / www.adj.eu
Tel: +31 45 546 85 00 / Fax: +31 45 546 85 99