



INSTRUCTION BOOK FOR
Theater-Lite



Introduction

Thank you for purchasing this product. Before operating your screen, please read all instructions. Store this instruction book for future reference.

For Your Safety

This product has been designed with safety in mind. However inappropriate use of this product is dangerous and may cause personal injury. In order to prevent accidents, please follow the instructions below.

INSPECT THE PRODUCT REGULARLY.

Before you use the projection screen, make certain that all the parts such as the screen case, hook, upright bar, feet and lifting handle are not warped, loose, or damaged. Do not use if screen is out of order.

WARNINGS

Failure to observe the following warning can result in fire and serious injury.

Do not place the screen near any heating sources. Since the screen is made of plastic material, it may cause fire and can be damaged.

Place in a flat, stable place. If the screen is set up on a slanting surface or with something under one foot, it is likely to fall over, resulting in personal injury to people nearby.

Keep out of direct wind. If the screen is set up in strong air currents, outside, near a window, or in front of a fan, it can blow over resulting in personal injury to people nearby.

To prevent the screen from tipping over falling. Rotate the feet at the bottom of the case until they are perpendicular to the case, and make sure they are securely in place. Firmly set the upright, grasp the lifting handle tightly, pull the screen up and set it securely on the hook at the top end of the upright bar. Do not push or lean on the screen or upright bar once they are set. Do not hang anything on the screen or the upright bar.

Do not take apart or modify. Any disassembly or modification can result, not only in the screen failing to function normally, but it can also cause parts to spring off, resulting in personal injury to people nearby.

Care Of Screen

To maintain the reflectivity of the screen:

- Do not touch the screen surface directly.
- Do not bend or lean on or hang things from the screen.
- Do not write on the screen. Regardless of the type of writing instrument used, it cannot be erased.
- When caring for the screen as regular maintenance, wipe it with a soft, dry cloth or dust it with a soft brush. If the screen is stained or dirty, clean it using a damp cloth with water and mild detergent. Then wipe with water only and dry it thoroughly.
- Do not wipe with benzene or paint thinner. The surface of the screen will degrade and this will negatively affect the quality of the projected image.

PRECAUTIONS

Failure to observe the following precautions can result in injury or damage.

When handling the screen:

- When storing the screen, lock the release lever by rotating the green knob. If the case is carried when the release lever is not securely locked, it may spring open unexpectedly, causing the screen to get dirty or damaged.
- When raising or lowering the screen, make sure to keep pressing on the screen release button. Lowering by force may damage screen.
- When cleaning the screen, be careful the screen and the upright bar do not tip over.

 
Do not let children touch. Do not let children operate or play with the screen. The screen can tip over and cause personal injury.

Store horizontally. If the screen is stored vertically, take measure to prevent it from tipping over. If the screen is leaned up against a wall or other object, it can tip over and cause personal injury.


Installation Location

Avoid locations that are :

- Humid and in direct sunlight
- Not flat and level
- Very dusty
- Near heating sources
- Directly in the path of strong air currents
- Frequently traversed by people

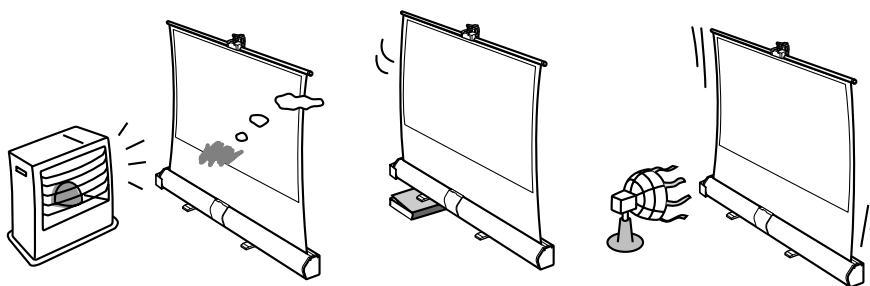

Parts Identification

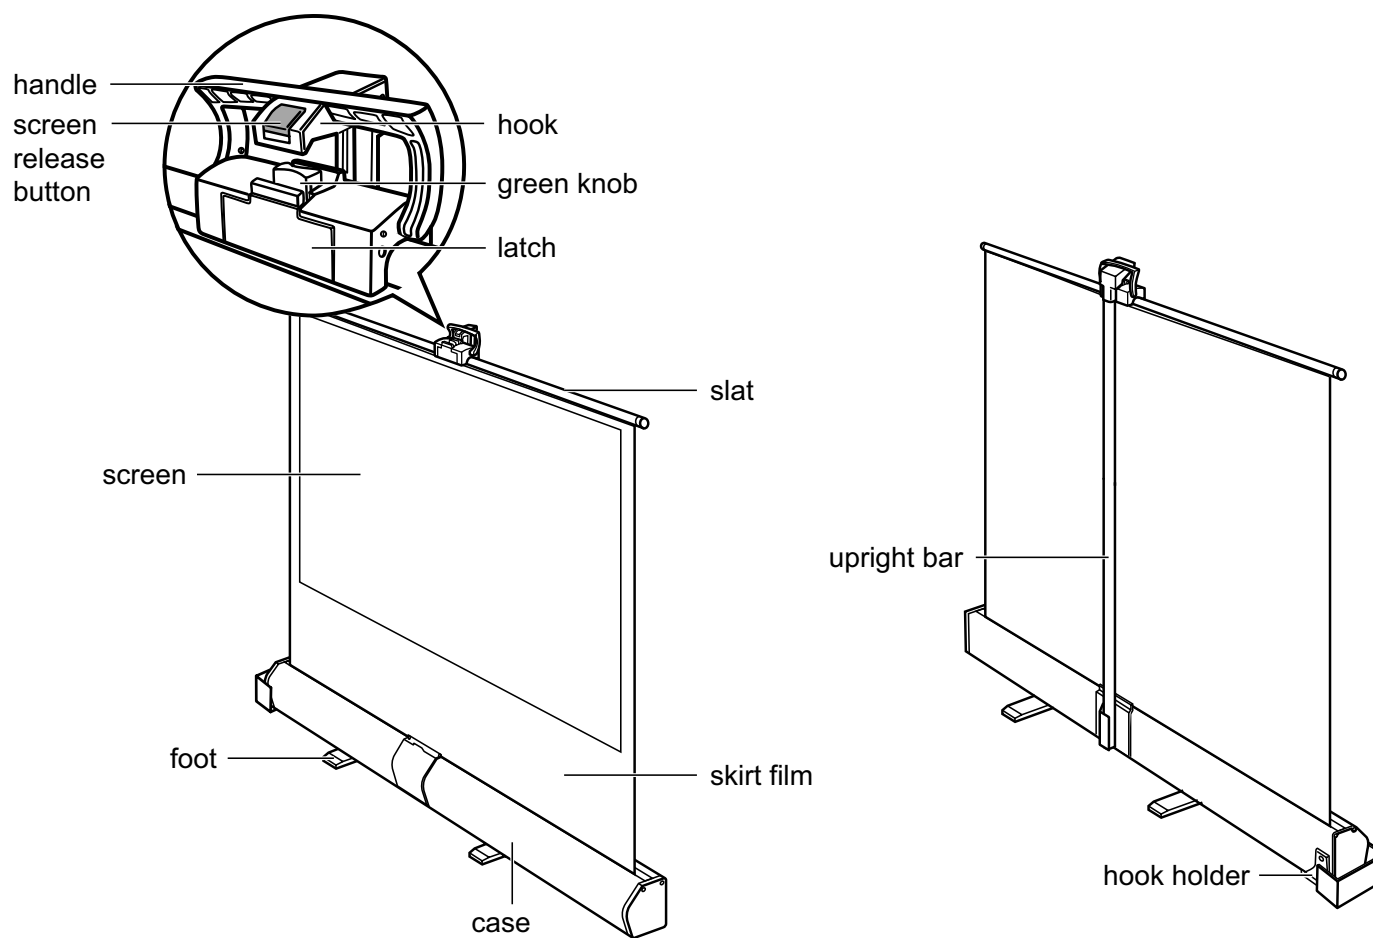 

Setting Up the Screen

1. Determine where to set up the screen.
2. Rotate feet at the bottom so they are perpendicular to the case.
3. Rotate the upright bar 90 degrees into vertical position. Rotate the upright bar until it clicks (Figure 1).
4. Rotate the green knob 90 degrees to unlock the release latch (Figure 2).
5. Raise the screen by grasping the lifting handle and simultaneously squeezing the release latch (Figure 3).
6. Anchor the lifting handle on the upright hook. Make sure that the notch of the handle is firmly on the hook until it clicks (Figure 4).

CAUTION There may be some space in between the slat and screen fabric that is for keeping the flatness of screen surface and not defect in quality.

7. Raise the screen to position at desired height. Press the screen release button and pull up the hook to desired height. You can place in position at any height (Figure 5).

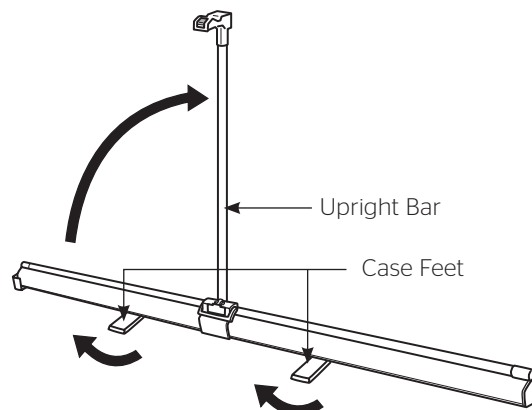 


Figure 1

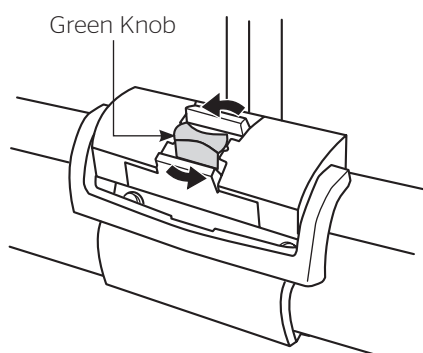 


Figure 2

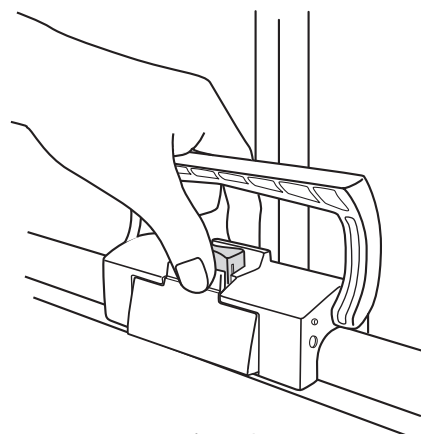 


Figure 3

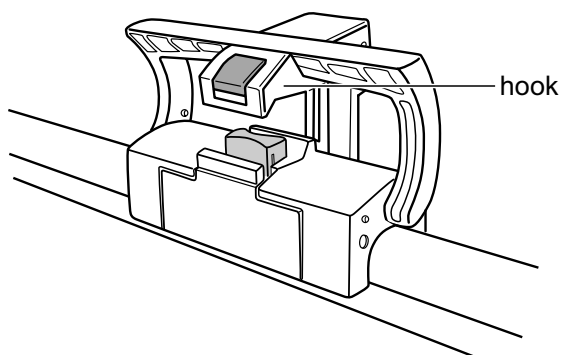 


Figure 4

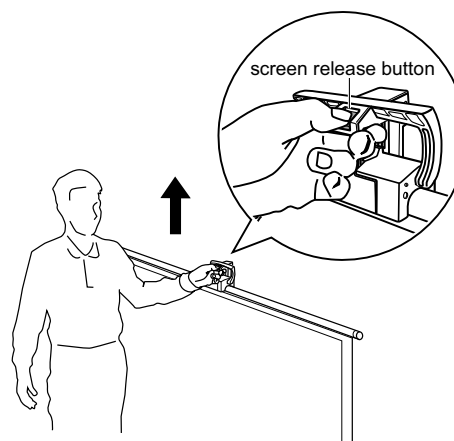 


Figure 5

Storing the Screen

1. Lowering the screen. Press the screen release button and lower the screen slowly. Make sure to support the hook with your hand to lower the screen (Figure 6).
2. Remove the lifting handle from the hook and store the the screen in the case. Lower the screen, as straight as possible until it clicks and the screen is completely stored and locked in the case (Figure 7).

CAUTION: Adjust the lock position of the latch left or right if it doesn't match with lock position of the case.

CAUTION: Do not carry the screen while it is not completely stored and locked. Doing so may cause the case to accidentally slip off and discolor or damage the product.

3. Rote the green knob 90 degrees to lock the release latch (Figure 8).

CAUTION: Do not carry the screen while the green knob is not completely rotated 90 degrees. Doing so may cause the case to accidentally slip off and discolor or damage the product.

4. Rotate the upright bar 90 degrees into a horizontal position. Make sure that the upright bar is telescoped completely and then pull it down gently until it is locked in its holder. If the upright bar is not locked properly in the holder, telescope it completely by pressing on the screen release button and place it back into the holder.
5. Rotate the feet horizontally until they are aligned with the screen case (Figure 9).

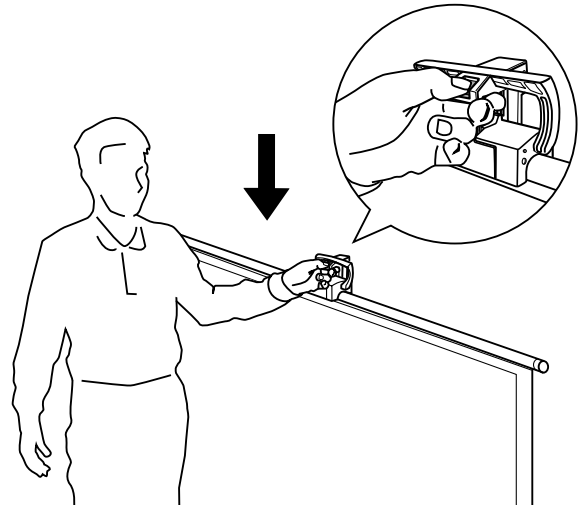 


Figure 6

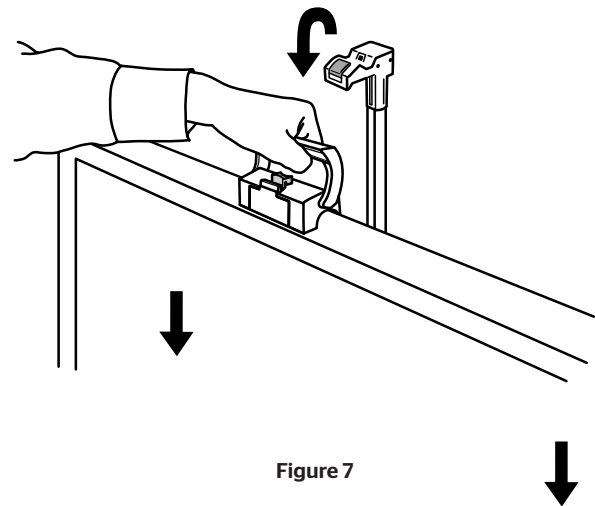 


Figure 7

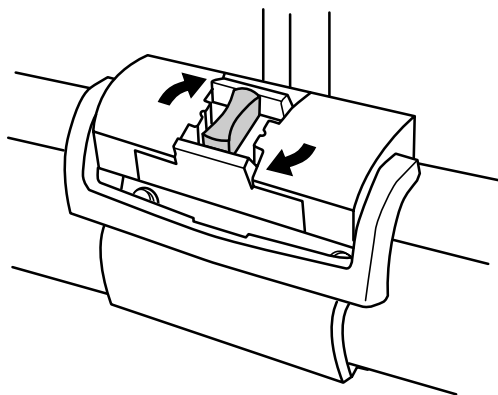 


Figure 8


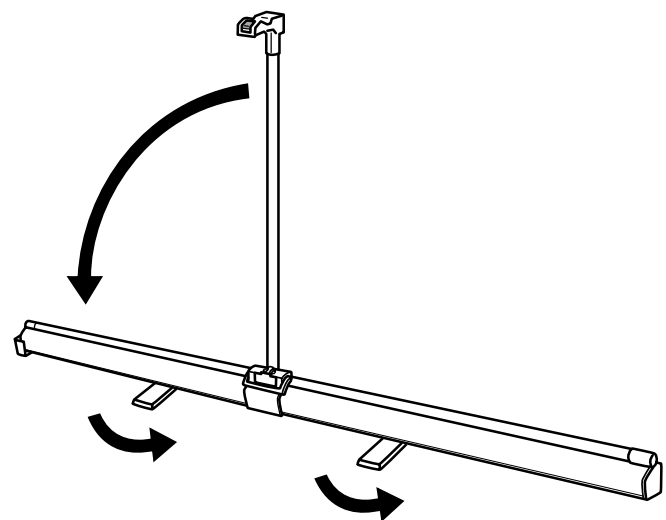 


Figure 9

Specifications for 80" HDTV Format

 Weight: 11 Lbs.

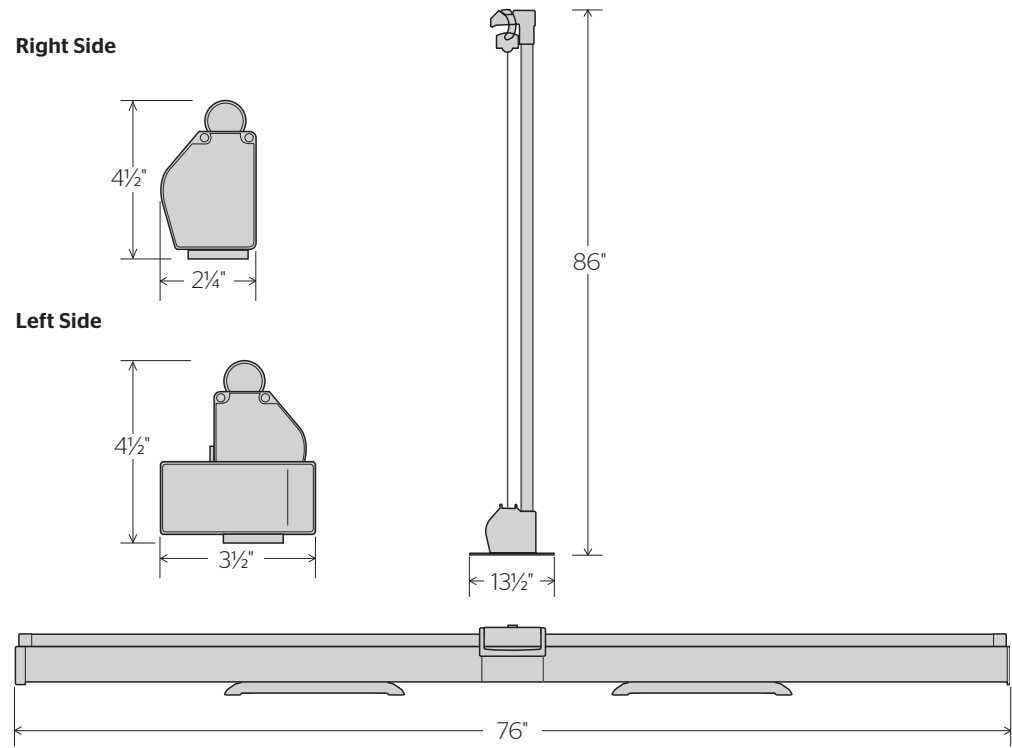

LIMITED ONE YEAR WARRANTY ON DA-LITE PRESENTATION PRODUCTS

Milestone AV Technologies LLC warrants certain Da-Lite branded products to the original purchaser only, to be free from defects in materials and workmanship for a period of one (1) year from the date of purchase by the original purchaser; provided they are properly operated according to Da-Lite's instructions and are not damaged due to improper handling or treatment after shipment from the factory.

This warranty does not apply to equipment showing evidence of misuse, abuse or accidental damage, or which has been tampered with or repaired by a person other than authorized Da-Lite personnel.

Da-Lite's sole obligation under this warranty shall be to repair or to replace (at Da-Lite's option) the defective part of the merchandise. Returns for service should be made to your Da-Lite dealer. If it is necessary for the dealer to return the screen or part to Da-Lite, transportation expenses to and from Da-Lite are payable by the purchaser and Da-Lite is not responsible for damage in shipment. To protect yourself against damage or loss in transit, insure the product and prepay all transportation expenses.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES AS TO FITNESS FOR USE AND MERCHANTABILITY. Any implied warranties of fitness for use, or merchantability, that may be mandated by statute or rule of law are limited to the one (1) year warranty period. This warranty gives you specific legal rights, and you may also have other rights, which vary from state-to-state. **TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, NO LIABILITY IS ASSUMED FOR EXPENSES OR DAMAGES RESULTING FROM INTERRUPTION IN OPERATION OF EQUIPMENT, OR FOR INCIDENTAL, DIRECT, OR CONSEQUENTIAL DAMAGES OF ANY NATURE.**

In the event that there is a defect in materials or workmanship of a Da-Lite product, you may contact our Sales Partners at PO Box 137, Warsaw, IN 46581-0137, (574) 267-8101, (800) 622-3737.

IMPORTANT: THIS WARRANTY SHALL NOT BE VALID AND DA-LITE BRANDED PRODUCTS SHALL NOT BE BOUND BY THIS WARRANTY IF THE PRODUCT IS NOT OPERATED IN ACCORDANCE WITH THE DA-LITE WRITTEN INSTRUCTIONS.

Keep your sales receipt to prove the date of purchase and your original ownership.



A Milestone AV Technologies Brand

3100 North Detroit Street
Warsaw, Indiana 46582
P: 574.267.8101 or 800.622.3737
F: 574.267.7804 or 877.325.4832
E: info@da-lite.com
www.da-lite.com

DL-0291 (Rev. 2) 11.14

© 2014 Milestone AV Technologies LLC. Printed in U.S.A.