



1080P
PROGRESSIVE

HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

8x8 Matrix for HDMI w/4 ELR-POL Outputs

GEF-HDFST-848-4ELR
User Manual

www.gefenpro.com

ASKING FOR ASSISTANCE

Technical Support:

Telephone (818) 772-9100
(800) 545-6900

Fax (818) 772-9120

Technical Support Hours:

8:00 AM to 5:00 PM Monday thru Friday, Pacific Time

Write To:

Gefen, LLC.
c/o Customer Service
20600 Nordhoff St
Chatsworth, CA 91311

www.gefenpro.com
support@gefenpro.com

Notice

Gefen, LLC reserves the right to make changes in the hardware, packaging, and any accompanying documentation without prior written notice.

8x8 Matrix for HDMI w/4 ELR-POL Outputs is a trademark of Gefen, LLC

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing in the United States and other countries.

© 2015 Gefen, LLC. All rights reserved.
All trademarks are the property of their respective owners.

Rev A6

CONTENTS

1	Introduction
2	Operation Notes
3	Features
4	Matrix Layout
4	Front
5	Back
6	Matrix Descriptions
6	Front
7	Back
8	ELR-POL Receiver Layout
9	ELR-POL Receiver Descriptions
10	IR Remote Control
10	Layout and Description
11	Installing the Battery
11	Setting the IR Channel
12	Connecting the 8x8 Matrix for HDMI w/4 ELR-POL Outputs
12	Wiring Diagram
13	Operating the 8x8 Matrix for HDMI w/4 ELR-POL Outputs
13	Main Display
14	Determining the Current Routing State
15	Routing Sources
18	Locking / Unlocking the Front Panel
19	Fast Switching Technology
20	Determining the Current Switching Mode
22	Changing the Switching Mode
23	Setting the IR channel on the 8x8 Matrix for HDMI w/4 ELR-POL Outputs
25	Routing Sources using the IR Remote Control
27	EDID Management
28	RS-232 / IP Control
28	RS-232 Interface
28	RS-232 Settings
29	IP Configuration
30	RS-232 / IP Commands
30	IP / Telnet Configuration
47	UDP Configuration
51	Routing / Naming / Presets
62	Status
68	FST
70	Masking
86	Web Interface
109	Firmware Update
109	Firmware Update Procedure (over IP)
110	Firmware Update Procedure (over USB)
112	Rack Mount Safety Features
113	Specifications
114	Warranty
115	Licensing

INTRODUCTION

Congratulations on your purchase of the GefenPRO *8x8 Matrix for HDMI w/4 ELR Outputs*. Your complete satisfaction is very important to us.

About GefenPRO

GefenPRO supports demanding professionals with invaluable equipment for commercial and broadcast environments. With its expanded hardware, internal power supplies, robust rack mountable enclosures, and 2 year warranty with 24/7 customer support, the GefenPRO Modular Matrix will always perform in the most technically challenging environments.

The GefenPRO 8x8 Matrix for HDMI w/4 ELR-POL Outputs

The GefenPRO 8x8 Matrix with four ELR and four HDMI outputs routes up to eight Hi-Def sources at resolutions up to 1080p Full HD with Deep Color and multi-channel digital audio to any of eight HDTV displays, eliminating the need to disconnect and reconnect HDMI sources and displays. It features extension of four displays up to 330 feet (100 meters), using Gefen's ELR (Extra Long Range) and POL (Power Over Link) technologies. ELR extension on four outputs allows installation of displays over a single CAT-5e cable. POL eliminates the need to externally power the four included ELR receivers. The GefenPRO 8x8 Matrix supports 3DTV and advanced digital audio formats such as Dolby® TrueHD and DTS-HD Master Audio™. Each source is accessible at all times from any display by using the included IR Remote Control, the RS-232 port, IP (Telnet or Web GUI), or by using the front-panel push buttons.

Fast Switching Technology (FST) is a Gefen software implementation for HDMI products. FST was created to improve the lengthy HDMI authentication process, based on the HDMI and HDCP specifications. FST allows connecting/disconnecting or turning any of the HDTV displays on or off without affecting other displays within the audio/video distribution system.

How It Works

Using HDMI cables, connect up to eight Hi-Def sources to the HDMI inputs on the matrix. Connect up to four HDTV displays to the HDMI outputs on the matrix and up to four HDTV displays to the supplied ELR-POL receivers. Use a single CAT-5e cable to connect each of the receivers to the matrix. An external power supply is not required because power is delivered by the matrix over the CAT-5e cables. 3D content can be displayed when connecting a 3DTV and 3D source. Connect the included AC power cord to the matrix and plug it into an available electrical outlet. Turn on the matrix by pressing the power switch. Apply power to sources and to the displays. The Hi-Def sources can now be routed to any display by using the IR remote control, RS-232 port, IP (Telnet or Web GUI), or by using the front-panel push buttons.

OPERATION NOTES

READ THESE NOTES BEFORE INSTALLING OR OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

- EDID contains the A/V capabilities of a display device in regards to video resolutions and audio formats supported. This information is used by the source device to determine the format of the A/V signal on the outputs. The 8x8 Matrix for HDMI w/4 ELR-POL Outputs incorporates advanced EDID management to ensure compatibility with all sources and display devices. See pages 27 for more details.
- The GefenPRO 8x8 Matrix for HDMI w/4 ELR-POL Outputs can detect the presence of Deep Color (12-bit signal) automatically and will disable Deep Color EDID features across all other outputs if any connected device or display is not capable of processing Deep Color. This automatic behavior ensures compatibility among all output devices in a mixed-device environment. This feature cannot be disabled.

FEATURES

Supported HDMI Features

- Resolutions up to 1080p Full HD
- HDCP compliant
- 12-bit Deep Color
- x.v. Color
- LPCM 7.1 audio, Dolby® TrueHD, and DTS-HD Master Audio™
- 3DTV pass-through
- Lip-Sync pass-through

Features


- Routes any eight Hi-Def sources to any eight HD displays, independently
- ELR technology allows extension up to 330 feet (100 meters)
- POL feature provides power to each ELR receiver
- HDBaseT® technology
- Gefen FST speeds up the HDCP authentication process
- Fast and Slow FST Modes
- Advanced EDID Management for rapid integration of sources and displays
- Ability to save and recall presets
- Supports DVI sources and displays
- Field-upgradeable firmware via IP or RS-232
- Front Panel Switching
- IR Control of the matrix via front panel sensor or optional IR extender (EXT-RMT-EXTIRC)
- Serial (RS-232) and IP Control via Web Server and Telnet
- Rack mountable (2U tall, rack ears included)
- Internal power supply with detachable IEC AC cord
- Back panel master power switch

Package Includes

- (1) 8x8 Matrix for HDMI w/4 ELR-POL Outputs
- (4) HDMI cables (M-M)
- (4) Extender for HDMI ELR-POL (Receiver Units)
- (1) IR Remote Control
- (1) Set of Rack Ears (Attached)
- (1) AC Power Cord
- (1) Quick-Start Guide


MATRIX LAYOUT

Front

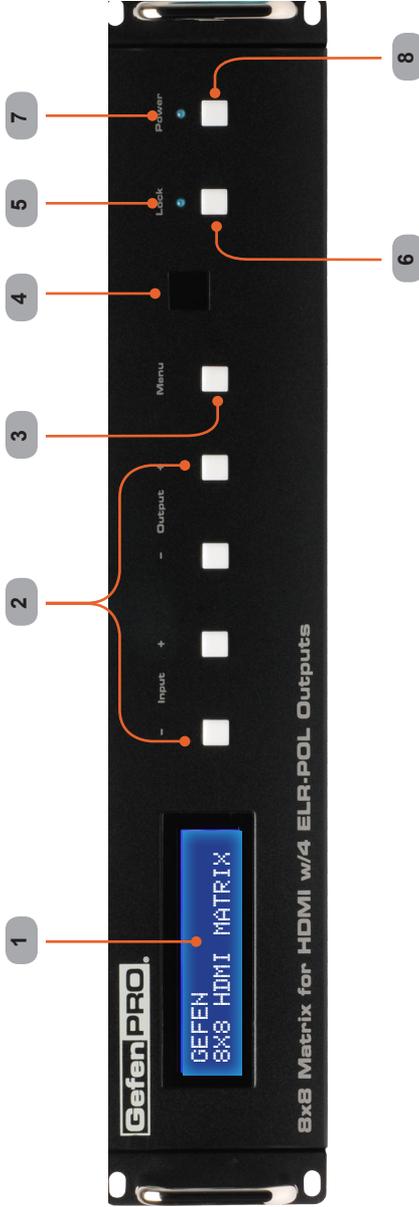

MATRIX LAYOUT

Back

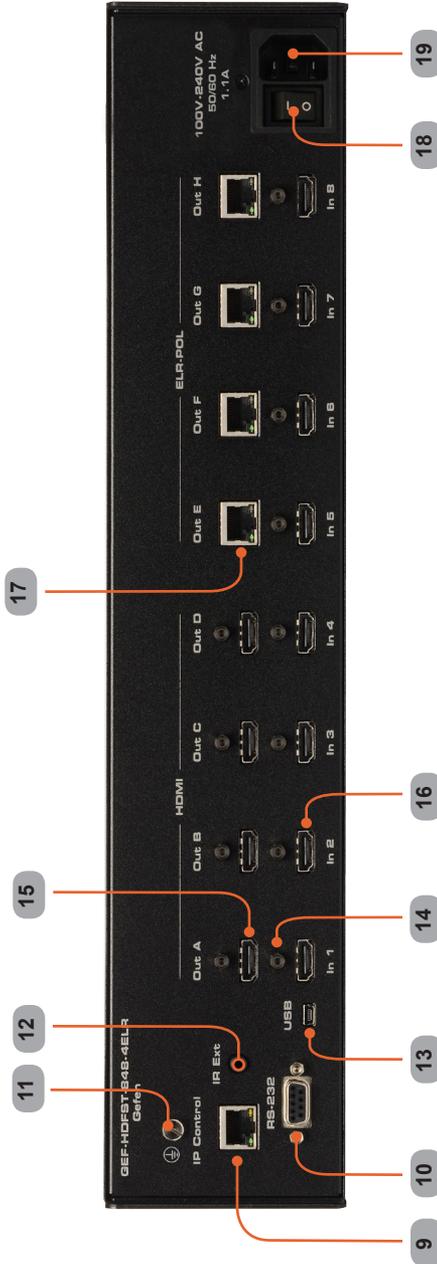

MATRIX DESCRIPTIONS

Front

1 LCD Display

This is a two-line, sixteen-character display that shows status information and is also used to manage display / source routing.

2 Navigation Buttons (Input / Output)

Used for routing and adjusting settings of the 8x8 Matrix for HDMI w/4 ELR-POL Outputs. See the information beginning on page 15 for details on using these buttons.

3 Menu

Press this button to display routing, switching mode, and IP address information.

4 IR Sensor

Receives signals from the IR Remote Control.

5 Lock Indicator

This LED glows bright blue when the front panel is locked.

6 Lock Button

Pressing this button temporarily locks the front panel controls.

7 Power Indicator

This LED indicator will glow bright blue when the matrix is powered on. When the matrix is in standby mode, this LED indicator will glow bright red. The power switch, on the back of the matrix, must be switched to the the ON position in order for this LED indicator to function.

8 Power Button

Press this button to power-on and power-off the matrix.

MATRIX DESCRIPTIONS

Back

9 IP Control

Connect an Ethernet cable to this port to control the 8x8 Matrix for HDMI w/4 ELR-POL Outputs using IP Control. See page 29 for more information on configuring the matrix for IP control.

10 RS-232

Connect an RS-232 cable from this DB-9 connector to the RS-232 control device. See page 28 for more information.

11 Grounding Screw

Used to keep electrical current away from circuitry

12 IR EXT

Connect an IR extender (Gefen part no. EXT-RMT-EXTIRC) to this jack

13 USB

Service port for manufacturer use only.

14 HDMI Locking Connector

Used to lock the HDMI cable in place.

15 HDMI Outputs (A - D)

Connect up to four HDTV displays to each of these ports using HDMI cables.

16 HDMI Inputs (1 - 8)

Connect a Hi-Def source to each of these ports using HDMI cables.

17 ELR-POL Outputs (E - H)

Connect a CAT-5e (or better) cable from each of these jacks to the ELR-POL In jacks on the ELR-POL Receiver units.

18 Power Switch

Turn the power ON or OFF using this switch.

19 110/220 AC Power Receptacle


Connect the included AC power cord to this receptacle and connect the plug to an available electrical outlet.

ELR-POL RECEIVER LAYOUT

Top



Front

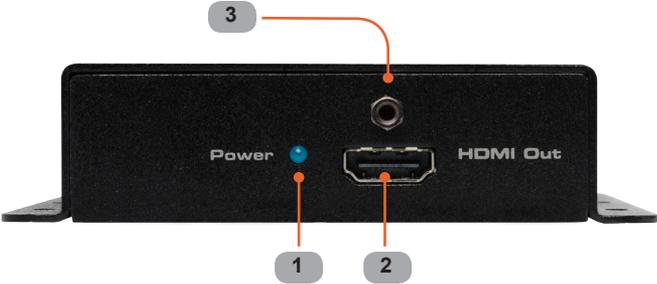

Back



ELR-POL RECEIVER DESCRIPTIONS

Top / Front / Back

1 Power Indicator

This LED indicator will glow bright blue when the matrix is powered and the ELR-POL Receiver unit is connected to the matrix using CAT-5e (or better) cable.

2 HDMI Out

Connect an HDTV display to the HDMI Out port using an HDMI cable.

3 HDMI Locking Connector


Used to lock the HDMI cable in place.

4 ELR-POL In

Connect a CAT-5e (or better) cable from this jack to one of the ELR-POL jacks on the 8x8 Matrix for HDMI w/4 ELR-POL Outputs.

IR REMOTE CONTROL

Layout and Description (RMT-848IR)

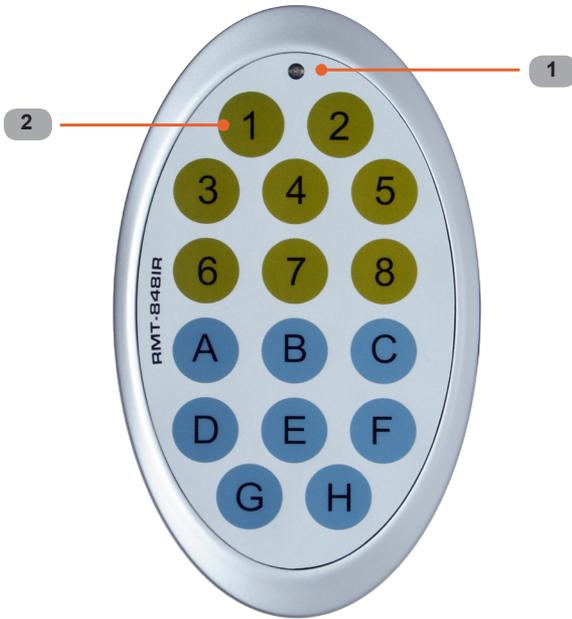

- 1 LED Button Press Indicator**
This LED will be activated momentarily each time a button is pressed.
- 2 Display and Source Selection Buttons**
These buttons are used to select which source is routed to a display. The Source and Display buttons are mapped as follows:




NOTE: An Activity Indicator that flashes quickly while holding down any one of the 16 buttons indicates a low battery. Replace the IR Remote Control battery as soon as possible.

IR REMOTE CONTROL

Installing the Battery

The Remote Control unit ships with two batteries (CR2032 lithium battery). One battery is required for operation and the other battery is a spare.

1. Remove the battery cover on the back of the IR Remote Control unit.
2. Insert the included battery into the open battery slot. The positive (+) side of the battery should be facing up.
3. Replace the battery cover.

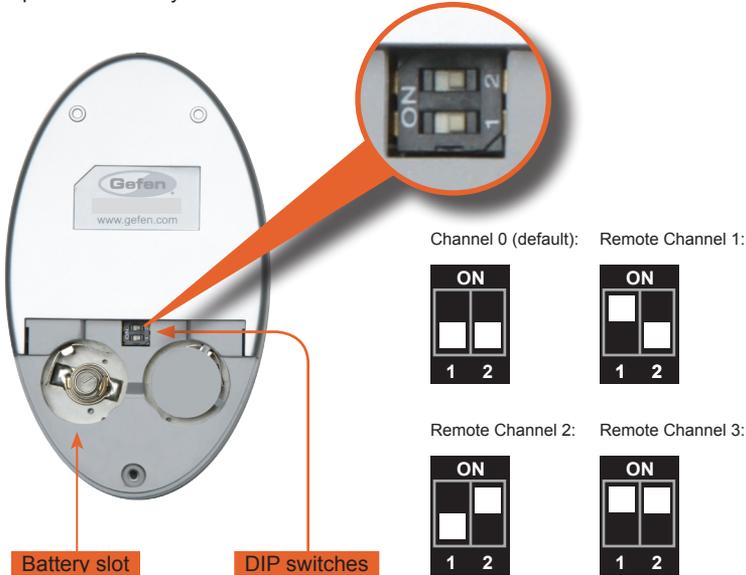

Setting the IR Channel

The IR channel on the IR Remote Control must match the IR channel used by the 8x8 Matrix for HDMI w/4 ELR-POL Outputs. For example, if both DIP switches on the IR Remote Control unit are set to IR channel 0 (both DIP switches down), then the 8x8 Matrix for HDMI w/4 ELR-POL Outputs must also be set to IR channel 0. See pages 23 and 81 for information on how to change the IR channel on the 8x8 Matrix for HDMI w/4 ELR-POL Outputs.



WARNING: Risk of explosion if battery is replaced by an incorrect type. Use only 3V lithium batteries CR-2032.

CONNECTING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

How to Connect the 8x8 Matrix for HDMI w/4 ELR-POL Outputs


1. Connect up to eight Hi-Def sources to the inputs on the 8x8 Matrix for HDMI w/4 ELR-POL Outputs using HDMI cables.
2. Using HDMI cables, connect up to four HDTV displays to the HDMI outputs on the matrix, and up to four HDTV displays to the supplied ELR-POL Receiver units.
3. Connect each ELR-POL Receiver unit to the 8x8 Matrix for HDMI w/4 ELR-POL Outputs using CAT-5e (or better) cables.



NOTE: When connected to the matrix, each ELR-POL Receiver unit is powered over the CAT-5e cable. No external power supplies are required for the ELR-POL Receiver units.

4. Connect the AC power cord to the matrix and connect the plug to an available electrical outlet.

Wiring Diagram for the 8x8 Matrix for HDMI w/4 ELR-POL Outputs

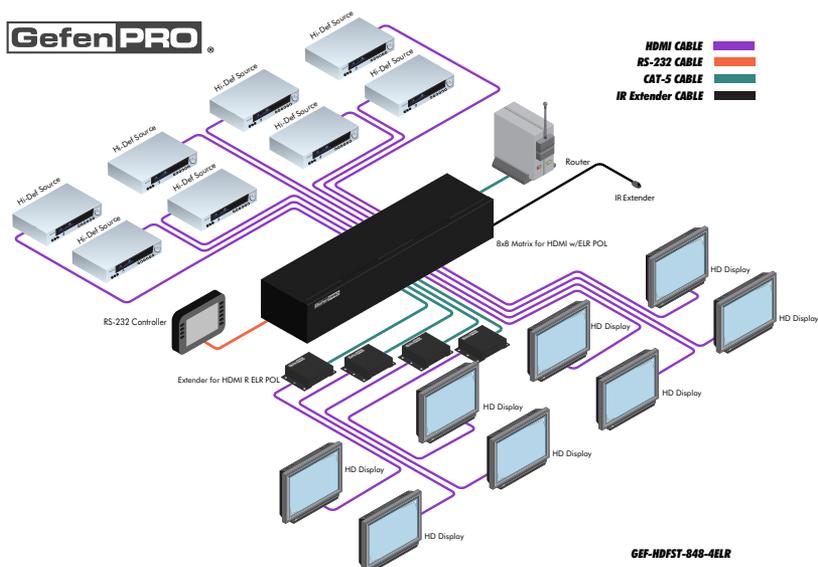

OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

Main Display

The **Main Display** of the 8x8 Matrix for HDMI w/4 ELR-POL Outputs is a 16 character 2 line display. This display shows the current routing status of the matrix and is also used to display additional system information. When the unit is powered on, the following screen is displayed:



```
GEFEN
8X8 HDMI MATRIX
```


After a few moments, the status screen is displayed. The status screen is shown below:



```
OUT: ABCDEFGH
IN: 33334681
```

Displaying Additional Information

Consecutively pressing the **Menu** button, on the front panel, will cycle through other screens such as FST mode and IP information:

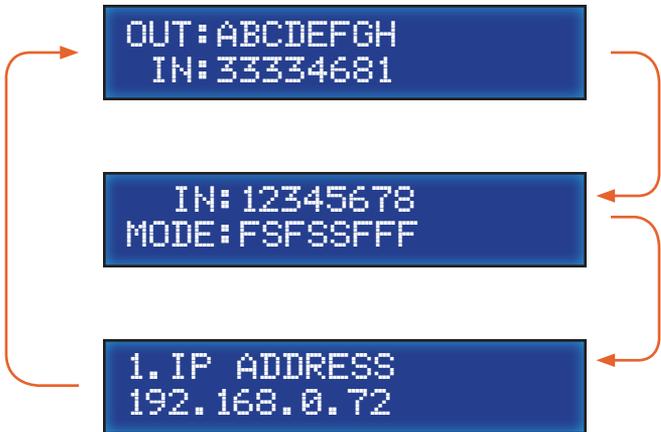


OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

Determining the Current Routing State

In the example below, the first row (OUT) represents each HDMI output on the matrix. The bottom row (IN) represents each HDMI input on the matrix. Together, these two rows display the current routing state.

Starting on the bottom row, we can see that Input 3 has been routed to Outputs A, B, C, and D. Continuing on, Input 4 is routed to Output E, Input 6 is routed to Output F, Input 8 is routed to Output G, and finally Input 1 is routed to Output H.

Note that each output (A - H) specified in the LCD display, corresponds to each of the HDMI inputs (1 - 8) on the matrix.

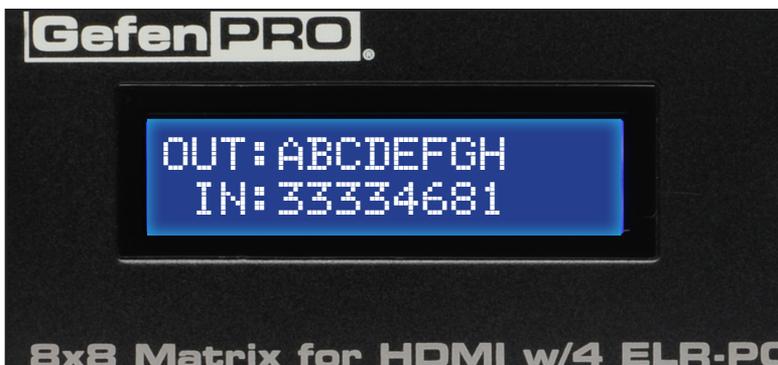

If all inputs are routed to their respective outputs, the front-panel display will appear as follows:



This is referred to as a "1-to-1" routing state. This is the factory (default) setting for the 8x8 Matrix for HDMI w/4 ELR-POL Outputs.

OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

Routing Sources

Selecting the Output

1. To select the output, press the **Out -** or **Out +** button once. The routing state for Output A will be displayed:



2. Press the **Out -** or **Out +** button to cycle through the routing state for each output. Consecutively pressing the **Out +** button will cycle through each output, from left to right.




OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

3. Consecutively pressing the **Out -** button will cycle through each output, from right to left.




Changing the Source

4. Once the desired output has been selected, press the **Input +** or **Input -** button. Consecutively pressing the **Input +** button will increment the input value by a factor of 1 (within a range of 1 - 8). For example, if Input 4 was originally routed to Output D, then pressing the **Input +** button will route Input 5 to Output D.

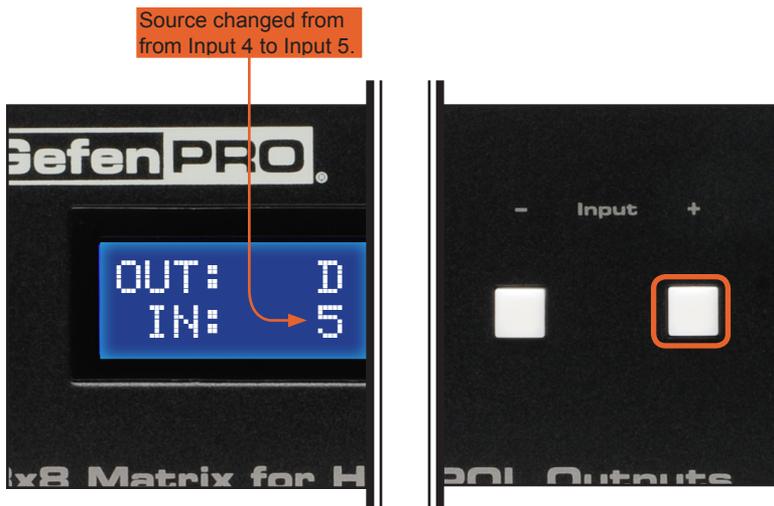

OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

- Consecutively pressing the **Input -** button will decrease the input value by a factor of 1 (within a range of 1 - 8). For example, if Input 3 was originally routed to Output D, pressing the **Input -** button will route Input 2 to Output D.

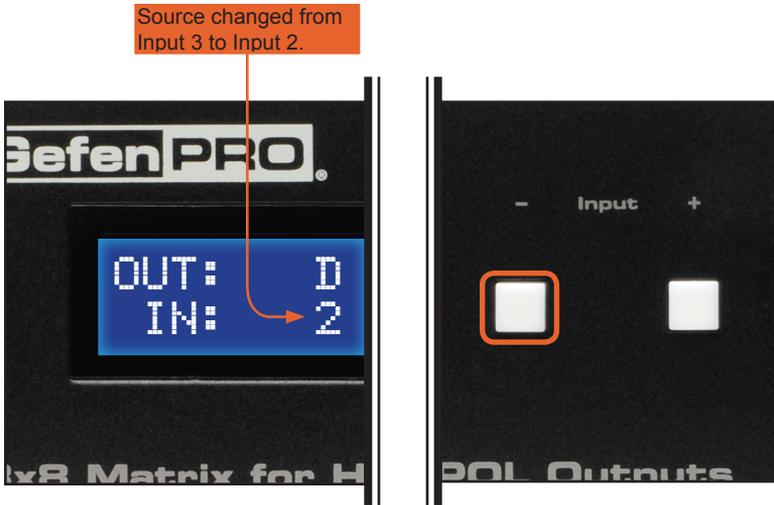

To change the routing status of another output, press the **Output +** or **Output -** buttons to navigate to the desired output. Use the **Input +** or **Input -** buttons to change the source.

- Press the **Menu** button to return to the Routing Screen.




NOTE: If the Menu button is not pressed after a routing change has been made, then the 8x8 Matrix for HDMI w/ 4 ELR-POL Outputs will automatically return to the Routing Screen after about 20 seconds.

OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

Locking / Unlocking the Front Panel


To prevent an accidental routing change or power-down (by pressing the **Power** button), the front-panel buttons on the 8x8 Matrix for HDMI w/4 ELR-POL Outputs can be locked. Locking the matrix also disables many RS-232 / IP commands.

1. Press the **Lock** button on the front-panel:

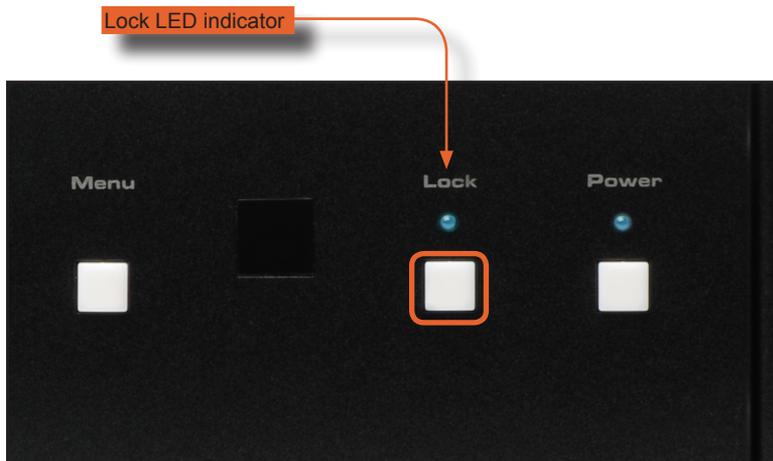

The Lock LED will glow bright blue to indicate that the front-panel buttons on the 8x8 Matrix for HDMI w/4 ELR-POL Outputs have been locked.

If any buttons (other than the **Lock** button) are pressed while the 8x8 Matrix for HDMI w/4 ELR-POL Outputs is Locked, the following message will be displayed:

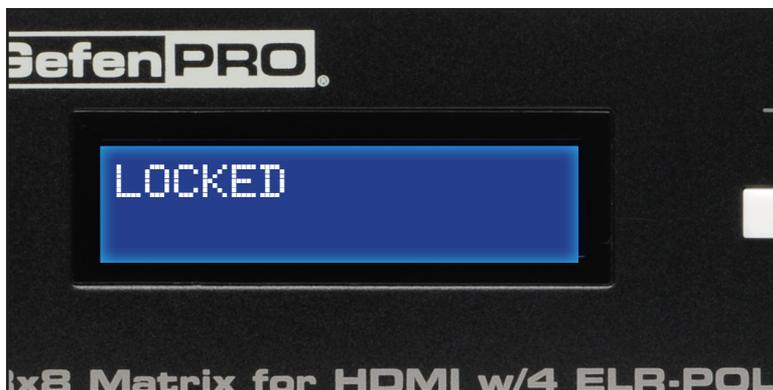

2. To unlock the 8x8 Matrix for HDMI w/4 ELR-POL Outputs, press the **Lock** button a second time.

OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS



Fast Switching Technology

Fast Switching Technology (FST) is a Gefen software implementation for HDMI products. FST was created to improve the lengthy HDMI authentication process, based on the HDMI and HDCP specifications.

FST provides quicker audio/video source switching and greatly improves the overall audio/video system behavior and performance when more than one HDTV display is used in the system setup.

FST allows connecting / disconnecting or turning ON / OFF of HDTV displays without having these activities affect other Hi-Def sources routed to any other HDTV display in the same system.

Fast Mode:

Setting the *8x8 Matrix for HDMI w/4 ELR-POL Outputs* to **Fast Mode** will improve performance when connecting / disconnecting Hi-Def sources, and powering ON / OFF HDTV displays.

NOTE: When switching from **Slow Mode** to **Fast Mode**, the HDTV displays connected to the Matrix will blink momentarily.

Slow Mode:

When set to **Slow Mode**, the Matrix will follow the standard authentication process, based on the HDMI and HDCP specifications. **Slow Mode** is recommended when the source does not support multiple devices.

OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

Determining the Current Switching Mode

Each HDMI input can be set to **Fast Mode** or **Slow Mode**. It is recommended that each HDMI input be set to **Fast Mode** for best performance.

1. Consecutively press the **Menu** button on the front panel until the switching modes screen is displayed.

The first row (IN) represents each HDMI input on the matrix. The bottom row (MODE) represents the current switching mode of each HDMI input.



Selecting the Input

2. To change the switching mode on an HDMI input, press the **Output -** (or **Output +**) button once. The switching mode for Input 1 will be displayed:




The letter **F** indicates that the HDMI input is using Fast Mode switching. If the HDMI input is set to Slow Mode switching, a letter **S** will be displayed under the input.

OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS


3. Press the **Output -** or **Output +** button again to cycle through the routing state for each output. Consecutively pressing the **Output +** button will cycle through each input, from left to right, starting with Input 1:



NOTE: In Routing mode, the **Output +** and **Output -** buttons cycle through each *output*. In Switching mode, these same buttons are used to cycle through each *input*.

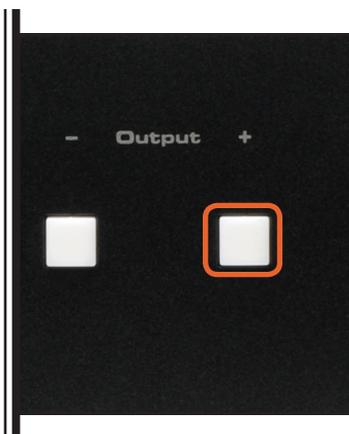


4. Consecutively pressing the **Output -** button will cycle through each output, from right to left:

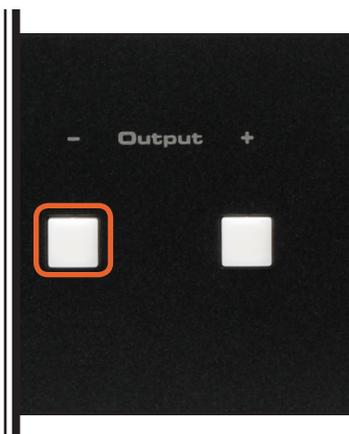

OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

Changing the Switching Mode

- Once the desired input has been selected, press the **Input +** or **Input -** button to toggle between Fast or Slow switching mode.

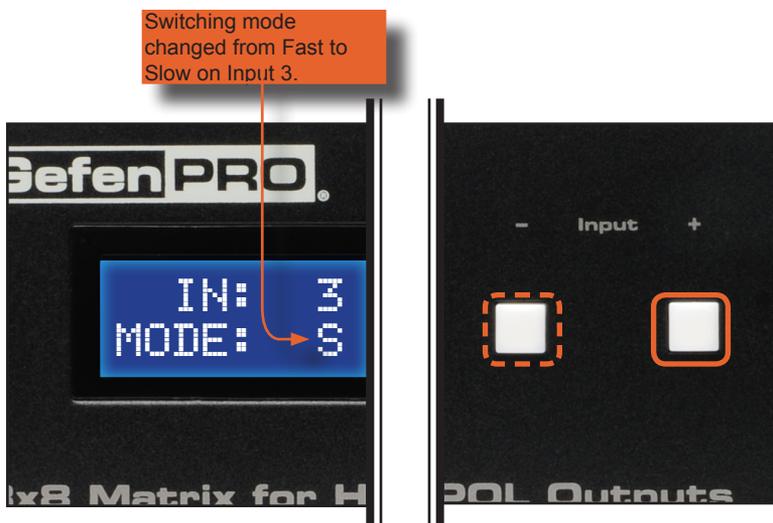

To change the switching mode of another input, press the **Output +** or **Output -** button to navigate to the desired input. Press the **Input +** or **Input -** button to toggle the switching mode between Fast (F) or Slow (S).

- Press the **Menu** button to return to the Switching mode Screen.




OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

Setting the IR Channel on the 8x8 Matrix for HDMI

In order for the 8x8 Matrix for HDMI w/4 ELR-POL Outputs to communicate with the included IR Remote Control, both the matrix and the IR Remote Control must be set to the same IR channel. Follow the procedure outlined below to set the IR channel on the 8x8 Matrix for HDMI w/4 ELR-POL Outputs.

1. From the Routing screen, simultaneously press the **Input -**, **Input +**, and the **Output -** buttons to display the IR address screen. The current IR address will be displayed along with the DIP switch settings for the IR remote control:

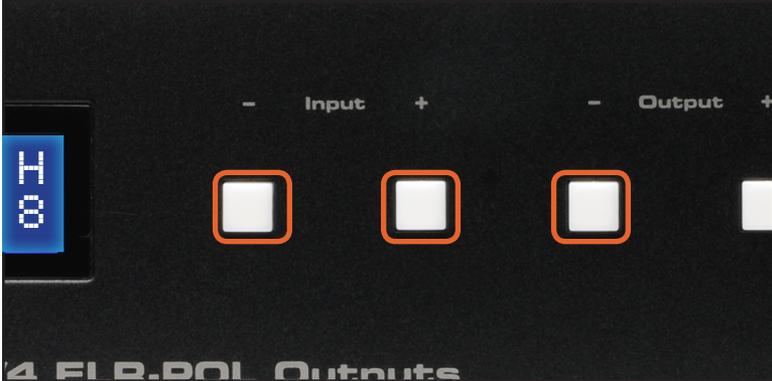

2. Use the **Input +** (or **Input -**) button to change the IR channel. Press the **Input -** button to decrease the IR channel value. Press the **Input +** button to increase the IR channel value.



OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

3. After setting the IR address, make sure that the DIP switches on the IR Remote Control are set according to the information in the LCD display. See page 11 for information on setting the IR channel for the IR Remote Control unit.



In this case, the 8x8 Matrix for HDMI w/4 ELR-POL Outputs is set to IR channel 1. Therefore, DIP switch 1 on the IR Remote Control must be set to the ON position and DIP switch 2 must be set to the OFF position.

4. Press the **Menu** button to return to the Routing screen.




OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

Routing Sources using the IR Remote Control

Buttons **1 - 8** on the IR remote control correspond to each HDMI input (Input 1 - 8) on the Matrix. Buttons **A - D** correspond to each HDMI output (Output A - D) and buttons **E-H** correspond to each ELR-POL output (Output E-H). To route a source to a display, press the desired output first, then press the input.

Routing Example: Route Input 4 to Output C

1. Select Output C by pressing button **C** on the IR Remote Control. The number 3 will appear in the upper right-hand corner of the LCD display:

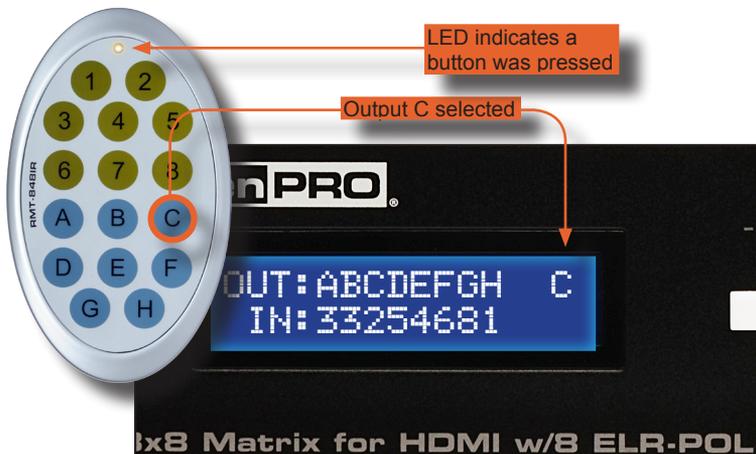

2. Select Input 4 by pressing button **4** on the IR Remote Control. The number 4 will appear in the lower right-hand corner of the LCD display:



OPERATING THE 8X8 MATRIX FOR HDMI W/4 ELR-POL OUTPUTS

3. After the input and output have been selected on the IR Remote Control, the numbers on the far right-hand of the LCD display will disappear and the new routing state will be displayed in the LCD display:



EDID MANAGEMENT

External EDID Management

The 8x8 Matrix for HDMI w/4 ELR-POL Outputs features EDID Management. Before the source can send video or audio signals, the source device reads the EDID (Extended Display Identification Data) from the output devices connected to the Splitter. The EDID contains information about what type of audio/video data that the source can send to each output device.

The 8x8 Matrix for HDMI w/4 ELR-POL Outputs routes multiple sources to multiple output devices. This involves reading EDID data from more than one device. Management of the EDID data is important to maintain compatibility between all devices.

The following EDID features are copied from Output A:

- Supported Resolutions
- 3D Support
- Audio Features

Display Connections:

- If a device is not connected to Output A, then no EDID changes are made, meaning that the previous EDID information will be used. This state will be in effect until a display is connected to Output A and the Matrix is power-cycled.
- EDID is built from Output A to the Input. The audio block will be copied from Output A. EDID-copying is performed only when the Matrix is reset or power-cycled.

IP Configuration

The 8x8 Matrix for HDMI w/4 ELR-POL Outputs supports IP-based control using Telnet, UDP, or the built-in Web-based GUI. To set up IP control, the network settings must be configured via RS-232. The default network settings for the matrix are as follows:

IP Address:	192.168.1.72
Subnet:	255.255.255.0
Gateway:	192.168.1.254
HTTP Port:	80
Telnet Port:	23

1. Connect an RS-232 cable from the PC to the matrix. Also make sure to connect an Ethernet cable between the LAN and the matrix.
2. Launch a terminal emulation program (e.g. HyperTerminal) and use the RS-232 settings listed on page 28.



NOTE: Depending upon the network, all related IP, Telnet, and UDP settings will need to be assigned. Consult your network administrator to obtain the proper settings.

3. Set the IP address for the matrix using the `#sipadd` command (see page 44 for details).
4. Set the subnet mask using the `#snetmask` command (see page 45 for details).
5. Set the gateway (router) IP address using the `#sgateway` command (see page 39 for details).
6. Set the Telnet listening port using the `#set_telnet_port` command (see page 36 for details).
7. Set the HTTP listening port using the `#set_http_port` command (see page 34 for details).
8. Power-cycle the matrix to reboot and complete all IP setting changes.
9. Type the IP address that was specified in step 3, in a web browser to access the Web GUI or use the same IP address to Telnet to the matrix.

UDP Configuration

1. Set the UDP remote IP address for the matrix using the `#set_udp_remote_ip` command (see page 48 for details).
2. Set the UDP listening port for the matrix using the `#set_udp_port` command (see page 47 for details).
3. Set the UDP remote port for the matrix using the `#set_udp_remote_port` command (see page 48 for details).

RS-232 / IP COMMANDS

IP / Telnet Configuration

Command	Description
<i>#display_telnet_welcome</i>	Set Telnet welcome message on login
<i>#ipconfig</i>	Displays all TCP/IP settings
<i>#resetip</i>	Resets IP configuration to factory settings
<i>#set_http_port</i>	Sets the Web server listening port
<i>#set_telnet_pass</i>	Prompts for password when using Telnet
<i>#set_telnet_port</i>	Sets the Telnet listening port
<i>#set_webui_ad_pass</i>	Sets the Web UI administrator password
<i>#set_webui_op_pass</i>	Sets the Web UI operator password
<i>#sgateway</i>	Sets the IP gateway address
<i>#show_gateway</i>	Displays the gateway address
<i>#show_http_port</i>	Displays the HTTP listening port
<i>#show_ip</i>	Displays the IP address of the Matrix
<i>#show_mac_addr</i>	Displays the MAC address of the Matrix
<i>#show_netmask</i>	Displays the netmask address
<i>#show_telnet_port</i>	Displays the Telnet listening port
<i>#show_telnet_username</i>	Displays the Telnet user name
<i>#show_ver_data</i>	Displays the hardware / software version
<i>#sipadd</i>	Sets the IP address of the matrix
<i>#snetmask</i>	Sets the IP network mask
<i>#use_telnet_pass</i>	Use password during Telnet sessions

#display_telnet_welcome Command

The #display_telnet_welcome command sets (enables/disables) the Telnet welcome message on login.

Syntax:

```
#display_telnet_welcome param1
```

Parameters:

param1 State [0 ... 1]

State	Meaning
0	Do not display welcome message
1	Display welcome message

Example:

```
#display_telnet_welcome 1
#Telnet Welcome Screen is Enable

#display_telnet_welcome 0
#Telnet Welcome Screen is Disable
```

#ipconfig Command

The #ipconfig command displays the current TCP/IP settings for the matrix.

Syntax:

```
#ipconfig
```

Parameters:

None

Example:

```
#ipconfig
```

```
----- TCP/IP settings -----
```

```
MAC add = 00:1C:91:01:50:07
```

```
IP add = 192.168.1.72
```

```
Net Mask = 255.255.255.0
```

```
Gateway = 192.168.2.1
```

```
Web Server Port = 80
```

```
Telnet Server Port = 23
```

```
Telnet password at login is set to ON
```

```
Telnet welcome at login is set to ON
```

#resetip Command

The #resetip command resets all TCP/IP settings to factory defaults.

Syntax:

```
#resetip
```

Parameters:

None

Notes:

The matrix must be rebooted after executing this command.

Example:

```
#resetip
IP Configuration Was Reset To Factory Defaults.
```

After rebooting the matrix, the IP settings will be cleared. Running the #ipconfig command will display the updated information:

```
#ipconfig
IP: 0.0.0.0
SUBNET: 0.0.0.0
GATEWAY: 0.0.0.0
```

#set_http_port Command

The #set_http_port command sets the Web server listening port. The default port setting is 80. Also see the #show_http_port on page 40.

Syntax:

```
#set_http_port param1
```

Parameters:

<i>param1</i>	Port	[0 ... 65535]
---------------	------	---------------

Notes:

The matrix must be rebooted after executing this command.

Example:

```
#set_http_port 70
```

```
HTTP Communication Port 80 Is Set. Please Reboot The Unit.
```

#set_telnet_pass Command

The #set_telnet_pass command sets the Telnet password. The maximum length of the password is 20 characters. The password is case-sensitive. The default Telnet password is Admin.

Syntax:

```
#set_telnet_pass param1
```

Parameters:

param1 Password

Notes:

The matrix must be rebooted after executing this command.

Example:

```
#set_telnet_pass OK_Corral  
TELNET Interface Password Is Set.
```

RS-232 / IP COMMANDS

#set_telnet_port Command

The #set_telnet_port command sets the Telnet listening port. The default port value is 23.

Syntax:

```
#set_telnet_port param1
```

Parameters:

<i>param1</i>	Port	[0 - 65535]
---------------	------	-------------

Notes:

The matrix must be rebooted after executing this command.

Example:

```
#set_telnet_port 20
```

Telnet Communication Port 23 Is Set. Please Reboot The Unit.

#set_webui_ad_pass Command

The #set_webui_pass command sets the Administrator password for the Web interface. The maximum length of the password is 8 characters. The default password is Admin.

Syntax:

```
#set_webui_ad_pass param1
```

Parameters:

param1 Password

Notes:

The matrix must be rebooted after executing this command.

Example:

```
#set_webui_ad_pass reindeer  
Web UI Administrator Password Is Set.
```

#set_webui_op_pass Command

The #set_webui_pass command sets the Operator password for the Web interface. The maximum length of the password is 8 characters. The default password is Admin.

Syntax:

```
#set_webui_op_pass param1
```

Parameters:

<i>param1</i>	Password
---------------	----------

Notes:

The matrix must be rebooted after executing this command.

Example:

```
#set_webui_op_pass reindeer  
Web UI Operator Password Is Set.
```


#show_gateway Command

The #show_gateway command shows the current gateway address.

Syntax:

```
#show_gateway
```

Parameters:

None

Example:

```
#show_gateway  
GATEWAY ADDRESS IS: 192.168.2.1
```

#show_http_port Command

The #show_http_port command shows the current HTTP listening port.

Syntax:

```
#show_http_port
```

Parameters:

None

Example:

```
#show_http_port  
HTTP COMMUNICATION PORT IS: 80
```

#show_ip Command

The #show_ip command shows the current IP address of the Matrix.

Syntax:

```
#show_ip
```

Parameters:

None

Example:

```
#show_ip  
IP ADDRESS IS: 192.168.1.72
```

#show_mac_addr Command

The #show_mac_addr command shows the MAC address of the Matrix.

Syntax:

```
#show_mac_addr
```

Parameters:

None

Example:

```
#show_mac_addr  
MAC ADDRESS IS: 00-12-0e-f1-7a-ea
```

#show_netmask Command

The #show_netmask shows the netmask address.

Syntax:

```
#show_netmask
```

Parameters:

None

Example:

```
#show_netmask  
NET MASK ADDRESS IS: 255.255.255.0
```

#show_telnet_port Command

The #show_telnet_port command shows the current Telnet listening port.

Syntax:

```
#show_telnet_port
```

Parameters:

None

Example:

```
#show_telnet_port  
TELNET COMMUNICATION PORT IS: 23
```

#show_telnet_username Command

The #show_telnet_username command returns the user name required for login.

Syntax:

```
#show_telnet_username
```

Parameters:

None

Example:

```
#show_telnet_username
User Name For TELNET Is : Admin
```

#show_ver_data Command

The #show_ver_data command displays the current hardware and firmware version.

Syntax:

```
#show_ver_data
```

Parameters:

None

Example:

```
#show_ver_data
SOFTWARE AND HARDWARE VERSION: v3.1A PCB-1707*B
```


#use_telnet_pass Command

The #use_telnet_pass command requires or disables Telnet login credentials. The default setting is disabled (param1 = 0).

Syntax:

```
#use_telnet_pass param1
```

Parameters:

param1 State [0 ... 1]

Value	Meaning
0	Disable password
1	Enable (force) password

Example:

```
#use_telnet_pass 1  
Telnet Interface Password Is Enable
```

```
#use_telnet_pass 0  
Telnet Interface Password Is Disable
```


#set_udp_remote_ip Command

The #set_udp_remote_ip command sets the remote UDP IP address. The default port value is 192.168.1.80.

Syntax:

```
#set_udp_remote_ip param1
```

Parameters:

param1 IP Address

Notes:

The matrix must be rebooted after executing this command.

Example:

```
#set_udp_remote_ip 192.168.1.20  
REMOTE UDP IP ADDRESS 192.168.1.20 IS SET.
```

#set_udp_remote_port Command

The #set_udp_remote_port command sets the remote UDP port. The remote port 50007.

Syntax:

```
#set_udp_remote_port param1
```

Parameters:

param1 Port

Notes:

The matrix must be rebooted after executing this command.

Syntax:

```
#set_udp_remote_port 4096  
REMOTE UDP COMMUNICATION PORT 4096 IS SET.
```

#show_udp_port Command

The #show_udp_port command displays the current UDP port.

Syntax:

```
#show_udp_port
```

Parameters:

None

Example:

```
#show_ver_data  
UDP COMMUNICATION PORT IS: 1024
```

#show_udp_remote_ip Command

The #show_udp_remote_ip command displays the current remote UDP IP address.

Syntax:

```
#show_udp_remote_ip
```

Parameters:

None

Example:

```
#show_udp_remote_ip  
REMOTE UDP IP ADDRESS IS: 192.168.5.50
```

#show_udp_remote_port Command

The #show_udp_remote_port command displays the current remote UDP port.

Syntax:

```
#show_udp_remote_port
```

Parameters:

None

Example:

```
#show_udp_remote_port
REMOTE UDP COMMUNICATION PORT IS: 4023
```

#use_udp_enable Command

The #use_udp_enable command enables / disables UDP. Default value is disabled.

Syntax:

```
#use_udp_enable param1
```

Parameters:

param1 State [0 ... 1]

Value	Meaning
0	Disable UDP
1	Enable UDP

Example:

```
#use_udp_enable 1
UDP ACCESS IS ENABLE
```

RS-232 / IP COMMANDS

Routing / Naming / Presets

Command	Description
<i>#lock_matrix</i>	Locks / unlocks the Matrix
<i>#recall_preset</i>	Recalls a routing / mask preset
<i>#save_preset</i>	Saves the current routing/masking state to a preset
<i>#set_bank_name</i>	Sets the name of the specified EDID bank
<i>#set_input_name</i>	Specifies a name for an input
<i>#set_output_name</i>	Specifies a name for an output
<i>#set_preset_name</i>	Sets the name of the specified routing preset
<i>#show_bank_name</i>	Displays the specified EDID bank name
<i>#show_input_name</i>	Displays the specified input name
<i>#show_output_name</i>	Displays the specified output name
<i>#show_preset_name</i>	Displays the specified routing preset
<i>#show_r</i>	Displays the current routing state of the specified output
<i>r</i>	Routes the specified inputs to the specified outputs
<i>s</i>	Routes all outputs are routed to the specified input

#lock_matrix Command

The #lock_matrix command locks / unlocks the Matrix. When the Matrix is locked, all functions are disabled including the front panel, RS-232, and Telnet.

Syntax:

```
#lock_matrix param1
```

Parameters:

param1

Value

[0 ... 1]

Value	Meaning
0	Unlock Matrix
1	Lock Matrix

Example:

```
#lock_matrix 1  
MATRIX IS LOCKED
```

```
#lock_matrix 0  
MATRIX IS UNLOCKED
```

#recall_preset Command

The #recall_preset command recalls a routing preset. Any masked outputs will also be recalled. The underscore character (“_”) must be included when typing the command name.

Syntax:

```
#recall_preset param1
```

Parameters:

<i>param1</i>	Preset	[1 ... 8]
---------------	--------	-----------

Example:

```
#recall_preset 1
RECALLED THE ROUTING STATE SAVES TO PRESET 1
```

#save_preset Command

The #save_preset command saves the current routing state to the specified preset. Any masked outputs will also be saved as part of the current routing state. The underscore character (“_”) must be included when typing the command name.

Syntax:

```
#save_preset param1
```

Parameters:

<i>param1</i>	Preset	[1 ... 8]
---------------	--------	-----------

Example:

```
#save_preset 1
CURRENT ROUTING STATE IS SAVED TO PRESET/INPUT 1
```

#set_bank_name Command

The #set_bank_name command names the specified bank. The bank name can be up to 8 characters in length. Special characters and spaces are not permitted. If needed, use the underscore character (“_”) to separate characters.

Syntax:

```
#set_bank_name param1
```

Parameters:

<i>param1</i>	Bank	[1 ... 8]
<i>param2</i>	Name	

Example:

```
#set_bank_name 2 Dell_30
```

#set_input_name Command

The #set_input_name command provides a name to the selected input. For example, “Input 1” could be renamed as “DVD_Player”. The maximum string length for *param2* is 15 characters. Special characters and spaces are not permitted. If needed, use the underscore character (“_”) to separate characters.

Syntax:

```
#set_input_name param1 param2
```

Parameters:

<i>param1</i>	Input	[1 ... 8]
<i>param2</i>	Name	

Example:

```
#set_input_name 5 Blu_ray  
Blu_ray NAME IS ASSIGNED TO INPUT 5
```

#set_output_name Command

The #set_output_name command provides a name to the selected output. For example, "Output 1" could be renamed as "HDDisplay". The maximum string length for *param2* is 8 characters. Special characters and spaces are not permitted. If needed, use the underscore character ("_") to separate characters.

Syntax:

```
#set_output_name param1 param2
```

Parameters:

<i>param1</i>	Output	[A ... H]
<i>param2</i>	Name	

Example:

```
#set_output_name C Sony_XBR7  
Sony_XBR7 NAME IS ASSIGNED TO OUTPUT C
```

#set_preset_name Command

The #set_preset_name command names the specified preset. The preset name can be up to 8 characters in length. Special characters and spaces are not permitted. If needed, use the underscore character ("_") to separate characters.

Syntax:

```
#set_preset_name param1 param2
```

Parameters:

<i>param1</i>	Preset	[1 ... 8]
<i>param2</i>	Name	

Example:

```
#set_preset_name 3 B-rayAmp  
B-rayAmp NAME IS ASSIGNED TO PRESET 3
```

#show_bank_name Command

The #show_bank_name command displays the name of the specified bank.

Syntax:

```
#show_bank_name param1
```

Parameters:

<i>param1</i>	Bank	[1 ... 8]
---------------	------	-----------

Example:

```
#show_bank_name 2  
THE NAME FOR BANK 2 IS: Dell_30
```

#show_input_name Command

The #show_input_name command displays the name for the specified input.

Syntax:

```
#show_input_name param1
```

Parameters:

<i>param1</i>	Input	[1 ... 8]
---------------	-------	-----------

Example:

```
#show_input_name 5  
THE NAME FOR INPUT 5 IS: Blu_ray
```

#show_output_name Command

The #show_output_name command shows the name provided to the specified input using the #set_output_name command.

Syntax:

```
#show_output_name param1
```

Parameters:

<i>param1</i>	Output	[A ... H]
---------------	--------	-----------

Example:

```
#show_output_name C  
THE NAME FOR OUTPUT C IS: Sony_XBR
```

#show_preset_name Command

The #show_preset_name command displays the name of the specified routing preset.

Syntax:

```
#show_preset_name param1
```

Parameters:

<i>param1</i>	Preset	[A ... H]
---------------	--------	-----------

Example:

```
#show_preset_name 3  
THE NAME FOR PRESET 3 IS: B-rayAmp
```

#show_input_name Command

The #show_input_name command shows the name provided to the specified input using the #set_input_name command. The underscore character (“_”) must be included when typing the command name.

Syntax:

```
#show_input_name param1
```

Parameters:

<i>param1</i>	Input	[1 ... 8]
---------------	-------	-----------

Example:

```
#show_input_name 5  
THE NAME FOR INPUT 5 IS: Blu_ray
```

#show_output_name Command

The #show_output_name command shows the name provided to the specified input using the #set_output_name command.

Syntax:

```
#show_output_name param1
```

Parameters:

<i>param1</i>	Output	[A ... H]
---------------	--------	-----------

Example:

```
#show_output_name C  
THE NAME FOR OUTPUT C IS: Sony_XBR
```

#show_r Command

The #show_r command shows the current routing status of the specified output. The name assigned to the output and input will be included in parentheses.

Syntax:

```
#show_r param1
```

Parameters:

<i>param1</i>	Output	[A ... H]
---------------	--------	-----------

Example:

```
#show_r c  
OUTPUT C (Sony_XBR) IS ROUTED TO INPUT 4 (INPUT4)
```

r Command

The `r` command routes the specified input to the specified outputs. If `param2` is set to 0, then the specified input is routed to all outputs. Unlike other commands, do not precede the `r` command with the “#” symbol.

Syntax:

```
r param1 param2[...param9]
```

Parameters:

<code>param1</code>	Input	[1 ... 8]
<code>param2</code>	Outputs	[A ... H]

Examples:

```
r 7 A C D F G H
```

INPUT 7 IS SET TO OUTPUTS A, C, D, F, G, H

```
r 2 0
```

INPUT 2 IS SET TO ALL OUTPUTS.

s Command

The s command routes the specified input to all outputs. Unlike other commands, do not precede the r command with the “#” symbol.

Syntax:

```
s param1
```

Parameters:

<i>param1</i>	Input	[1 ... 8]
---------------	-------	-----------

Examples:

```
s 2
```

```
INPUT 2 IS SET TO ALL OUTPUTS.
```


#show_fw Command

The #show_fw command displays the current firmware version of the Matrix.

Syntax:

```
#show_fw
```

Parameters:

None

Example:

```
#show_fw
```

```
FIRMWARE VERSION = GEF-HDFST-848-4ELR v3.1A
```

#show_hpd Command

The #show_hpd command displays the HPD (Hot-Plug Detect) status of the specified output. The name assigned to the output will be included in parentheses.

Syntax:

```
#show_hpd param1
```

Parameters:

<i>param1</i>	Output	[A ... H]
---------------	--------	-----------

Examples:

```
#show_hpd C
```

```
HPD OF OUTPUT C(Sony_XBR) IS HIGH
```

```
#show_hpd A
```

```
HPD OF OUTPUT A(OUTPUT1) IS LOW
```

#show_rsense Command

The #show_rsense command displays Rsense status of the specified output.

Syntax:

```
#show_rsense param1
```

Parameters:

<i>param1</i>	Output	[A ... H]
---------------	--------	-----------

Notes:

If the output has been renamed using the #set_output_name command, then the name assigned to the output will be included in parentheses.

Examples:

```
#show_rsense A
RSENSE OF OUTPUT A(OUTPUT1) IS LOW
```

```
#show_rsense C
RSENSE OF OUTPUT C(Sony_XBR) IS HIGH
```

m Command

The m command displays the current matrix routing status in table format. Unlike other commands, do not precede the m command with the “#” symbol.

Syntax:

```
m
```

Parameters:

None

Example:

```
m
```

```
Out: A B C D E F G H
```

```
In: 1 2 1 2 2 2 2 2
```

```
ALL OUTPUTS ARE UNMASKED
```

```
MATRIX IS UNLOCKED
```

n Command

The n command displays the current input-output routing state for the specified output. Unlike other commands, do not precede the n command with the “#” symbol.

Syntax:

```
n param1
```

Parameters:

<i>param1</i>	Output	[A ... H]
---------------	--------	-----------

Notes:

If *param1* = 0, then the routing status for all outputs will be displayed.

Examples:

```
n A
```

```
A3
```

```
n 0
```

```
A1B2C1D2E2F2G2H2
```


#fst_slow Command

The #fst_slow command sets the specified inputs to Slow switching mode.

Syntax:

```
#fst_slow param1
```

Parameters:

<i>param1</i>	Input	[1 ... 4]
---------------	-------	-----------

Notes:

If *param1* = 0, then all inputs will be set to Slow switching mode.

Example:

```
#fst_slow 1  
INPUT 1 IS SET TO FST SLOW MODE
```

#show_fst Command

The #show_fst command sets the specified inputs to Slow switching mode.

Syntax:

```
#show_fst param1
```

Parameters:

<i>param1</i>	Input	[1 ... 4]
---------------	-------	-----------

Notes:

If *param1* = 0, then the switching mode status for all inputs will be displayed.

Example:

```
#show_fst 1  
INPUT 1(INPUT1) IS IN FAST SWITCHING MODE
```

RS-232 / IP COMMANDS

Masking

Command	Description
<i>#echo</i>	Enables / disables RS-232 feedback
<i>#fadefault</i>	Resets the matrix to factory defaults
<i>#hdcp</i>	Disables HDCP on the specified input
<i>#hpd_pulse</i>	Cycles the HPD line on the specified input
<i>#lock_edid</i>	Locks the local EDID when powering the matrix
<i>#mask</i>	Masks the specified outputs
<i>#power</i>	Powers the matrix on or off
<i>#reboot</i>	Reboots the matrix
<i>#set_edid</i>	Copies EDID data between inputs, outputs, and banks
<i>#set_ir</i>	Sets the IR channel of the matrix
<i>#show_hdcp</i>	Displays the HDCP status on the specified input
<i>#show_ir</i>	Displays the current IR channel of the matrix
<i>#show_mask</i>	Displays the output masking status
<i>#show_out_colordpt</i>	Shows the highest color depth supported by the display based on the EDID
<i>#show_out_res</i>	Shows the highest resolution supported by the display based on the EDID
<i>#unmask</i>	Unmasks the selected outputs

#echo Command

The #echo command enables / disables serial port (terminal) echo.

Syntax:

```
#echo
```

Parameters:

param1

Value

[0 - 1]

Value	Meaning
0	Disable feedback
1	Enable feedback

Examples:

```
#echo 1
```

```
LOCAL ECHO IS ON
```

```
#echo 0
```

```
LOCAL ECHO IS OFF
```

#fadefault Command

The #fadefault command disables the EDID lock state, sets the default routing state (1-1, 2-2, 3-3, etc.), resets the input and output names to the default names (e.g. Output 1, Input 1), and resets the IP configuration to the default settings.

Syntax:

```
#fadefault
```

Parameters:

None

Syntax:

```
#fadefault
```

```
MATRIX WAS RESET TO FACTORY DEFAULTS
LOCAL ECHO IS ON
ALL OUTPUTS ARE UNMASKED
ALL INPUTS ARE SET TO FST FAST MODE
HTTP Communication Port 80 Is Set.
Telnet Communication Port 23 Is Set.
UDP Echo Server Communication Port 23 Is Set.
Remote UDP IP Address 192.168.5.50 Is Set.
Remote UDP Communication Port 4023 Is Set.
UDP Access is Enable
Telnet Interace Password Is Disable
TELNET User Name Admin Is Set.
TELNET Interface Password Is Set.
Telnet Welcome Screen Is Enable
Web UI Operator Password Is Set
Web UI Administrator Password Is Set
ALL INPUTS HDCP ENABLE.
INPUT NAME INIT....
OUTPUT NAME INIT....
CURRENT ROUTING STATE IS SAVED TO PRESET 1
CURRENT ROUTING STATE IS SAVED TO PRESET 2
CURRENT ROUTING STATE IS SAVED TO PRESET 3
CURRENT ROUTING STATE IS SAVED TO PRESET 4
CURRENT ROUTING STATE IS SAVED TO PRESET 5
CURRENT ROUTING STATE IS SAVED TO PRESET 6
CURRENT ROUTING STATE IS SAVED TO PRESET 7
CURRENT ROUTING STATE IS SAVED TO PRESET 8

BANK NAME INIT....
PRESET NAME INIT....

MATRIX WILL REBOOT SHORTLY *REBOOT UNIT IN 2 SECONDS
```

#hdcv Command

The #hdcv command disables HDCP detection on the selected input.



NOTE: Some computers will enable HDCP if an HDCP-compliant display is detected. Set *param2* = 1 to force the computer to ignore detection of an HDCP-compliant display. Setting *param2* = 0 does **not** decrypt HDCP content.

Syntax:

```
#hdcv param1 param2
```

Parameters:

<i>param1</i>	Input	[1 ... 8]
<i>param2</i>	Value	[0 ... 1]

Value	Description
0	Disable
1	Enable

Examples:

```
#hdcv 2 0  
INPUT 2 HDCP IS DISABLE
```

```
#hdcv 0 1  
ALL INPUTS HDCP ARE ENABLE
```

#hpd_pulse Command

The #hpd_pulse command cycles the HPD line on the specified input. Issuing this command is identical to physically disconnecting and reconnecting the cable between the source and the matrix.

Syntax:

```
#hpd_pulse param1
```

Parameters:

<i>param1</i>	Input	[1 ... 8]
---------------	-------	-----------

Notes:

Set *param1* = 0 to cycle the HPD line on all inputs.

Examples:

```
#hpd_pulse 1  
HPD PULSE HAS BEEN SENT TO INPUT 1
```

```
#hpd_pulse 0  
HPD PULSE HAS BEEN SENT TO ALL INPUTS
```

#lock_edid Command

The #lock_edid command secures the Local EDID by disabling the automatic loading of the downstream EDID after the matrix is powered.

Syntax:

```
#lock_edid param1
```

Parameters:

param1

Value

[0 ... 1]

Value	Description
0	Disable
1	Enable

Examples:

```
#lock_edid 0
```

Disable Lock EDID mode

#mask Command

The #mask command masks the specified outputs. If *param1* is set to 0, then all outputs are masked.

Syntax:

```
#mask param1[...param9]
```

Parameters:

<i>param1</i>	Output	[A ... H]
---------------	--------	-----------

Examples:

```
#mask c f  
OUTPUTS C, F ARE MASKED
```

```
#mask 0  
ALL OUTPUTS ARE MASKED
```

#power Command

The #power command toggles the power state on the matrix.

Syntax:

```
#power param1
```

Parameters:

param1

State

[0 ... 1]

Value	Meaning
0	Power matrix OFF
1	Power matrix ON

Example:

```
#power 0  
MATRIX IS OFF
```

```
#power 1  
MATRIX IS ON
```

#reboot Command

The #reboot command reboots the matrix.

Syntax:

```
#reboot
```

Parameters:

None

Example:

```
#reboot
```

```
MATRIX WILL REBOOT SHORTLY *REBOOT UNIT IN 2 SECONDS  
GEF-HDFST-848-4ELR v3.1A  
A1B2C3D4E5F6G7H8
```

RS-232 / IP COMMANDS

#set_edid Command

The #set_edid command sets the specified EDID type to an input or bank.

Syntax:

```
#set_edid param1 param2 param3 param4
```

Parameters:

param1 Source type [STRING]

String	Description
default	Uses default EDID
dynamic	Uses Dynamic EDID
bank	Uses EDID bank
output	Uses EDID on Output (sink)

param2 Source number [0 ... 8]

Value	Description
0	Default EDID
1 ... 8	EDID Bank
1 ... 8	Output

param3 Target type [STRING]

String	Description
input	Specifies an input
bank	Specifies an EDID bank

param2 Target number [1 ... 8, 1 ... 8]

Value	Description
1 ... 8	Input
1 ... 8	EDID Bank

Notes:

If *param1* = default or *param1* = dynamic, set *param2* = 0.

Using Dynamic EDID

When *param1* = dynamic, the specified input will be set to *Dynamic EDID*. This can be observed by accessing the Manage EDID tab, in the Web interface (see page 100). When an input is set to *Dynamic EDID*, the input will use the EDID of the last selected output during the routing process. The order in which outputs are routed are important when using *Dynamic EDID*. See the example below.

Examples:

Using Dynamic EDID:

```
#set_edid dynamic 0 input 4
COPY DYNAMIC EDID TO INPUT4.
```

In the example above, Input 4 is set to *Dynamic EDID*. If the following routing command is issued, then the EDID from Output 3 will be used (not Output 2) by Input 1.

```
r 4 2 3
INPUT 4 IS SET TO OUTPUTS 2, 3
```

However, if we wanted to use the EDID from Output 2, we would write the command as:

```
r 4 3 2
INPUT 4 IS SET TO OUTPUTS 3, 2
```

Since Output 2 was the last output that was specified, this will be the EDID that Input 4 will use.

This second example does not use Dynamic EDID but uses the EDID from the specified downstream sink (display, etc):

```
#set_edid output 1 input 3
COPY OUTPUT1 EDID TO INPUT3.
```

#set_ir Command

The #set_ir set the IR channel for the matrix. The associated DIP switch settings for the IR remote control unit are returned. See page 11 for details on setting the IR channel for the IR remote control.

Syntax:

```
#set_ir param1
```

Parameters:

<i>param1</i>	Channel	[0 - 3]
---------------	---------	---------

Example:

```
#set_ir 2
```

```
IR CHANNEL IS SET TO CHANNEL 2
```

#show_hdcp Command

The #show_hdcp command displays the HDCP status on the specified input

Syntax:

```
#show_hdcp param1
```

Parameters:

<i>param1</i>	Input	[1 ... 8]
---------------	-------	-----------

Notes:

Set *param1* = 0 to displays the HDCP status of all inputs.

Examples:

```
#show_hdcp 3  
INPUT 3 HDCP IS ENABLED
```

```
#show_hdcp 0  
INPUT 1, 3, 4 HDCP ARE ENABLED
```

#show_ir Command

The #show_ir displays the current IR channel for the matrix.

Syntax:

```
#show_ir
```

Parameters:

None

Example:

```
#show_ir  
CURRENT IR CHANNEL IS: 2
```

#show_mask Command

The #show_mask command shows the mask status for the specified output.

Syntax:

```
#show_mask param1
```

Parameters:

<i>param1</i>	Output	[A ... H]
---------------	--------	-----------

Example:

```
#show_mask d  
OUTPUT IS UNMASKED  
  
#show_mask c  
OUTPUT C (Sony_XBR) IS MASKED
```

#show_out_colordpt Command

The #show_out_colordpt command displays the highest color depth supported by the specified display based on the EDID.

Syntax:

```
#show_out_colordpt param1
```

Parameters:

<i>param1</i>	Output	[A ... H]
---------------	--------	-----------

Example:

```
#show_out_colordpt a  
12 BITS HDMI
```

If no display (sink) signal is detected, then the #show_out_colordpt will return the following:

```
#show_out_colordpt a  
NO SIGNAL
```

#show_out_res Command

The #show_out_res command displays the highest resolution supported by the specified display based on the EDID.

Syntax:

```
#show_out_res param1
```

Parameters:

<i>param1</i>	Output	[A ... H]
---------------	--------	-----------

Example:

```
#show_out_res c  
1080P 60HZ HDMI
```

If no display (sink) signal is detected, then the #show_out_colordpt will return the following:

```
#show_out_res c  
NO SIGNAL
```

#unmask Command

The #unmask command unmask the specified outputs. If *param1* is set to 0, then all outputs are unmasked.

Syntax:

```
#unmask param1[...param9]
```

Parameters:

<i>param1</i>	Output	[A ... H]
---------------	--------	-----------

Examples:


```
#unmask d  
OUTPUT F IS UNMASKED
```

```
#unmask 0  
ALL OUTPUTS ARE UNMASKED
```

WEB INTERFACE

Using the Built-in Web server

Access the built-in Web server by entering the IP address of the matrix that was specified in step 3 on page 29. Once connected to the matrix, the login screen will be displayed.

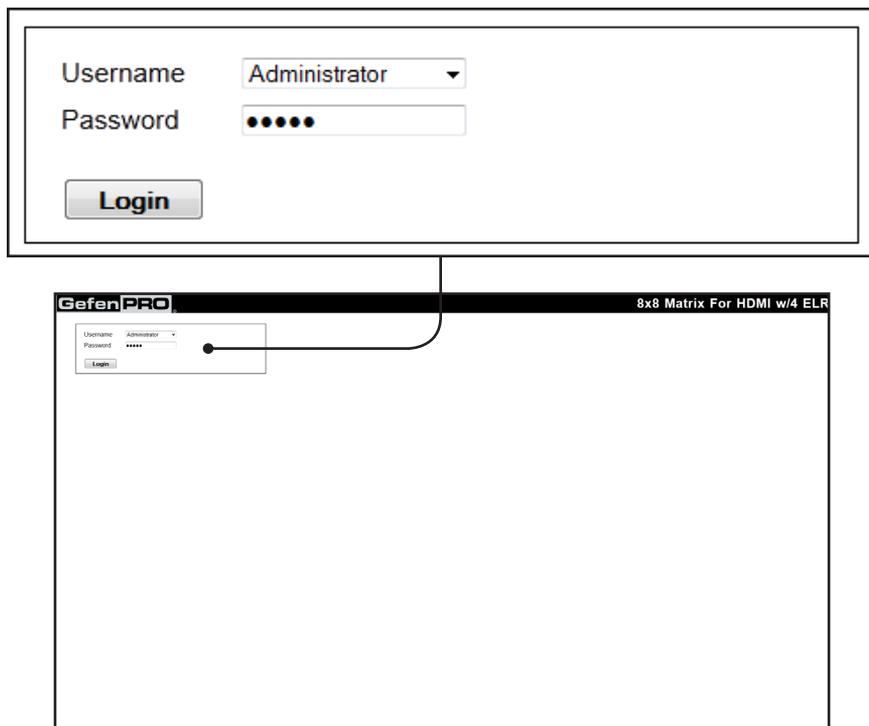

Username

Select the username from the drop-down list.

Options:

Operator, Administrator

Administrator login provides unrestricted access to all features and settings. Operator login limits access to matrix routing, display information, and routing preset features.

Password

Enter the password for the associated username. The password can be set using the `#set_webui_ad_pass` or `#set_webui_op_pass` commands. See page 37 and 38 for details on these commands. The factory-default password for both Operator and Administrator login is `Admin`. See page 106 for instructions on changing the password using the Web GUI.

WEB INTERFACE

The Web GUI is divided into four main pages: **Main**, **I/O Setup**, **Manage EDID**, and **Configuration**. Each main page is represented by a tab at the top-most portion of the screen. The **Main**, **I/O Setup**, and **Manage EDID** pages have their own set of sub-tabs. Click on the desired tab / sub-tab to open the desired page.




NOTE: In order to view all four tabs at the top of the screen, the user must be logged in as “Administrator”. If logged-in as “Operator”, only the **Main** tab will be visible.

Main >> Routing

Status
Displays the current routing status of the matrix.

Status	
Output	Input #
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

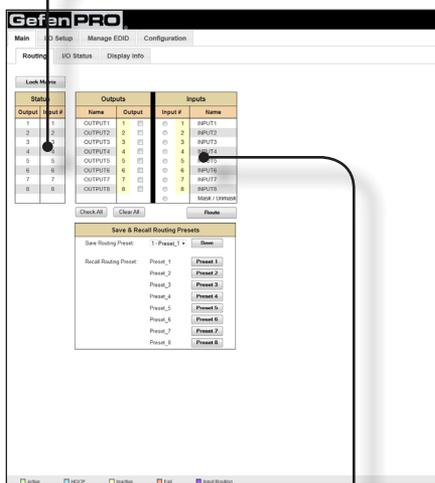

Inputs		
Input #		Name
<input type="radio"/>	1	INPUT1
<input type="radio"/>	2	INPUT2
<input type="radio"/>	3	INPUT3
<input type="radio"/>	4	INPUT4
<input type="radio"/>	5	INPUT5
<input type="radio"/>	6	INPUT6
<input type="radio"/>	7	INPUT7
<input type="radio"/>	8	INPUT8
<input type="radio"/>		Mask / Unmask

Input

Click the radio button next to the desired input to be routed. Only one input can be selected at a time.

Name

Displays the current name of the input. The name of each input can be changed. See page 94 for more information.

Mask / Unmask

Toggles the masking state of the selected output.

WEB INTERFACE

Lock Matrix

Locks / unlocks the matrix. When the matrix is locked, no modifications can be made using the Web GUI. When the matrix is locked, the button text will read "Unlock Matrix" and a red bar will appear across the top portion of the screen with the text "Matrix is LOCKED". Click the "Unlock Matrix" button to unlock the matrix. See the illustration at the bottom of the page.

Lock Matrix

8x8 Matrix For HDMI w/4 ELR

Menu | Setup | Manage EDD | Configuration | Log Out

Routing | I/O Status | Display Info

Lock Matrix

Status		Outputs		Inputs		
Output	Input #	Name	Output	Input #	Name	
1	1	OUTPUT1	1	0	1	INPUT1
2	2	OUTPUT2	2	0	2	INPUT2
3	3	OUTPUT3	3	0	3	INPUT3
4	4	OUTPUT4	4	0	4	INPUT4
5	5	OUTPUT5	5	0	5	INPUT5
6	6	OUTPUT6	6	0	6	INPUT6
7	7	OUTPUT7	7	0	7	INPUT7
8	8	OUTPUT8	8	0	8	INPUT8

Save & Recall Routing Presets

Save Routing Preset: 1 - Preset_1

Recall Routing Preset: Preset_1, Preset_2, Preset_3, Preset_4, Preset_5, Preset_6, Preset_7, Preset_8

Legend

Provides color-coded information on the status of each Input and Output.

Active
 HDCP
 Inactive
 Fail
 Input Routing

8x8 Matrix For HDMI w/4 ELR

Menu | I/O Status | Manage EDD | Configuration | Log Out

Routing | I/O Status | Display Info

Matrix is LOCKED.

Unlock Matrix

Unlock Matrix

Status		Outputs		Inputs		
Output	Input #	Name	Output	Input #	Name	
1	1	OUTPUT1	1	0	1	INPUT1
2	2	OUTPUT2	2	0	2	INPUT2
3	3	OUTPUT3	3	0	3	INPUT3
4	4	OUTPUT4	4	0	4	INPUT4
5	5	OUTPUT5	5	0	5	INPUT5
6	6	OUTPUT6	6	0	6	INPUT6
7	7	OUTPUT7	7	0	7	INPUT7
8	8	OUTPUT8	8	0	8	INPUT8

Save & Recall Routing Presets

Save Routing Preset: 1 - Preset_1

Recall Routing Preset: Preset_1, Preset_2, Preset_3, Preset_4, Preset_5, Preset_6, Preset_7, Preset_8

Name

Displays the current name of each output. The name of each input can be changed. Refer to the #set_input_name command on page 54 for details on naming inputs.

Output

Click to place a check mark in the box and select the desired output. Multiple outputs can be selected at a time.

The screenshot shows the GefenPRO web interface. At the top, there is a navigation menu with options: Main, I/O Setup, Manage EDID, Configuration, Routing, I/O Status, and Display Info. Below the menu is a 'Look Menu' section with a 'Status' tab. The 'Status' tab contains a table with columns: Output, Input #, Name, Output, and Input #. The table lists 8 outputs, each with a corresponding input number and a checkmark in the 'Output' column. Below the table are three buttons: 'Check All', 'Clear All', and 'Route'. The 'Route' button is highlighted with a yellow background. The interface also shows a 'Save & Recall Routing Presets' dialog box with a list of presets (Preset_1 through Preset_8) and a 'Route' button. The background of the interface shows a '8x8 Matrix For HDMI w/4 ELR' and a 'Log Out' button.

Outputs				
		Name	Output	
		OUTPUT1	1	<input type="checkbox"/>
		OUTPUT2	2	<input type="checkbox"/>
		OUTPUT3	3	<input type="checkbox"/>
		OUTPUT4	4	<input type="checkbox"/>
		OUTPUT5	5	<input type="checkbox"/>
		OUTPUT6	6	<input type="checkbox"/>
		OUTPUT7	7	<input type="checkbox"/>
		OUTPUT8	8	<input type="checkbox"/>

Check All

Places a check mark in each box under the Output # column.

Clear All

Clears all check marks from the Output # column.

Route

Click this button to route the current input and output selection(s).

Log Out

Log Out

Click here to terminate the current Web session and return to the login page.

The screenshot shows the GefenPRO web interface. At the top, there are navigation tabs: Main, I/O Setup, Manage EDD, and Configuration. The 'Routing' tab is active. Below the navigation, there are sections for 'Lock Menu', 'Status', 'Outputs', and 'Inputs'. The 'Status' section contains a table with columns for Output, Input #, Name, Output, Input #, and Name. The 'Outputs' and 'Inputs' sections contain lists of output and input ports. Below these sections, there are buttons for 'Check All', 'Clear All', and 'Route'. At the bottom, there is a 'Save & Recall Routing Presets' section with a dropdown menu for 'Save Routing Preset' and a list of preset buttons.

The close-up shows the 'Save & Recall Routing Presets' dialog box. It has a title bar with the text 'Save & Recall Routing Presets'. Below the title bar, there are two main sections: 'Save Routing Preset:' and 'Recall Routing Preset:'. The 'Save Routing Preset:' section has a dropdown menu showing '1 - Preset_1' and a 'Save' button. The 'Recall Routing Preset:' section has a list of preset names (Preset_1 through Preset_8) and corresponding buttons for each preset.

Save Routing Preset

Saves the current routing state to memory. Click the drop-down list to select the desired routing preset, then click the **Save** button to save the preset to memory.

Recall Routing Preset

Loads the selected routing state into memory. Click the desired button to load the desired routing preset into memory.

WEB INTERFACE

Main >> I/O Status

Output								
	1	2	3	4	5	6	7	8
Name	OUTPUT1	OUTPUT2	OUTPUT3	OUTPUT4	OUTPUT5	OUTPUT6	OUTPUT7	OUTPUT8
RSENSE	Off							
Mask	Off							
HPD	Low							
HDCP	Inactive							

Output				
	1	2	3	4
Name	OUTPUT1	OUTPUT2	OUTPUT3	OUTPUT4
RSENSE	Off	Off	Off	Off
Mask	Off	Off	Off	Off
HPD	Low	Low	Low	Low
HDCP	Inactive	Inactive	Inactive	Inactive

Output

Displays the state of each output for each of the following: Output name, RSENSE, Mask, HPD (Hot-Plug Detect), and HDCP.

Input					
	1	2	3	4	
Name	INPUT1	INPUT2	INPUT3	INPUT4	INPUT5
Color Depth	-	-	-	-	-
Color Space	-	-	-	-	-
HDCP	No	No	No	No	No
3D	No	No	No	No	No
Active Signal	No	No	No	No	No
Vertical Resolution	-	-	-	-	-
Horizontal Resolution	-	-	-	-	-
Progressive / Interlaces	-	-	-	-	-
Refresh Rate	-	-	-	-	-

Input

Displays the state of each input for each of the following: Input name, Color Depth, Color Space, HDCP, 3D, Active Signal, Vertical Resolution, Horizontal Resolution, Progressive / Interlaces, and Refresh Rate.

Main >> Display Info

Choose EDID

Select the EDID from the drop-down list. The selected EDID will be copied from the selected EDID Bank or Output to the desired input(s) and used by the source.

Options:

Default EDID, Bank 1 ... Bank 8, Output 1 ... Output 8

Choose EDID Default EDID ▾

Gefen PRO 8x8 Matrix For HDMI w/4 ELR

Main | IO Setup | Manage EDID | Configuration | Log Out

Routing | IO Status | **Display Info**

Choose EDID Data

Feature	
24Hz Frame Rate	TRUE
Max Resolution	1080P@60Hz
Max Color Depth	12 bit
3D Capable	FALSE
Mode (DVI/HDMI)	HDMI
Max Audio Channels	2 Ch
Monitor Name	HDMI-DA
Audio Formats	
LPCM	TRUE
DTS-HD	FALSE
DTS Digital Surround	FALSE
Dolby Digital (AC3)	FALSE
Dolby TrueHD	FALSE


Feature	
24Hz Frame Rate	TRUE
Max Resolution	1080P@60Hz
Max Color Depth	12 bit
3D Capable	FALSE
Mode (DVI/HDMI)	HDMI
Max Audio Channels	2 Ch
Monitor Name	HDMI-DA
Audio Formats	
LPCM	TRUE
DTS-HD	FALSE
DTS Digital Surround	FALSE
Dolby Digital (AC3)	FALSE
Dolby TrueHD	FALSE

Feature / Audio Formats

Displays the capabilities of the display (or sink device), based on the EDID.

WEB INTERFACE

I/O Setup >> Preset Names

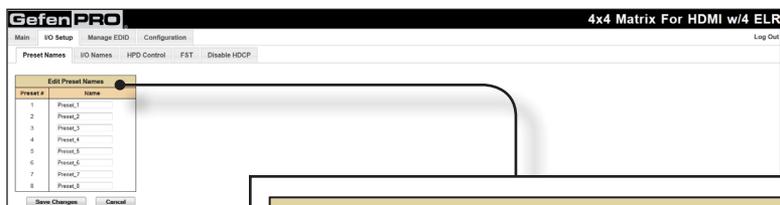

Edit Preset Names

Preset #	Name
1	<input type="text" value="Preset_1"/>
2	<input type="text" value="Preset_2"/>
3	<input type="text" value="Preset_3"/>
4	<input type="text" value="Preset_4"/>
5	<input type="text" value="Preset_5"/>
6	<input type="text" value="Preset_6"/>
7	<input type="text" value="Preset_7"/>
8	<input type="text" value="Preset_8"/>

Name

Type the desired name of the Preset in this field.
Click the **Save Changes** button to save the Preset Name.
Click the **Cancel** button to restore the previous name.



Save Changes

Saves the current changes.

Cancel

Restores the previous names for each Preset, if a change was made.

WEB INTERFACE

I/O Setup >> I/O Names



Edit Output & Input Names			
Output	Name	Input #	Name
A	<input type="text" value="OUTPUT1"/>	1	<input type="text" value="INPUT1"/>
B	<input type="text" value="OUTPUT2"/>	2	<input type="text" value="INPUT2"/>
C	<input type="text" value="OUTPUT3"/>	3	<input type="text" value="INPUT3"/>
D	<input type="text" value="OUTPUT4"/>	4	<input type="text" value="INPUT4"/>
E	<input type="text" value="OUTPUT5"/>	5	<input type="text" value="INPUT5"/>
F	<input type="text" value="OUTPUT6"/>	6	<input type="text" value="INPUT6"/>
G	<input type="text" value="OUTPUT7"/>	7	<input type="text" value="INPUT7"/>
H	<input type="text" value="OUTPUT8"/>	8	<input type="text" value="INPUT8"/>

Save Changes

Saves the current changes.

Cancel

Restores the previous names for each Preset, if a change was made.

Name

Type the desired name of each Output or Input in these fields. Click the **Save Changes** button or click the **Cancel** button to restore the previous name.

WEB INTERFACE

I/O Setup >> HPD Control

The screenshot shows the Gefen PRO web interface for an 8x8 Matrix For HDMI w/4 ELR. The navigation menu includes Main, I/O Setup, Manage EDID, Configuration, Preset Names, I/O Names, HPD Control, FST, HDCP, and Log Out. The HPD Control section is active, displaying a table with 8 rows and 3 columns: Input #, Name, and a Pulse button. A callout box provides a detailed view of the HPD Control table.

HPD Control		
Input #	Name	
1	INPUT1	Pulse
2	INPUT2	Pulse
3	INPUT3	Pulse
4	INPUT4	Pulse
5	INPUT5	Pulse
6	INPUT6	Pulse
7	INPUT7	Pulse
8	INPUT8	Pulse

Pulse

Click the Pulse button to cycle the HPD line on the desired input. This is the equivalent of physically disconnecting and reconnecting the HDMI cable between the source device and the matrix.

WEB INTERFACE

I/O Setup >> FST

The screenshot shows the 'Fast Switching Technology' configuration dialog in the Gefen PRO web interface. The dialog is titled 'Fast Switching Technology' and contains a table with the following data:

FST	Input #	Name
<input checked="" type="checkbox"/>	1	INPUT1
<input checked="" type="checkbox"/>	2	INPUT2
<input checked="" type="checkbox"/>	3	INPUT3
<input checked="" type="checkbox"/>	4	INPUT4
<input checked="" type="checkbox"/>	5	INPUT5
<input checked="" type="checkbox"/>	6	INPUT6
<input checked="" type="checkbox"/>	7	INPUT7
<input checked="" type="checkbox"/>	8	INPUT8

Below the table are four buttons: 'Check All', 'Clear All', 'Set', and 'Cancel'. The 'Set' button is highlighted, indicating it is the active button.

FST

Click to select / deselect the desired input(s). Inputs with a check mark will *enable* the FST feature. Use the **Set** button to save changes.

Check All

Places a check mark in each box under the FST column.

Clear All

Clears all check marks from the FST column.

Set

Click this button to save changes for all input(s). The Web GUI will display a prompt to verify the selected operation.

Cancel

Cancel the current operation and ignores changes for each input, if a change was made.

WEB INTERFACE

I/O Setup >> HDCP



NOTE: Some computers will enable HDCP if an HDCP-compliant display is detected. Use the Disable feature to force the computer to ignore detection of an HDCP-compliant display. Note that using the Disable feature does **not** decrypt HDCP content.

Disable	Input #	Name
<input type="checkbox"/>	1	INPUT1
<input type="checkbox"/>	2	INPUT2
<input type="checkbox"/>	3	INPUT3
<input type="checkbox"/>	4	INPUT4

Disable

Click to select / deselect the desired input(s). Inputs with a check mark will *disable* the HDCP feature. Use the **Set** button to save changes.

Check All

Places a check mark in each box under the Disable column.

Clear All

Clears all check marks from the Disable column.

Set

Click this button to save changes for all input(s). The Web GUI will display a prompt to verify the selected operation.

Cancel

Cancels the current operation and ignores changes for each input, if a change was made.

WEB INTERFACE

Manage EDID >> Assign

Lock EDID

Secures the Local EDID and disables the automatic loading after power-up. See the #lock_edid command for more information.

If the Lock EDID button is clicked (enabled), the “EDID locked on power cycle” message will be displayed in red. The local EDID information will now be locked once the matrix is rebooted. Click the Unlock EDID button to disable the Lock EDID feature.

The screenshot shows the 'Manage EDID' configuration page in the Gefen PRO web interface. At the top, there are two buttons: 'Lock EDID' and 'Unlock EDID'. A red banner below them displays the message 'EDID locked on power cycle.'. Below this, the 'Copy EDID From' dropdown menu is highlighted, showing 'Default EDID' as the selected option. The main content area contains two tables: 'Inputs' and 'Banks'.

Copy To	EDID Source	Input #	Name	EDID Source	EDID Name
<input type="checkbox"/>	Custom	1	INPUT1	OUTPUT1	
<input type="checkbox"/>	Custom	2	INPUT2	OUTPUT1	
<input type="checkbox"/>	Learn Output	3	INPUT3	OUTPUT1	Dynamic EDID
<input type="checkbox"/>	Custom	4	INPUT4	OUTPUT1	
<input type="checkbox"/>	Custom	5	INPUT5	OUTPUT1	
<input type="checkbox"/>	Custom	6	INPUT6	OUTPUT1	
<input type="checkbox"/>	Custom	7	INPUT7	OUTPUT1	
<input type="checkbox"/>	Custom	8	INPUT8	OUTPUT1	

Copy To	Input #	Name	Bank	EDID Name
<input type="checkbox"/>	1	Bank 1	N/A	
<input type="checkbox"/>	2	Bank 2	N/A	
<input type="checkbox"/>	3	Bank 3	N/A	
<input type="checkbox"/>	4	Bank 4	N/A	
<input type="checkbox"/>	5	Bank 5	N/A	
<input type="checkbox"/>	6	Bank 6	N/A	
<input type="checkbox"/>	7	Bank 7	N/A	
<input type="checkbox"/>	8	Bank 8	N/A	

Copy EDID From

Select the EDID from the drop-down list. The EDID will be copied from the selected destination to the desired input or EDID bank.

Options:

Default EDID, Bank 1 ... Bank 8, Output 1 ... Output 8

WEB INTERFACE

Gefen PRO 8x8 Matrix For HDMI w/4 ELR

Main | IO Setup | Manage EDID | Configuration | Log Out

Assign | Bank Names | Upload/Download

Lock EDID

Copy EDID From: Default EDID

Copy EDID To: - Please select from the inputs/banks below

Copy To	EDID Modes	Input #	Name	EDID Source	EDID Name
<input type="checkbox"/>	Custom	1	INPUT1	OUTPUT1	
<input type="checkbox"/>	Custom	2	INPUT2	OUTPUT1	
<input type="checkbox"/>	Last Output	3	INPUT3	Dynamic EDID	
<input type="checkbox"/>	Custom	4	INPUT4	OUTPUT1	
<input type="checkbox"/>	Custom	5	INPUT5	OUTPUT1	
<input type="checkbox"/>	Custom	6	INPUT6	OUTPUT1	
<input type="checkbox"/>	Custom	7	INPUT7	OUTPUT1	
<input type="checkbox"/>	Custom	8	INPUT8	OUTPUT1	

Check All | Clear All

Copy To	Input #	Name	EDID to
<input type="checkbox"/>	1	Bank 1	N/A
<input type="checkbox"/>	2	Bank 2	N/A
<input type="checkbox"/>	3	Bank 3	N/A
<input type="checkbox"/>	4	Bank 4	N/A
<input type="checkbox"/>	5	Bank 5	N/A
<input type="checkbox"/>	6	Bank 6	N/A
<input type="checkbox"/>	7	Bank 7	N/A
<input type="checkbox"/>	8	Bank 8	N/A

Check All | Clear All | Copy

EDID modes:

If the EDID Mode is set to *Last Output*, then the EDID source will be set to Dynamic EDID. See page 78 for details on using Dynamic EDID.

If the EDID Mode is set to *Custom*, then the EDID of the display that is connected to Output 1 will be used.

Copy To
Click to select the desired input(s).

Inputs					
Copy To	EDID Modes	Input #	Name	EDID Source	EDID Name
<input type="checkbox"/>	Custom	1	INPUT1	OUTPUT1	
<input type="checkbox"/>	Custom	2	INPUT2	OUTPUT1	
<input type="checkbox"/>	Last Output	3	INPUT3	Dynamic EDID	
<input type="checkbox"/>	Custom	4	INPUT4	OUTPUT1	
<input type="checkbox"/>	Custom	5	INPUT5	OUTPUT1	
<input type="checkbox"/>	Custom	6	INPUT6	OUTPUT1	
<input type="checkbox"/>	Custom	7	INPUT7	OUTPUT1	
<input type="checkbox"/>	Custom	8	INPUT8	OUTPUT1	

Check All | Clear All


Check All
Places a check mark in each box under the **Copy To** column.

Clear All
Clears all check marks from the **Copy To** column.

EDID Modes
Click the drop-down list to select the EDID mode.

Options:
Custom, Last Output

WEB INTERFACE

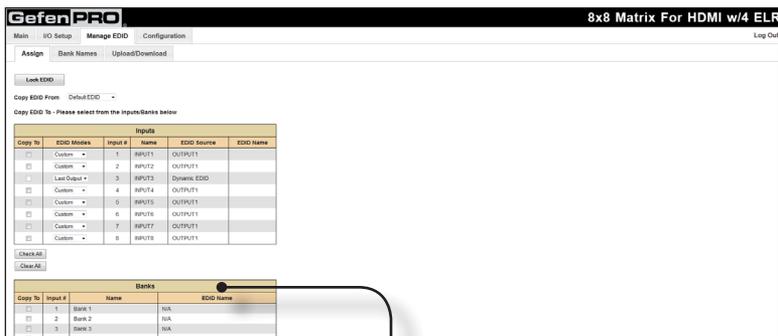

Banks			
Copy To	Input #	Name	EDID Name
<input type="checkbox"/>	1	Bank 1	N/A
<input type="checkbox"/>	2	Bank 2	N/A
<input type="checkbox"/>	3	Bank 3	N/A
<input type="checkbox"/>	4	Bank 4	N/A
<input type="checkbox"/>	5	Bank 5	N/A
<input type="checkbox"/>	6	Bank 6	N/A
<input type="checkbox"/>	7	Bank 7	N/A
<input type="checkbox"/>	8	Bank 8	N/A

Check All Clear All Copy Cancel

Copy To
Click this button to copy the specified EDID to the selected inputs / banks.


Cancel
Restores the previous EDID state for each input, if a change was made.

Check All
Places a check mark in each box under the **Copy To** column.

Clear All
Clears all check marks from the **Copy To** column.

WEB INTERFACE

Manage EDID >> Bank Names

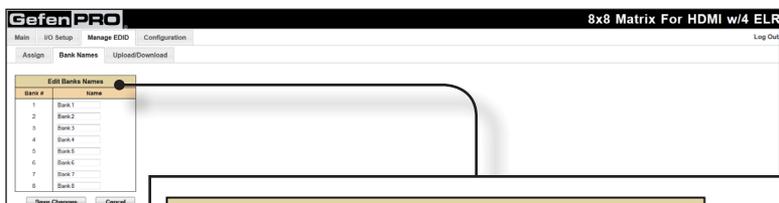

Edit Banks Names	
Bank #	Name
1	<input type="text" value="Bank 1"/>
2	<input type="text" value="Bank 2"/>
3	<input type="text" value="Bank 3"/>
4	<input type="text" value="Bank 4"/>
5	<input type="text" value="Bank 5"/>
6	<input type="text" value="Bank 6"/>
7	<input type="text" value="Bank 7"/>
8	<input type="text" value="Bank 8"/>

Bank

Indicates the EDID bank number.

Name

Type the desired name of the EDID bank in this field.
Click the **Save Changes** button to save the bank name.
Click the **Cancel** button to restore the previous name.



Save Changes

Saves the current name change to the EDID bank(s).

Cancel

Restores the previous names for each EDID bank, if a change was made.

WEB INTERFACE

Manage EDID >> Upload / Download

Upload
Click this button to upload the EDID to the specified bank.

Select Bank Location
Click this drop-down list to select the bank to where the EDID will be uploaded.

Options:
Bank 1 ... Bank 8

Browse...
Click this button to select the EDID file to be uploaded.

Upload EDID

Select EDID File to Upload:

Select Bank Location:

Download
Click this button to download the selected EDID to a file.

Drop-down list
Click this box to select the EDID that is to be saved to a file. The EDID file will be saved in binary format (.bin).

Options:
Bank 1 ... Bank 8, Output 1 ... Output 8, Input 1 ... Input 8

Download EDID

Select EDID File to Download:

WEB INTERFACE

Configuration >> Change IP Settings



Change IP Settings

MAC Address:	00:1c:91:02:b0:13
IP Address:	<input type="text" value="192.168.2.243"/>
Subnet:	<input type="text" value="255.255.255.0"/>
Gateway:	<input type="text" value="192.168.2.1"/>
Port:	<input type="text" value="80"/>
TCP/Telnet Terminal Port:	<input type="text" value="23"/>
UDP Port:	<input type="text" value="50007"/>

Change IP Settings

Assigns IP address, subnet, gateway, HTTP listening port, and Telnet port. The MAC address cannot be changed.

Save Settings

Saves the current settings for the Change IP Settings. After clicking this button, the Web interface will display a dialog indicating that the matrix must be rebooted for changes to take effect.

Set Defaults

Click this button to restore the factory-default IP settings. After clicking this button, the Web interface will display a dialog indicating that the matrix must be rebooted for changes to take effect.

Configuration >> Telnet Login Settings

The screenshot shows the Gefen PRO web interface with the following configuration options visible:

- Change IP Settings:** MAC Address (00-1c-9f-02-40-13), IP Address (192.168.2.243), Subnet (255.255.255.0), Gateway (192.168.1.1), Port (80), VCOM/Telnet Terminal Port (25), UDP Port (6007). Buttons: Save Settings, Set Defaults.
- Telnet Login Settings:** Old Password (Admin), New Password (*****), Confirm New Password (*****), Force Password on Connect (checkbox), Show Login Message on Connect (checkbox checked). Button: Save Settings.
- UDP Connection Settings:** (partially visible)

The detailed view of the **Telnet Login Settings** section is shown below:

Telnet Login Settings

Old Password:

New Password:

Confirm New Password:

Force Password on Connect:

Show Login Message on Connect:

Save Settings

Old Password

Type the current (old) password in this field. The factory-default password is Admin.

New Password

Type the new password in this field.

Force Password on Connect

Click this check box to have the matrix prompt for a password each time a Telnet session is started.

Show Login Message on Connect

Click this check box to have the matrix display the Telnet welcome message each time a Telnet session is started. The welcome message appears as: "Welcome to GEF-HDFST-848-4ELR TELNET"

Save Settings

Saves the current changes to the Telnet Login Settings.

WEB INTERFACE

Configuration >> UDP Connection Settings

The screenshot shows the 'Gefen PRO' web interface with the 'Configuration' tab selected. The 'UDP Connection Settings' section is highlighted with a callout box. The settings shown in the callout are:

- Remote UDP IP Address: 192.168.1.80
- Remote UDP Port: 50008
- Enable UDP Access:

UDP Connection Settings

Remote UDP IP Address:

Remote UDP Port:

Enable UDP Access:

Save Settings

Remote UDP IP Address

Type the remote UDP IP address in this text box.

Remote UDP Port

Enter the remote UDP port in this text box.

Enable UDP Access

Check this box to enable UDP access. If this box is unchecked, the UDP access will be unavailable.

WEB INTERFACE

Configuration >> Web Login Settings

Web Login Settings

Username:

Old Password:

New Password:

Confirm New Password:



Username

Click this drop-down list to select the username to be changed.

Old Password

Type the current (old) password in this field. The factory-default password is Admin.

New Password

Type the new password in this field.

Confirm Password

Re-type the new password in this field.

Save Settings

Saves the current changes to the Web Login Settings.

WEB INTERFACE

Configuration >> System Configuration

System Configuration

Download Current Configuration

Restore Configuration

Warning: All current settings will be lost

Firmware Update (UI ver: v3.0L)

Factory Reset

Reboot

The screenshot shows the 'System Configuration' section of the web interface. It includes the following elements:

- UDP Connection Settings:** Remote UDP IP Address (192.168.1.10), Remote UDP Port (5008), Enable UDP Access (checked).
- Web Login Settings:** Username (Operator), Old Password (*****), New Password, Confirm New Password.
- System Configuration:** Download Current Configuration (Download button), Restore Configuration (Browse_... button), Warning: All current settings will be lost (Restore button), Firmware Update (UI ver: v3.1G) (Browse_... button, Update button), Factory Reset (Reset button), Reboot (Reboot button).

Arrows from the text below point to the 'Download Current Configuration' label and the 'Download' button in the screenshot.

Download Current Configuration

Click this button to download the current configuration to a file.

System Configuration

Download Current Configuration

Restore Configuration

Firmware Update (UI ver: v3.1G)

Factory Reset

Reboot

Download

Restore

Update

Reset

Reboot

Browse —————

Click this button to select the firmware file to be uploaded. See the next page for details on updating the firmware.

Browse —————

Click this button to select the saved configuration file to be loaded into memory.

Restore

Uploads the selected configuration file to the matrix.

Update

Updates the matrix with the selected firmware file.

Reset

Click this button to set the matrix to factory-default settings. The IP settings are preserved.

Reboot

Click this button to reboot the matrix.

108

FIRMWARE UPDATE

Firmware Update Procedure (over IP)



IMPORTANT: *DO NOT* power-off or disconnect the AC power cord from the matrix, at any time, during the firmware upgrade process.

1. Make sure the 8x8 Matrix for HDMI w/4 ELR-POL Outputs is powered.
2. Connect an Ethernet cable between the matrix and the computer running the Web GUI.
3. Go to the **Configuration** tab in the Web GUI and click the Firmware Update **Browse...** button under the **System Configuration** section (see opposite page).
4. Select the firmware file and click the **Update** button
5. The matrix will prompt you to verify that you want to overwrite the current firmware. Click the **OK** button on the Web GUI dialog to begin uploading the firmware file.
6. Once the firmware file has been uploaded, the matrix will verify the firmware content. The front-panel LCM will display the following if the firmware passes:

CONTENT CHECK:
PASS

7. After the firmware file integrity has been verified, the matrix will begin the upgrade procedure. The upgrade progress will be displayed in the front-panel LCM.

-F/W UPDATE-
35%

8. After the matrix has been updated, the unit will automatically initiate a countdown to reboot. The **Power** button can be pressed to bypass the countdown without harming the upgrade process. The LCM will display the following message:

FINISHED
REBOOT IN 52 SEC

9. After the matrix reboots, the firmware upgrade process will be complete.

FIRMWARE UPDATE

Firmware Update Procedure (over USB)



IMPORTANT: *DO NOT* power-off or disconnect the AC power cord from the matrix, at any time, during the firmware upgrade process.

1. Download the firmware update from the Support section of the Gefen Web site.
2. Power-ON the 8x8 Matrix for HDMI w/4 ELR-POL Outputs.

Connect a USB cable between the computer and the 8x8 Matrix for HDMI w/4 ELR-POL Outputs.

It is unnecessary to disconnect any cables from the 8x8 Matrix for HDMI w/4 ELR-POL Outputs during the update process.

3. Once the computer is able to connect to the 8x8 Matrix for HDMI w/4 ELR-POL Outputs, a Removable disk icon will be displayed under My Computer. The following will be displayed on the front-panel LCD:

```
USB CONNECTED...
```

4. Extract the firmware file from the .ZIP file and drag the .bin file to the Removable Disk. The 8x8 Matrix for HDMI will indicate that the firmware is being copied.

```
USB UPLOADING...
```

5. Once the firmware has been successfully copied, the following message will be displayed:

```
USB UPLOAD DONE  
PLZ REMOVE USB..
```

6. Disconnect the USB cable from the computer.
7. The matrix will verify the firmware content. The front-panel LCM will display the following if the firmware passes:

```
CONTENT CHECK:  
PASS
```

FIRMWARE UPDATE

9. After the firmware file integrity has been verified, the matrix will begin the upgrade procedure. The upgrade progress will be displayed in the front-panel LCM.



-F/W UPDATE-
35%

10. After the matrix has been updated, the unit will automatically initiate a countdown to reboot. The **Power** button can be pressed to bypass the countdown without harming the upgrade process.



FINISHED
REBOOT IN 52 SEC

11. After the matrix reboots, the firmware upgrade process will be complete.

RACK MOUNT SAFETY INFORMATION

- a. Maximum recommended ambient temperature: 40 °C (104 °F).
- b. Increase the air flow as needed to maintain the recommended temperature inside the rack.
- c. Do not exceed maximum weight loads for the rack. Install heavier equipment in the lower part of the rack to maintain stability.

SPECIFICATIONS

Maximum Pixel Clock.....	225 MHz
Video Input Connectors (Matrix).....	(8) HDMI Type A, 19-pin, female, locking
Video Output Connectors (Matrix).....	(4) HDMI Type A, 19-pin, female (4) ELR-POL, RJ-45, female
Video Input Connector (Receiver).....	(1) RJ-45, female
Video Output Connector (Receiver).....	(1) HDMI Type A 19-pin, female, locking
Power Indicator (Matrix/Receiver).....	LED, blue=On, red=Standby
Lock Indicator (Matrix).....	LED, blue
USB Port (Matrix).....	Mini-B, female
Ethernet Port (Matrix).....	(1) RJ45, female, 10/100 BaseT
RS-232 Port (Matrix).....	(1) DB-9, female
IR Extender Port (Matrix).....	(1) 3.5mm mini-stereo jack
Power Supply.....	100V to 240V AC 50/60 Hz, Internal
Power Consumption (Matrix).....	120W (max.)
Operating Temperature.....	+32 to +104 °F (0 to + 40 °C)
Rack mounting requirements (Matrix).....	Standard 19" rack, 2U high
Dimensions (W x H x D) (Matrix).....	17.25" x 3.5" x 12" (440mm x 89mm x 305mm)
Dimensions (W x H x D) (Receiver).....	4.4" x 1.1" x 3.35" (110mm x 27mm x 85mm)
Shipping Weight (1 Matrix with 8 Receivers).....	37 lbs. (16.8 kg)

WARRANTY

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

1. Proof of sale may be required in order to claim warranty.
2. Customers outside the US are responsible for shipping charges to and from Gefen.
3. Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

For the latest warranty coverage information, refer to the Warranty and Return Policy under the Support section of the Gefen Web site at www.gefen.com.

PRODUCT REGISTRATION

Please register your product online by visiting the Register Product page under the Support section of the Gefen Web site.

LICENSING

This product uses software that is subject to open source licenses, including one or more of the General Public License Version 2 and Version 2.1, Lesser General Public License Version 2.1 and Version 3, BSD, and BSD-style licenses. Distribution and use of this product is subject to the license terms and limitations of liability provided in those licenses. Specific license terms and Copyright Notifications are provided in the source code.

For three years from date of activation of this product, any party may request, and we will supply, for software covered by an applicable license (e.g. GPL or LGPL), a complete machine-readable copy of the corresponding open source code on a medium customarily used for software interchange. The following software and libraries are included with this product and subject to their respective open source licenses:

- lwIP
- jQuery

lwIP is licenced under the BSD licence:

Copyright (c) 2001-2004 Swedish Institute of Computer Science.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



20600 Nordhoff St., Chatsworth CA 91311

1-800-545-6900 818-772-9100 fax: 818-772-9120

www.gefenpro.com support@gefenpro.com



This product uses UL or CE listed power supplies.