## Station Instructions Parts List Tools Required - Screwdriver Remove the plastic cap before assembly 8 x1 A x2 B x2 C x4 F x2 2 x1 D M6x15 x6 E M6x32 x8

