 


INSTRUCTION SHEET

DISPLAY STATION SERIES

DS-600-2X2L-AL / DS-600-2X2C-AL

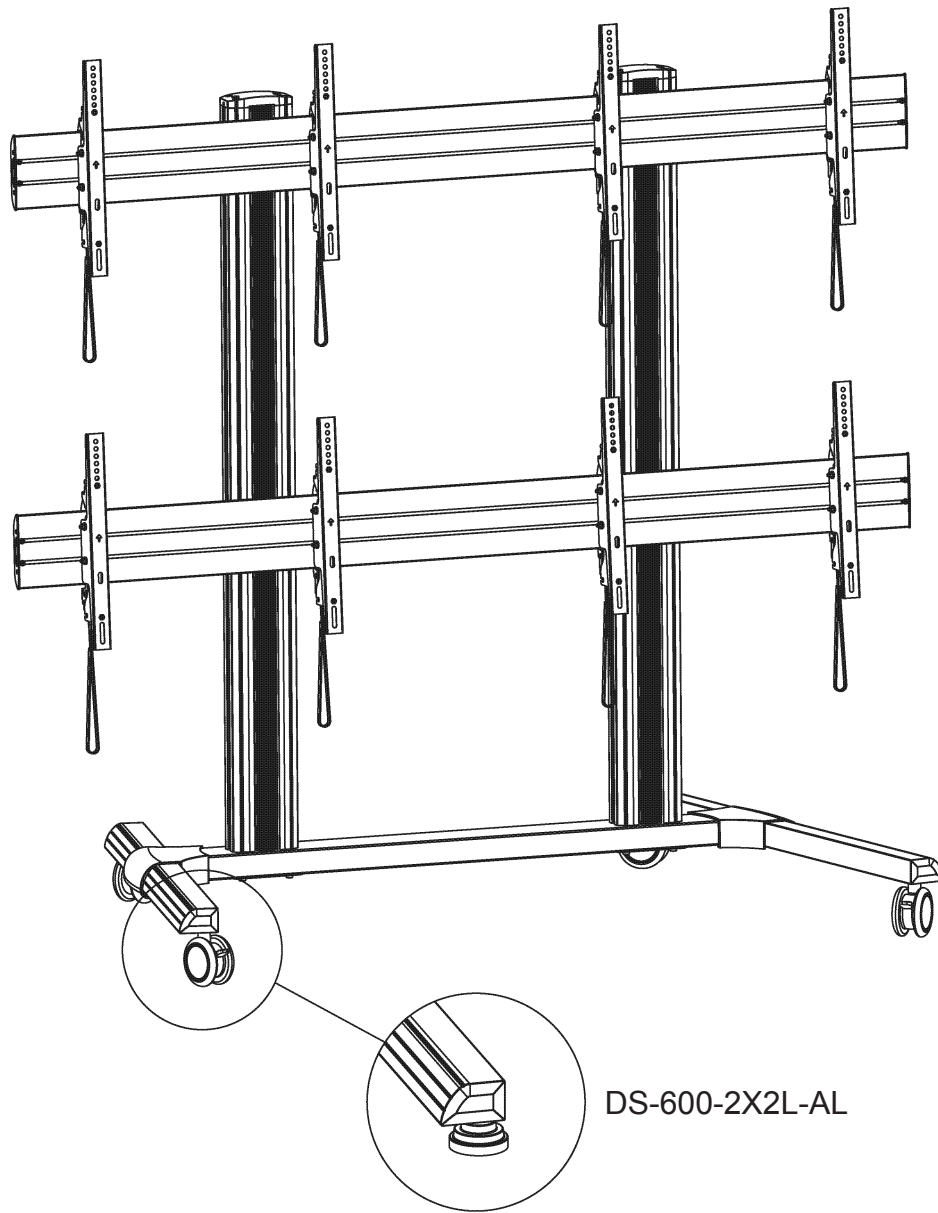

THANK YOU

Thank you for purchasing The Display Station DS-600-2X2L-AL / DS-600-2X2C-AL. Please read these instructions thoroughly before installing this product.

IMPORTANT SAFETY INSTRUCTIONS / INSTRUCTIONS IMPORTAANTES SUR LA SÉCURITÉ



DANGER HAZARDOUS VOLTAGE/DANGER HAUTE TENSION

The lightning flash with the arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

L'éclair avec le symbole de flèche dans un triangle équilatéral est destiné à alerter l'utilisateur de la présence d'une tension dangereuse non isolée dans l'enceinte du produit qui peut être d'une ampleur suffisante pour constituer un risque de choc électrique pour les personnes.



CAUTION/ATTENTION The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Le point d'exclamation dans un triangle équilatéral est destiné à alerter l'utilisateur de la présence d'importants instructions d'opération et de maintenance (entretien) dans la documentation accompagnant l'appareil.



WARNING! Failure to read, understand and follow the following information can result in serious personal injury, damage to the equipment or voiding of the warranty. It is the responsibility of the Installer/User to ensure that this product is loaded according to specifications.



AVERTISSEMENT! Refus de lire, comprendre et suivre la renseignements suivants peut traduire par de graves blessures, des dommages à l'équipement ou invalider la garantie. Il est la responsabilité de l'installateur / utilisateur de s'assurer que ce produit est chargé conformément aux spécifications.



CAUTION! The socket-outlet shall be installed near the equipment and shall be easily accessible.



ATTENTION! La prise de courant doit être installée près de l'équipement et doit être facilement accessible.



CAUTION! Use indoor in dry locations only.



ATTENTION! Pour être utilisé en intérieur dans un endroit sec seulement.



CAUTION! Disconnect power before servicing.



ATTENTION! Débranchez l'alimentation avant l'entretien.



CAUTION! Do not plug into another re-locatable power tap.



ATTENTION! Ne branchez pas dans une autre puissance robinet relocalisable.



CAUTION! To avoid an unstable condition, place heavier components at the bottom of the cabinet. When more than one component is placed in the cabinet, begin at the bottom of the cabinet and place equipment at the lowest available point, evenly distribute weight (vertically) within the cabinet.



ATTENTION! Pour éviter une condition instable, placer des composants plus lourds dans le bas de l'armoire. Lorsque plus d'un composant sera placé dans l'armoire, commencez en bas de l'armoire, placent l'équipement sur le point le plus bas disponible, distribuant uniformément le poids (verticalement) dans l'armoire.



 
WARNING! The weight ratings of this product can be found on the product. Exceeding these weight ratings can result in serious injury or damage to the equipment. It is the responsibility of the Installer/User to ensure the components installed do not surpass the weight ratings as an unstable condition can occur which may cause possible injury or damage.



AVERTISSEMENT! Les caractéristiques de poids de ce produit peuvent être trouvées sur le produit. Le dépassement de ces caractéristiques de poids peut entraîner des blessures graves ou des dommages à l'équipement. C'est l'responsabilité de l'installateur / utilisateur de s'assurer que les composants installé ne dépassent pas les notes de poids comme un instable condition peut se produire qui peut causer des blessures ou dommages.

WARNING


Can tip over resulting in risk of injury.
Do not allow children under 16 to move cart.
Move Cart Slowly.

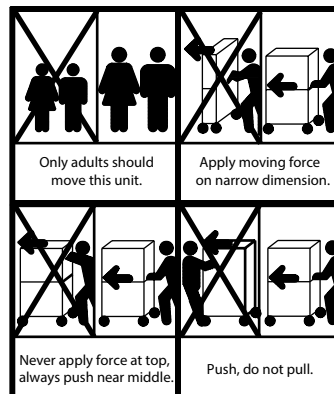

DO NOT REMOVE

ATTENTION

 Peut basculer et entraîner des risques de blessures. Ne pas laisser des enfants de moins de 16 ans utiliser le chariot.
Déplacer le chariot lentement.

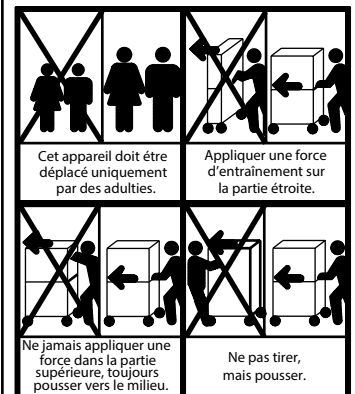

NE PAS ENLEVER

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, including the following:

- For institutional use.
- Read and follow all instructions before using.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- There are no user-serviceable components within this device. Removal of the cover from this device may present a shock hazard, and void the warranty.
- **WARNING** – Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on the child.
- **WARNING** – Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.
- **DANGER** – To reduce the risk of electrical shock:
Always unplug this furnishing from the electrical outlet before cleaning.
- **WARNING** – To reduce the risk of burns, fire, electric shock, or injury to persons:
 1. Unplug from outlet before putting on or taking off parts.
 2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
 3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
 4. Never operate the furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
 5. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 6. Keep the cord away from heated surfaces.
 7. Never drop or insert any object into any opening.
 8. Do not use outdoors.
 9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
 10. To disconnect, turn all controls to the off position, then remove plug from outlet.
 11. **WARNING: Risk of Electric Shock** – Connect the furnishing to a properly grounded outlet only. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 12. For loading always put heavier items at the bottom and not near the top in order to help prevent the possibility of the furnishing tipping over.
 13. **WARNING: The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus"**
 14. The mains plug is used as your disconnect device. This device shall remain readily operable.
 15. Clean only with dry cloth.
 16. Unplug this apparatus during lightning storms or when unused for long periods of time.
 17. Only use attachments/accessories specified by the manufacturer.
 18. Do not overload the wall outlet where this device is being connected. Do not overload this device. Ensure the total load to this device does not exceed that which is listed in the specifications section of this manual.
 19. Ensure this device is connected to a properly grounded AC power source. Ensure the device is plugged into a source providing the required 120V. Do not use a plug adapter that defeats the ground pin of the AC plug.

SAVE ALL INSTRUCTIONS

INSTRUCTIONS IMPORTAANTES SUR LA SÉCURITÉ

Lorsque vous utilisez des mobiliers électriques, toujours respecter les précautions de base, notamment :

- Usage institutionnel.
 - Lire et suivre toutes les instructions avant l'utilisation du matériel.
 - Confier toutes les réparations à un personnel qualifié. Une réparation s'impose lorsque l'appareil a été endommagé d'une manière quelconque, par exemple en cas d'endommagement du cordon d'alimentation ou de sa fiche, de renversement de liquide ou de chute d'objets à l'intérieur, d'exposition à la pluie ou à l'humidité, de dysfonctionnement ou de chute de l'appareil.
 - Il n'y a pas de composants réparables par l'utilisateur au sein de cet appareil. Retrait de la couverture de cet appareil peut présenter un danger d'électrocution et annuler la garantie.
 - **AVERTISSEMENT** - Des blessures graves ou mortelles peuvent survenir si un enfant grimpe sur le meuble d'un équipement audio ou vidéo. Une télécommande ou un jouet placé sur le meuble peut encourager un enfant à grimper dessus et conduire à la chute du meuble sur ce dernier.
 - **AVERTISSEMENT** - Le transfert d'un équipement audio ou vidéo sur un meuble qui n'a pas été spécialement conçu pour soutenir un équipement audio ou vidéo peut entraîner l'effondrement ou le basculement du meuble sur un enfant et provoquer des blessures graves ou mortelles.
 - **DANGER** - Pour réduire le risque de choc électrique :
Toujours débrancher le meuble de la prise électrique avant de le nettoyer.
 - **AVERTISSEMENT** - Pour réduire les risques de brûlures, d'incendie, de choc électrique ou de blessures:
1. Débrancher de la prise électrique avant d'installer ou de retirer des pièces.
 2. Surveiller étroitement ce meuble s'il est utilisé par ou à proximité d'un enfant, d'une personne invalide ou handicapée.
 3. N'utiliser ce meuble que pour l'usage auquel il est destiné, tel que décrit dans la présente fiche d'instructions. Ne pas utiliser d'accessoires non recommandés par le fabricant.
 4. Ne jamais utiliser ce meuble si le cordon ou la prise est endommagé, s'il ne fonctionne pas correctement, s'il est tombé ou est endommagé, ou s'il est tombé dans l'eau. Renvoyer le meuble à un centre de service après-vente pour qu'il soit examiné et réparé.
 5. Le cordon d'alimentation doit être placé de manière à éviter qu'il soit piétiné ou pincé, notamment au niveau des prises, des réceptacles et à la sortie de l'appareil.
 6. Garder le cordon d'alimentation loin des surfaces chauffées.
 7. Ne jamais faire tomber ou introduire un objet dans une ouverture.
 8. Ne pas utiliser en extérieur.
 9. Ne pas utiliser dans des lieux où des produits aérosols sont utilisés ou à proximité d'une source d'oxygène.
 10. Pour débrancher, placer tous les boutons en position off, puis retirer la fiche de la prise électrique.
 11. **AVERTISSEMENT** : Risque de choc électrique - Brancher le meuble uniquement à une prise correctement mise à la terre. Ne pas détériorer le dispositif de sécurité de la fiche polarisée ou de la fiche de terre. Une fiche polarisée possède deux broches, dont l'une plus large que l'autre. Une fiche de type terre possède deux broches et une troisième de mise à la terre. La broche large ou la troisième fiche sont fournies pour des raisons de sécurité. Si la fiche fournie n'entre pas dans votre prise de courant, veuillez faire appel à un électricien pour remplacer la prise obsolète.
 12. Les objets les plus lourds doivent toujours être placés dans la partie inférieure du meuble, et non pas dans la partie supérieure, afin d'éviter tout risque de basculement du meuble.
 13. **AVERTISSEMENT** : L' appareil ne doit pas être exposé à des éclaboussures et aucun objet rempli de liquide, comme des vases , ne doit être placé sur l'appareil "
 14. La fiche secteur est utilisée comme sectionneur de courant. Ce dispositif doit rester en état de marche.
 15. Nettoyer uniquement avec un chiffon sec.
 16. Débrancher cet appareil pendant les orages ou s'il n'est pas utilisé pendant de longues périodes.
 17. Utiliser uniquement les pièces/accessoires indiqués par le fabricant.
 18. Ne surchargez pas le réceptacle de mur ou le circuit qui fournit l'énergie à ce appareil. Ne pas surcharger cette appareil. S'assurer que la charge totale à cet appareil ne dépasse pas celle qui est répertoriée dans la section des spécifications de ce manuel.
 19. Assurez-vous cet appareil est connecté à une source d'alimentation C/A avec mise à la terre. Assurez-vous cet appareil est branché sur une source d'alimentation fournissant les nécessaires 120V. Ne pas utiliser un adaptateur qui contrecarre la broche de terre de la prise du cordon d'alimentation.


CONSERVER CES INSTRUCTIONS.

WEIGHT RATINGS

ITEM	DETAILS
Total Display Load (44" to 55")	352 lbs. (159.6 kg) Maximum
Total Rated Load	362 lbs. (164.2 kg) Maximum

SPECIFICATIONS

ITEM	DETAILS
Power Strip Maxium Load	15 Amp 1875 Watts @ 125 VAC

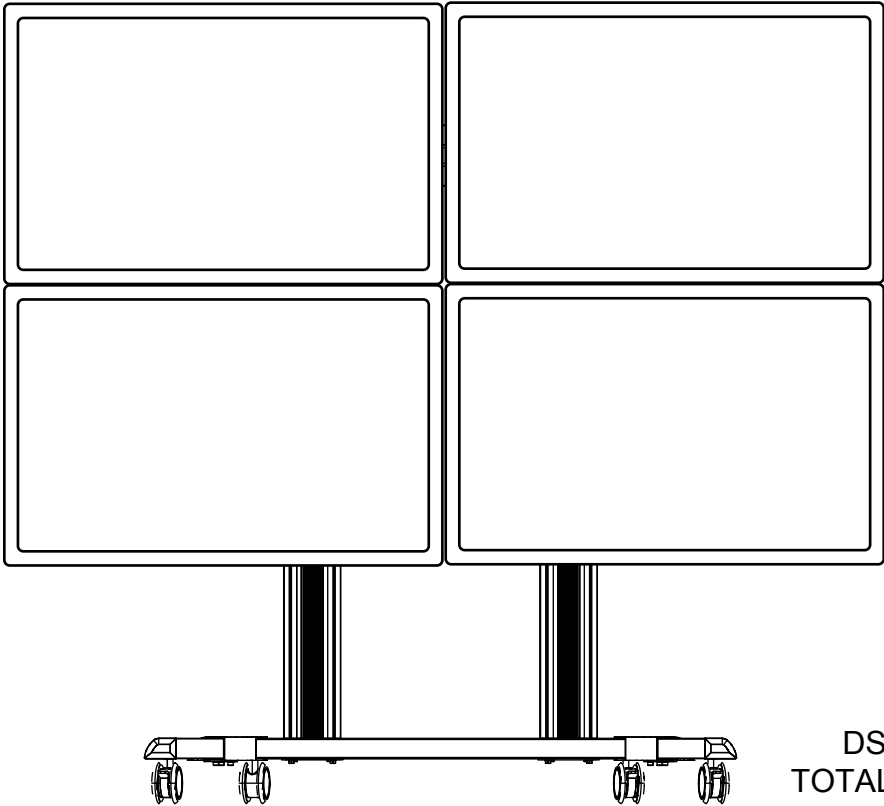 

← TOTAL DISPLAY
MAXIMUM:
352 LBS (159.6 KG);
44" - 55" DIAGONAL

DS-600-2X2L-AL / DS-600-2X2C-AL
TOTAL RATED LOAD: 362 LBS (164.2 KG)



WARNING - This cart / stand is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury. Total equipment weight must not exceed 362 lbs (164.2 kg).


AVERTISSEMENT - Ce chariot / station a été spécifiquement conçu pour les produits et le poids maximal indiqués. En cas d'utilisation avec d'autres produits ou des produits plus lourds que le poids maximal indiqué, le chariot peut devenir instable et causer des blessures. Le poids total de l'équipement ne doit pas dépasser 362 lb (164.2 kg).

TABLE OF CONTENTS


Important Safety Instructions.....	2-4
Weight Ratings.....	5
Specificalitons.....	5
Hardware/Items Supplied.....	7
Assembling The Base.....	8
Attaching The Column To The Base.....	8
Installing The Covers.....	9
Installing The Support Plates.....	9
Installing The Universal Plate.....	10
Installing The Top Covers.....	11
Installing The Adapter Brackets	11
Mounting The Screen.....	12
For Flat Back Screens.....	12
For Recessed Back Screens Or To Access A/V Inputs.....	13
Hooking The Displays Onto The Universal Plates.....	14
Hooking The Displays Onto The Universal Plates (Continued).....	15
Micro Adjustments.....	15
Micro Adjustments (Continued).....	16
Installing The Power Strip.....	17
Cable Management.....	17
Warranty.....	18

HARDWARE/ITEMS SUPPLIED

 
DS-600-2X2L-AL / DS-600-2X2C-AL

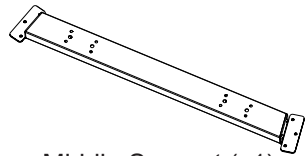

Middle Support (x1)
A

 

Left Base (1)
B

 

Right Base (x1)
C



 
Left Cover (x1)
D



Right Cover (x1)
E



Universal Plate (x2)
F




Adapter Bracket (x8)
G



Plastic Cover (x4)
H



 
ST4.2x9.5 (x8)
I

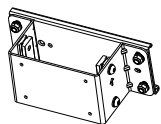

Support Plate (x4)
J



 Column (x1)
K



M6x20 (x2)
L



 
Connecting Piece (x2)
M




Top Cover (x2)
N



Cable Clamp (x16)
O



M8x65 (x8)
P

 

M8x90 (x8)
Q



M8x16 (x8)
R



3mm Hex Key (x1)
S



5mm Hex Key (x1)
T



6mm Hex Key (x1)
U



D8 Washer (x14)
V

(DS-600-2X2C-AL Only)



Caster Wheel/Brake (x2)
W



Caster Wheel (x2)
X



Wrench (x1)
Y

Monitor Mounting Hardware



M5x14 (x4)
M-A



M6x14 (x4)
M-B



M8x20 (x4)
M-C



M6x30 (x4)
M-D



M8x30 (x4)
M-E



Washer (x4)
M-F



Small Spacer (x8)
M-G

 


Big Spacer (x4)
M-H

(DS-600-2X2L-AL Only)




Rubber Pad (x4)
A1




Supporting Foot (x4)
J1

 
(Peel off the backing paper from the rubber pad and stick the rubber pad on to the supporting foot)



Thread Depth Indicator (x1)
B1

 

Hex Bit 3mm, 5mm, 6mm (x1)
C1

 

Washer Plate (x2)
D1



 
M8x20 (x6)
E1



Power Strip Screw (x2)
F1



Oval Nut (x2)
G1




Power Strip Mounting Bracket (x2)
H1




Tape (2)
I1

Assembling The Base

 1. Assemble left and right bases to middle support using washer plates and hardware as shown.
2. Tighten all screws with a Hex key.

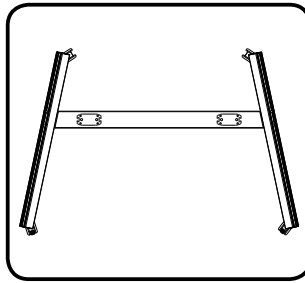


 NOTE: With the brake wheels facing forward.

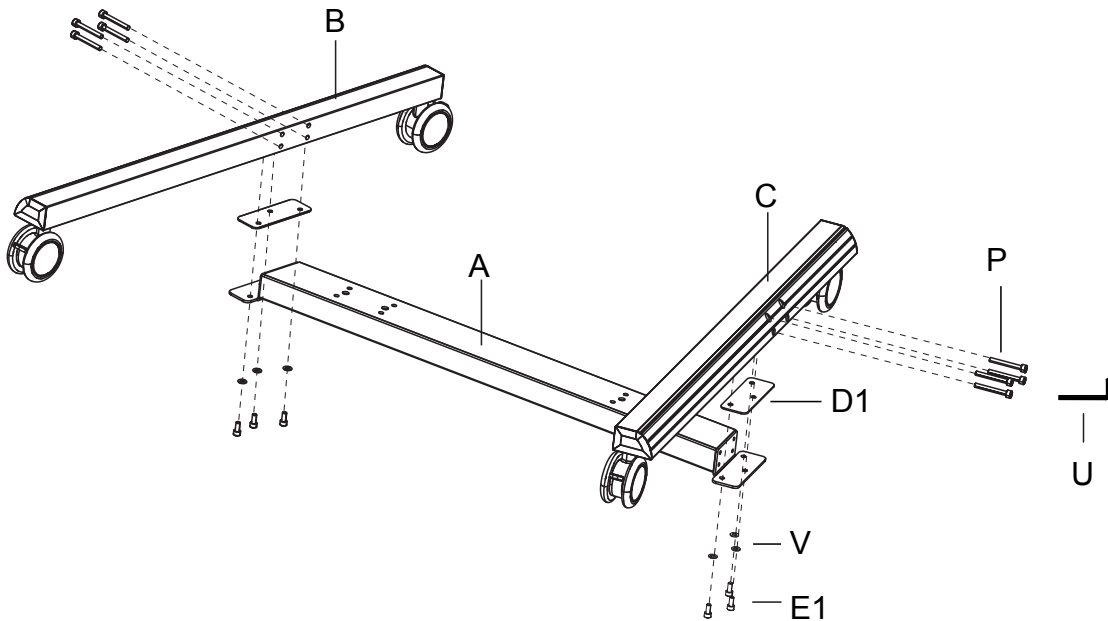


Attaching The Column To The Base

 1. Attach column to assembled base using the connection plate, secure them with appropriate screws.
NOTE: Lock brakes on casters to avoid any sudden movements during installation.

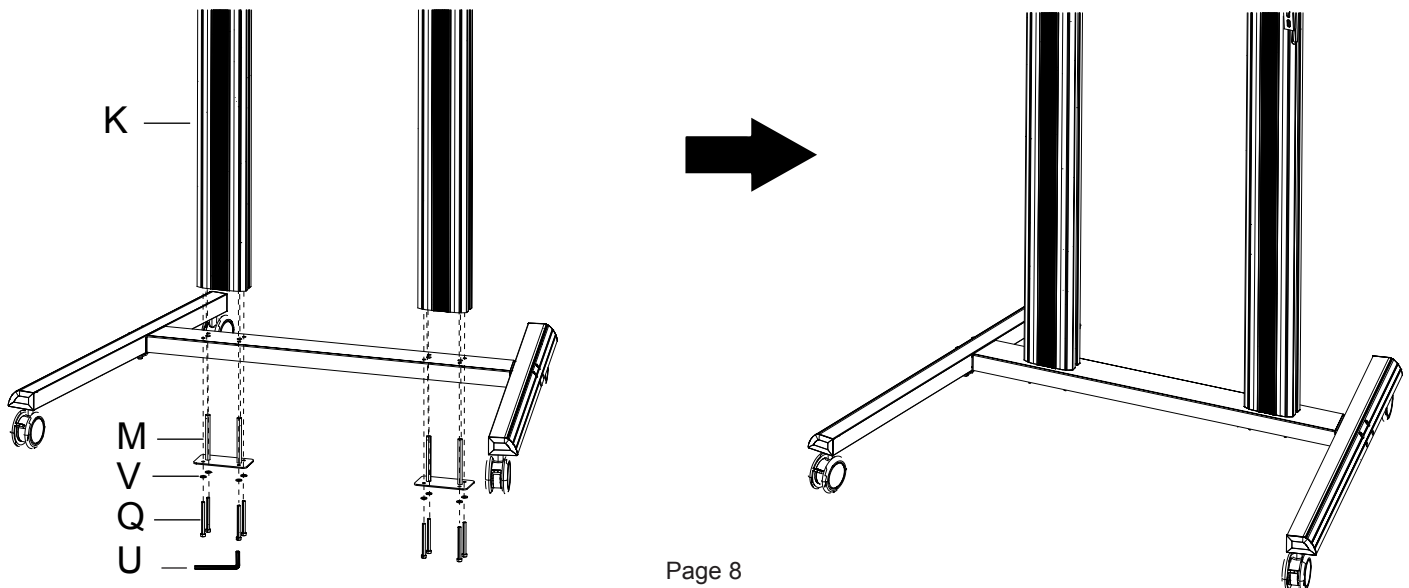


Installing The Covers

 Attach tape (I1) here under covers D and E

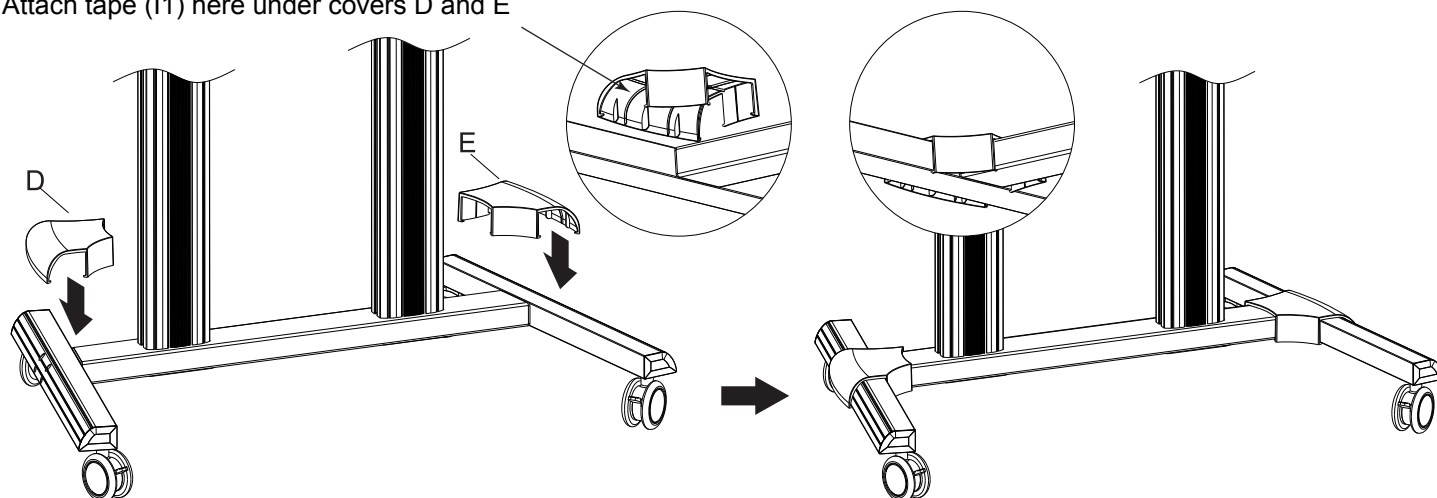


Installing The Support Plates

 
1. Insert the support plates into the columns along the column rails respectively.

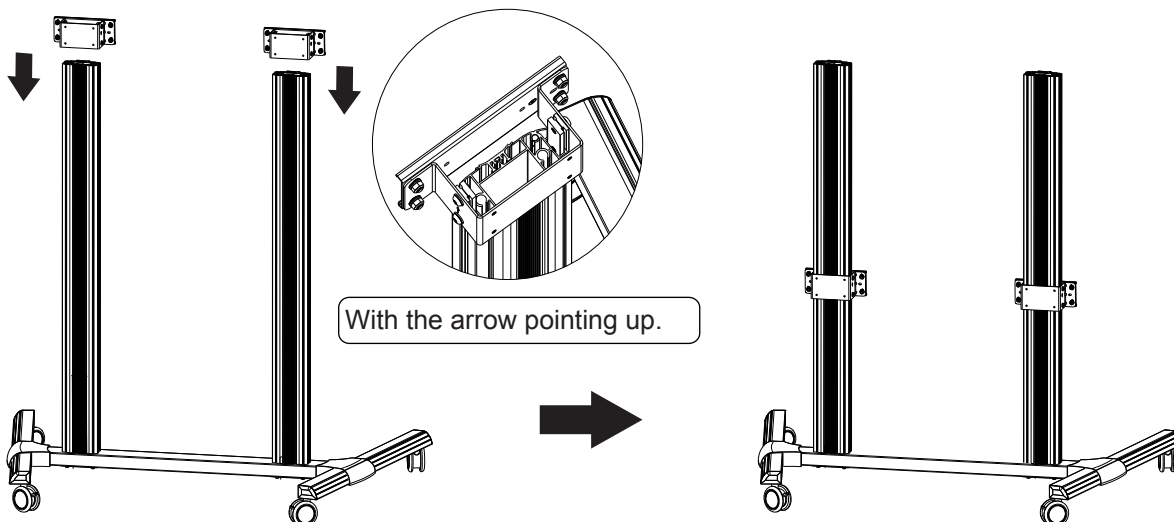

 2. Tighten all screws to secure the support plate.

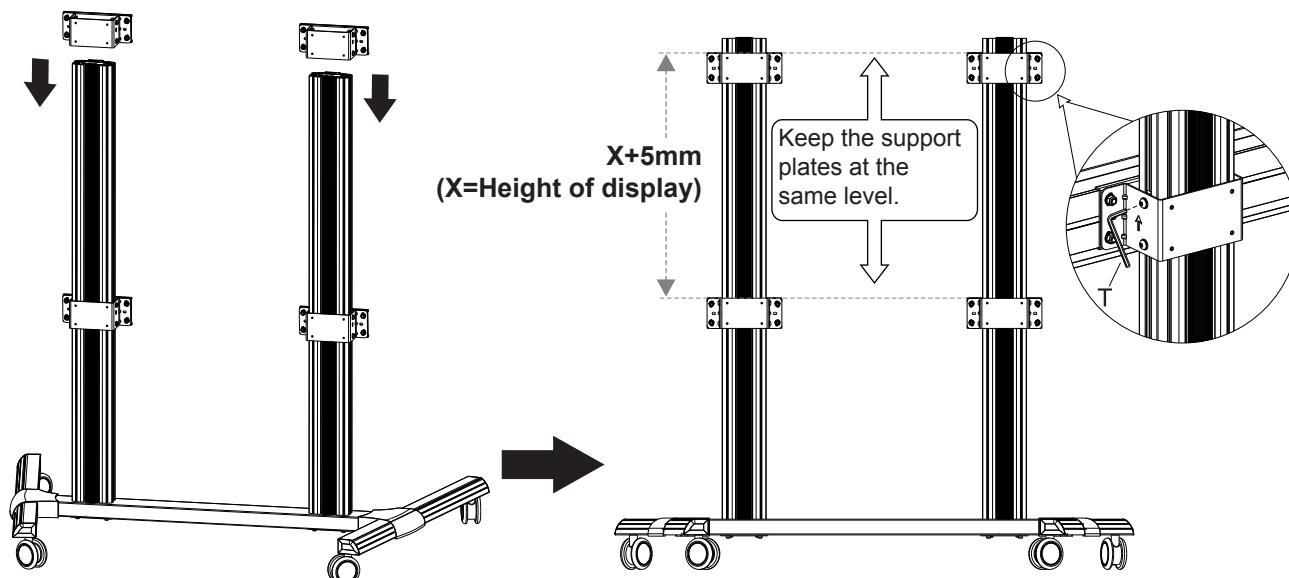


Installing The Universal Plate

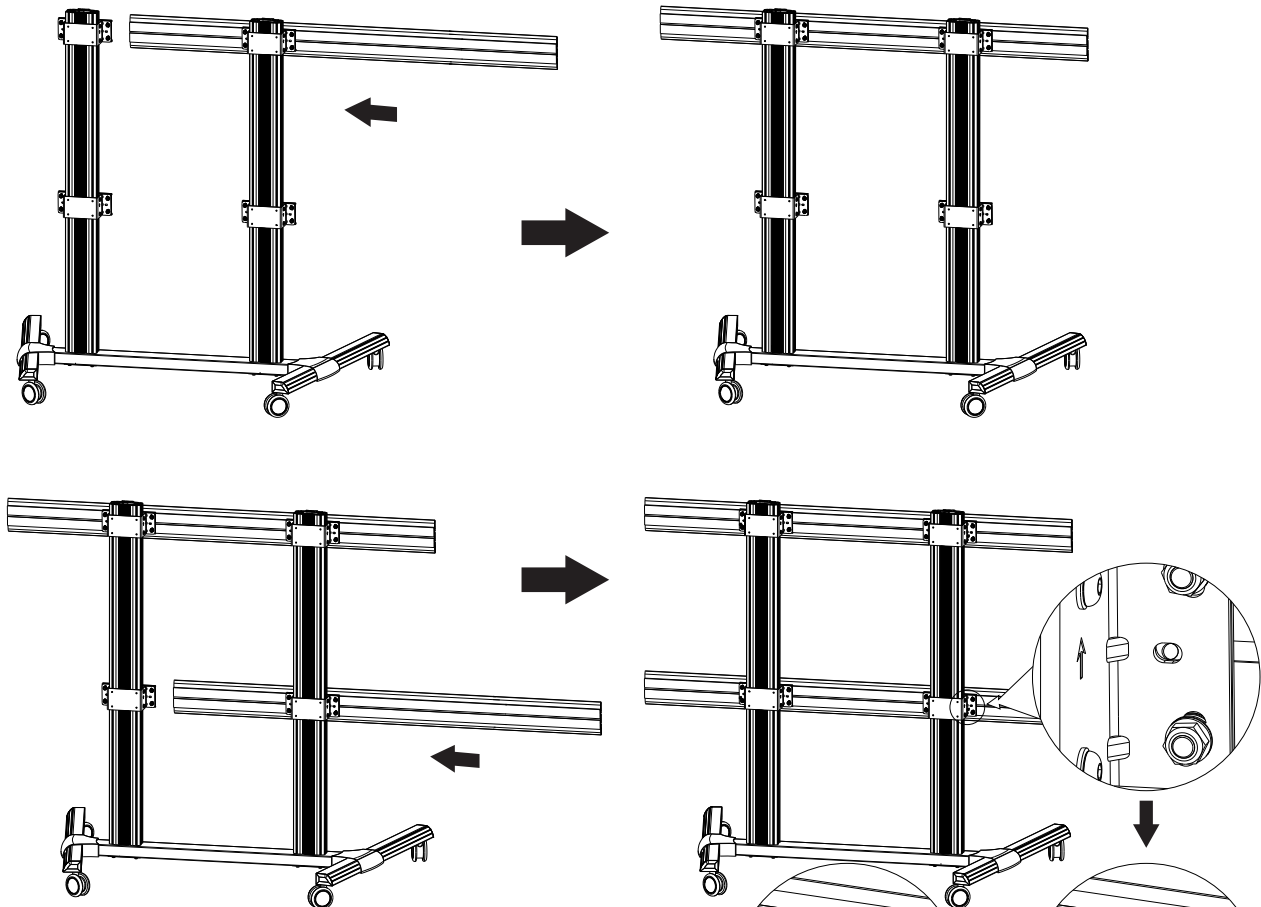 

1. Insert the universal plates to the support plates and align the holes in the universal plates with the holes in the support plates.

2. Install the screw into either of two holes.

 3. Tighten all screws but do not over tighten!

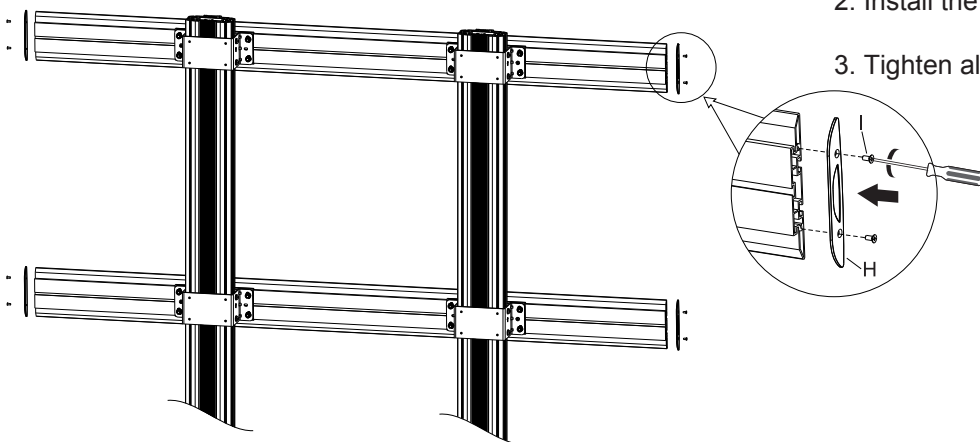


4. Attach the two plastic covers to both ends of the universal plates using the screws and tighten all screws to secure.


NOTE: The other two plastic covers are installed in the same way.

Installing The Top Covers

 1. Attach the top covers to the columns using the appropriate screws. Tighten all screws with an Hex key.

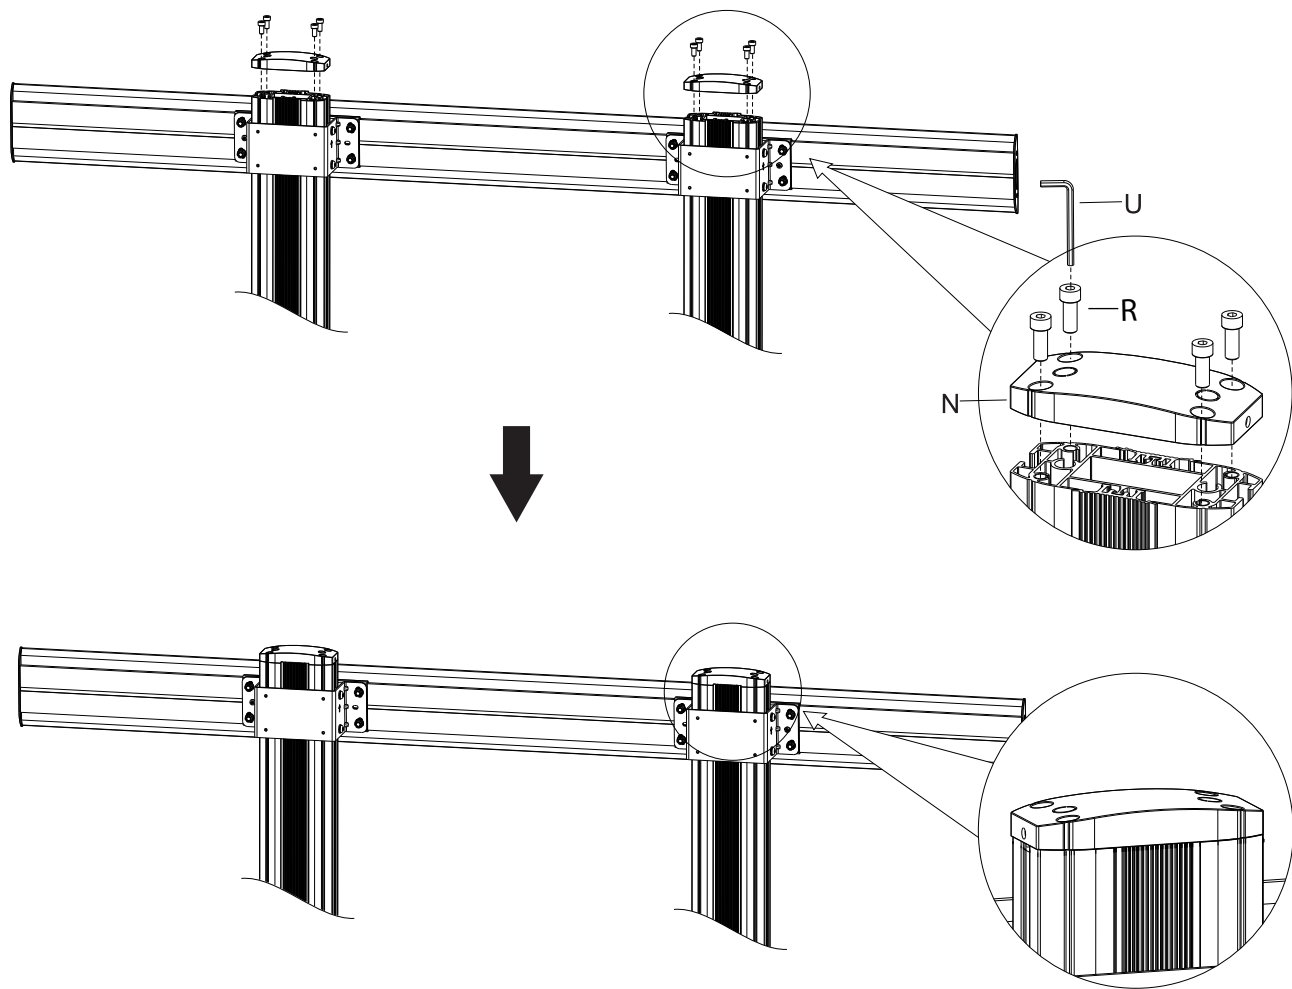

Installing The Adapter Brackets

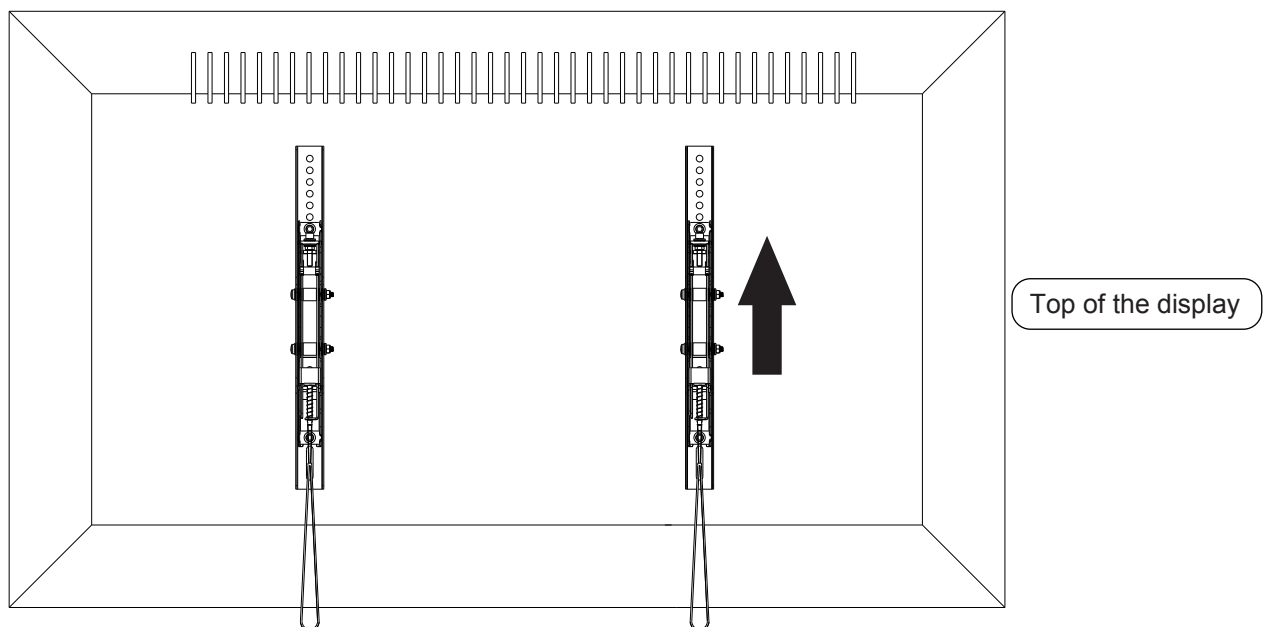 

Mounting The Screen

 
Selecting The Mounting Hardware To Attach Brackets To Flat Panel

- 1) Identify the correct diameter screw for the flat panel threaded inserts. The correct screws should thread easily and not pull out when tension is applied.
- 2) To determine proper screw length, insert thread depth indicator into a threaded insert on the flat panel.
- 3) Mark the thread depth indicator 1/8" above the depth of the threaded insert.
- 4) Select a screw length that is closest to the mark made on the thread depth indicator.



Mark 1/8" Above Depth

Threaded Insert




Thread Depth Indicator

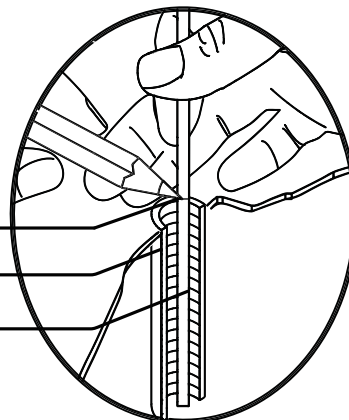

  NOTE: Do not use any screw longer than 1/8" from the mark or damage to flat panel may occur.

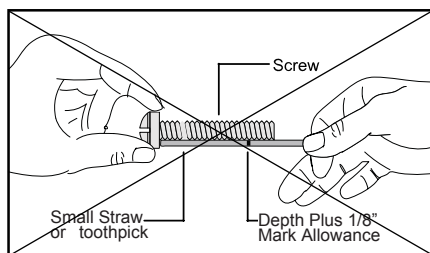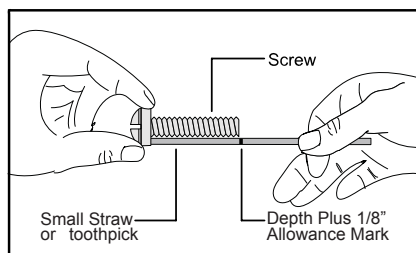


For Flat Back Screens

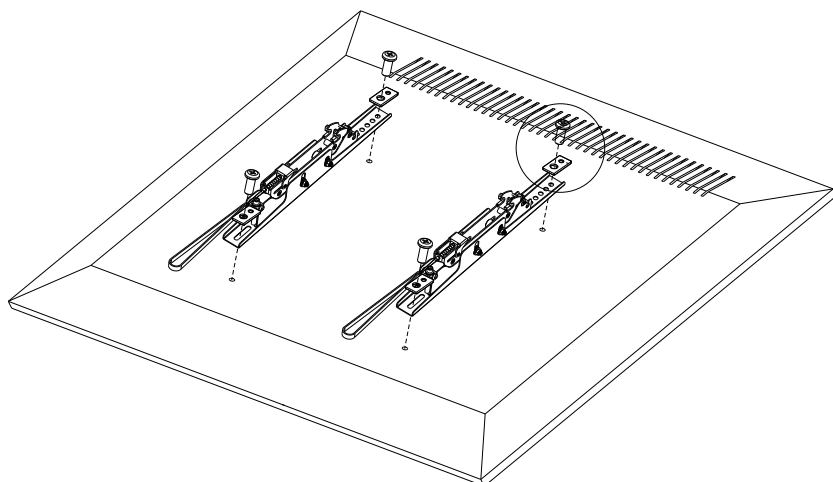 
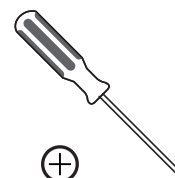 
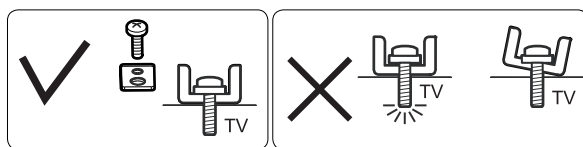 


M-A/M-B/M-C

 M-F

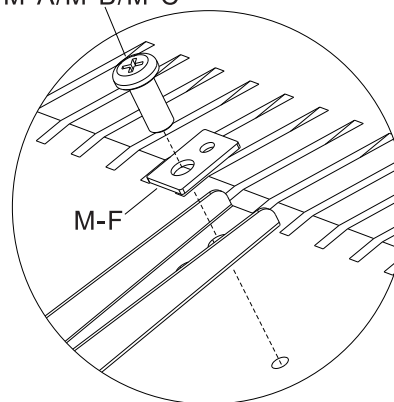

   For Recessed Back Screens Or To Access A/V Inputs

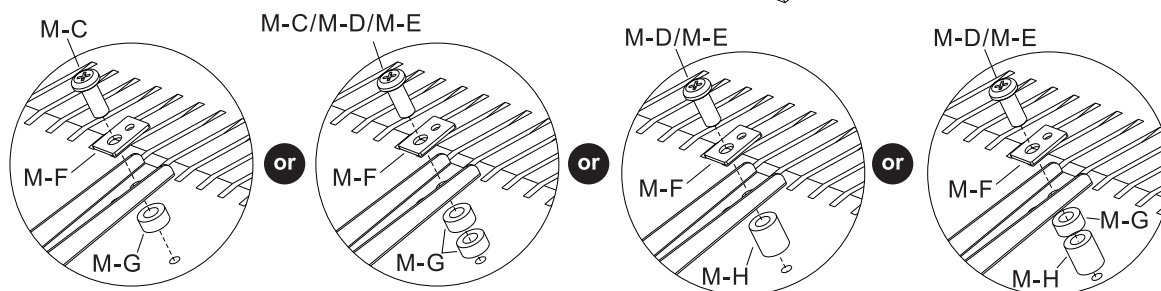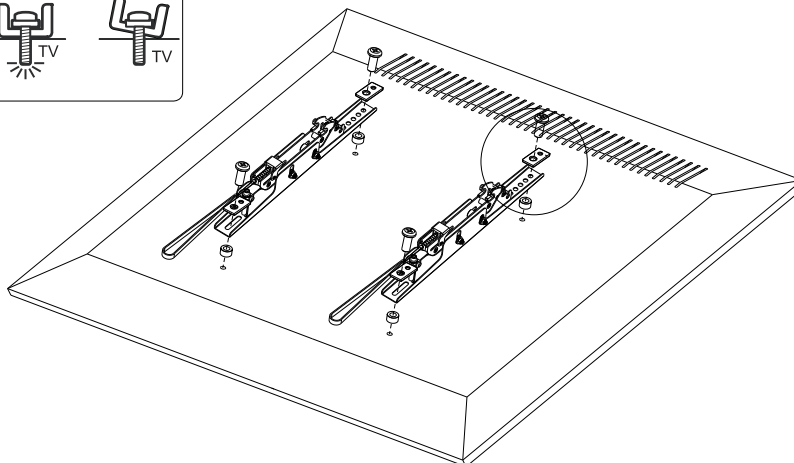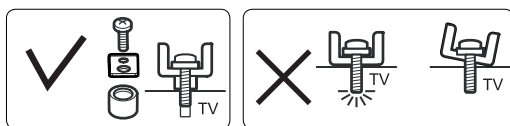


NOTE: Choose the appropriate screws, washers and spacers (if necessary) according to the type of display.

- Position the adapter brackets as close as possible to the center of the displays.
- Screw the adapter brackets onto the displays.


 Tighten all screws but do not over-tighten.

Hooking The Displays Onto The Universal Plates

 1. Insert support plate along column rails to the required position and tighten all screws with Hex key.

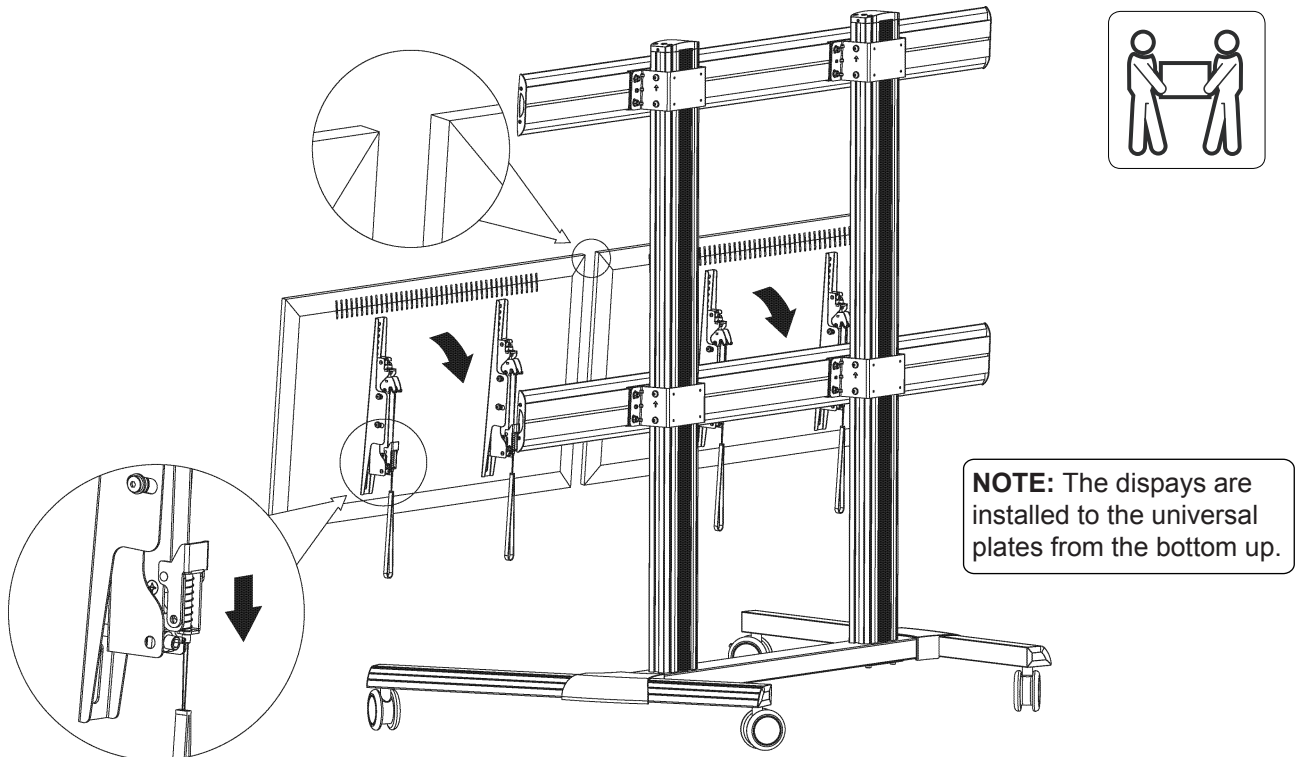

 
2. Lift the display carefully and pull downward two straps at the same time, then hook the adapter brackets to the universal plates. Fasten the adapter brackets to the universal plate by releasing the straps.
3. The other displays are hung onto the universal plates in the same way.

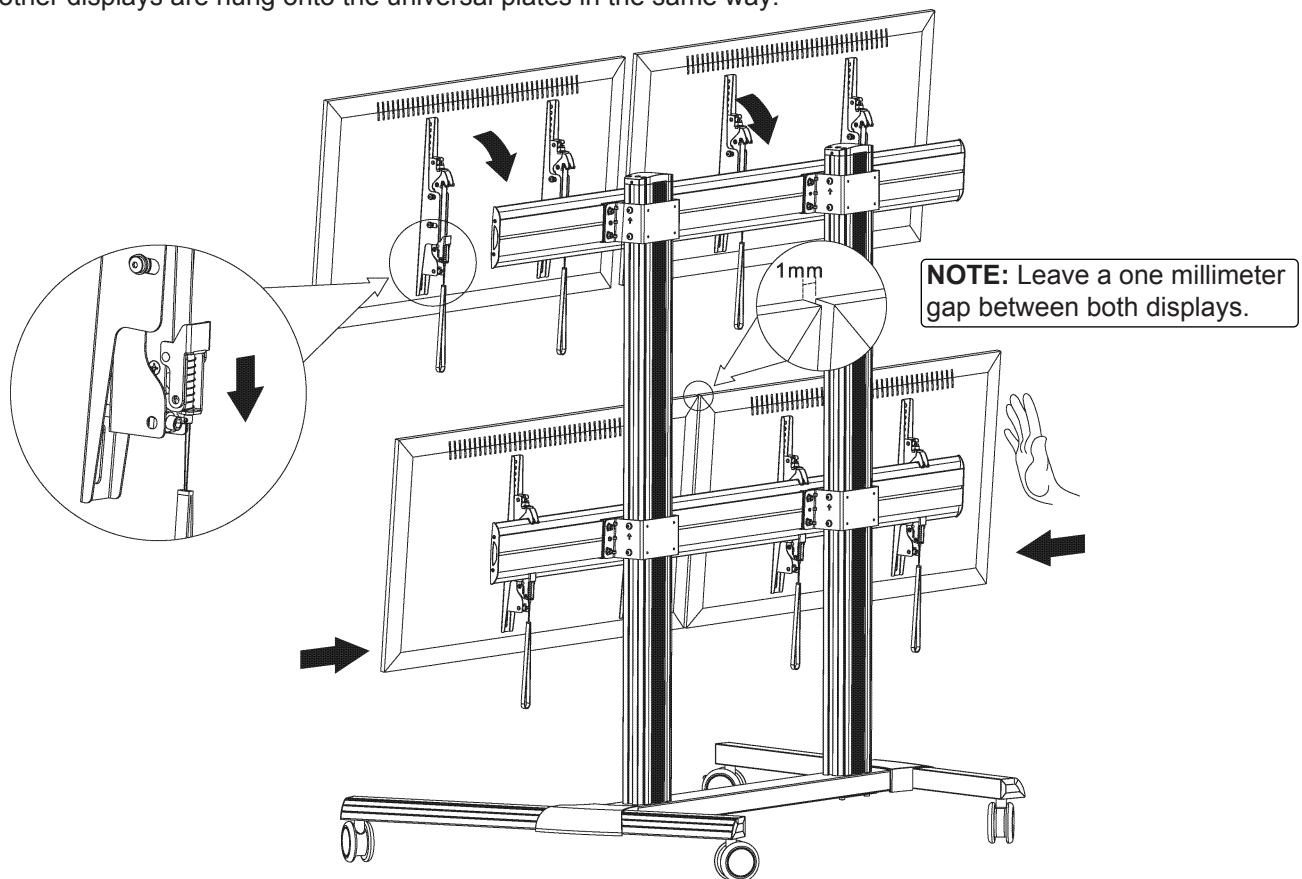

Hooking The Displays Onto The Universal Plates (Continued)


1. Use the padlocks to prevent the displays from being stolen (The padlocks are included).

 NOTE: Leave a one millimeter gap between both displays.

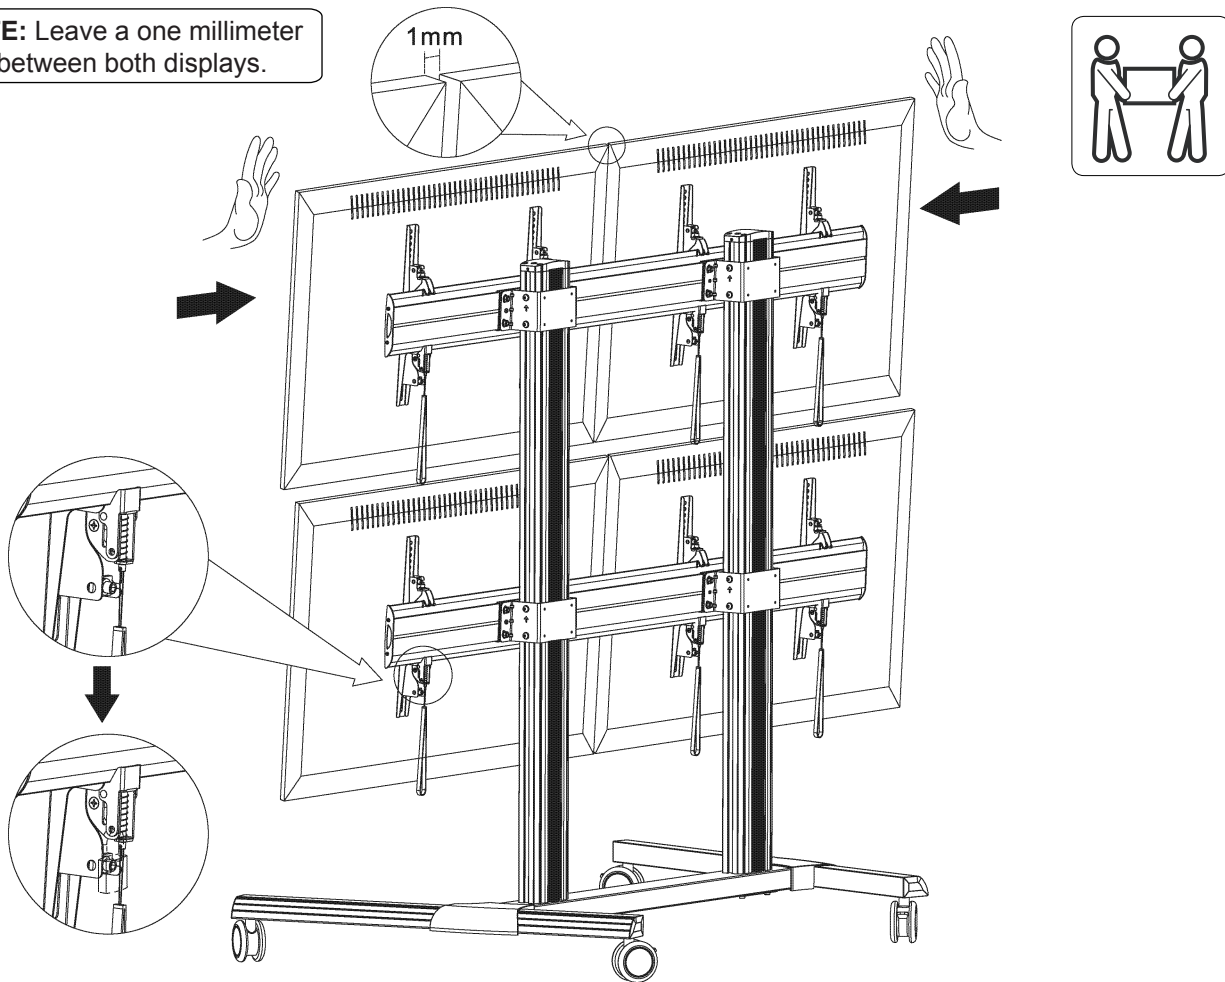


Micro Adjustments

 1. If the display is uptilted, rotate the adjustment screws as shown in figure below.

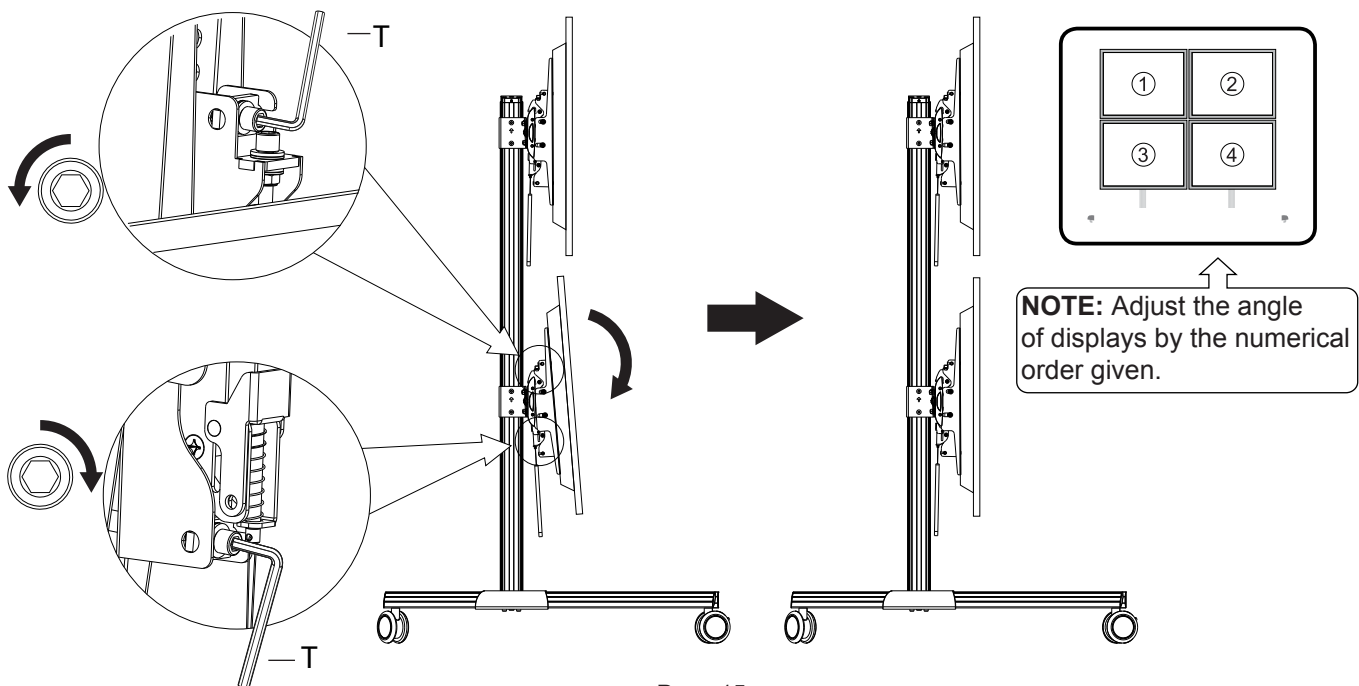


Micro Adjustments (Continued)

 1. Rotate the adjustment screws as shown in figure to make a one millimeter gap left between the upper and lower displays.

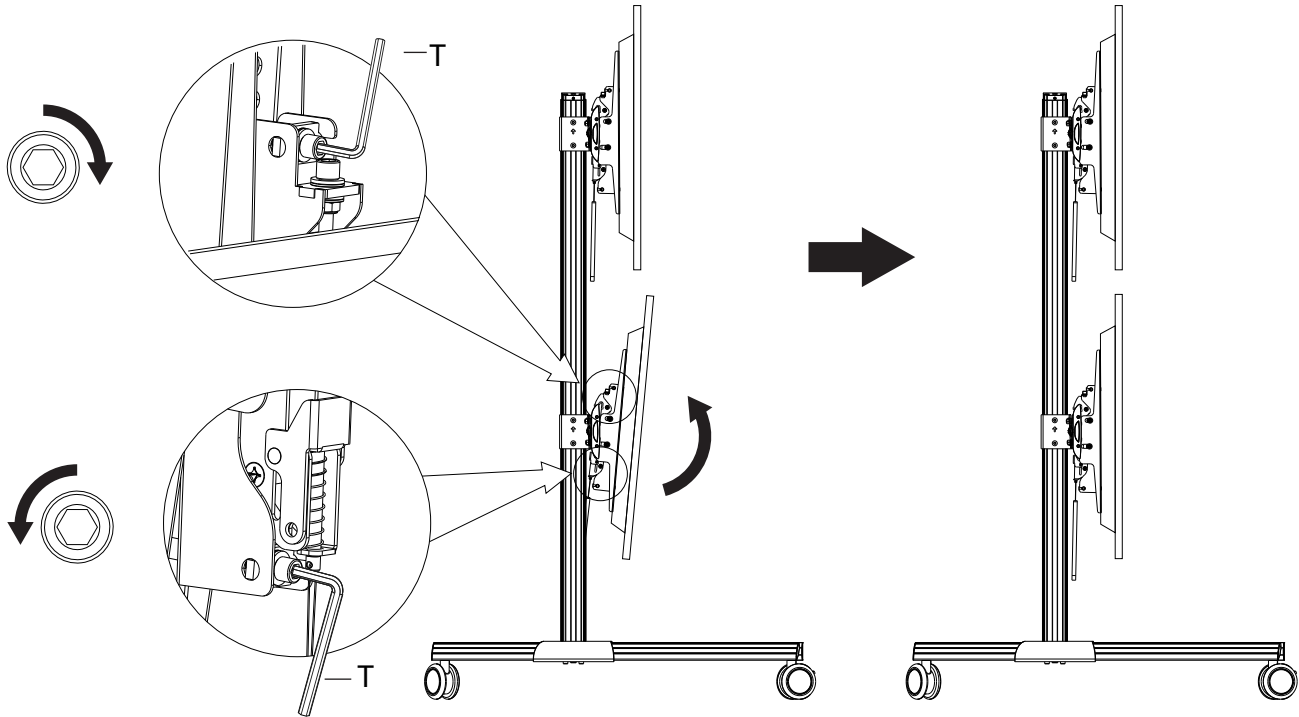


 2. If the display is tilted down, rotate the adjustment screws as shown in figure below..

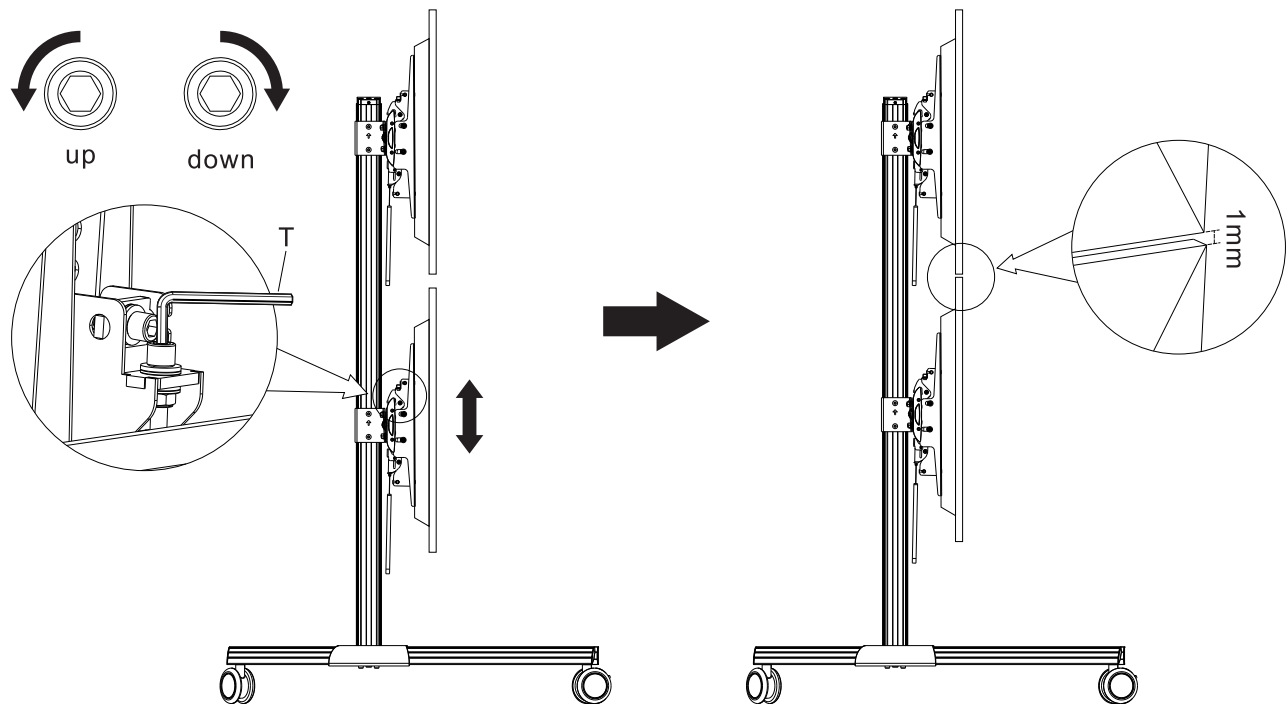


Installing The Power Strip

 1. Attach power strip brackets to desired column at a suitable location using screws and oval nuts. Tighten all screws with a Phillips screwdriver and snap power strip into brackets to complete installation.

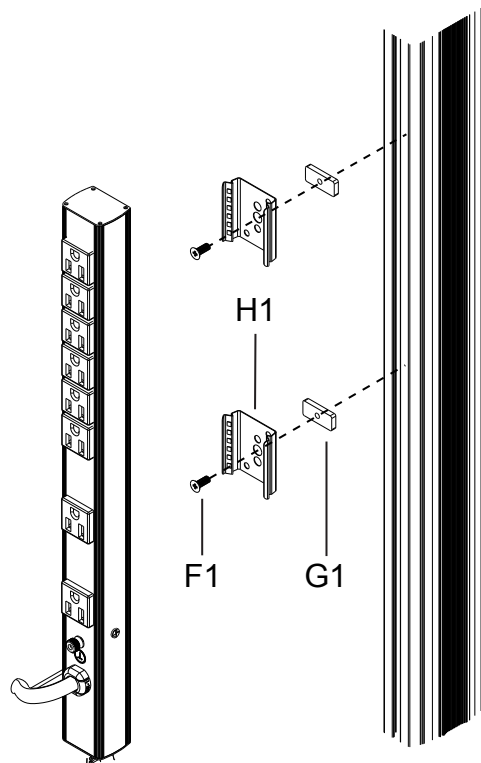


Cable Management

 1. Insert the cable clamps horizontally into the plate slots, then turn the cable clamps to the vertical to secure them.

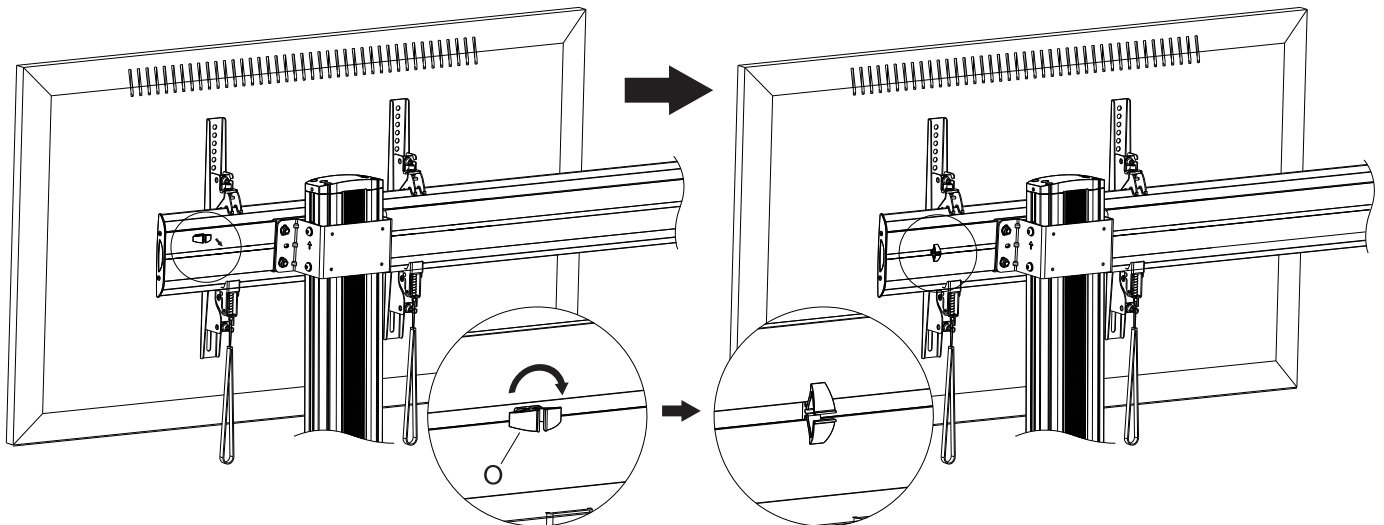

Cable Management (Continued)

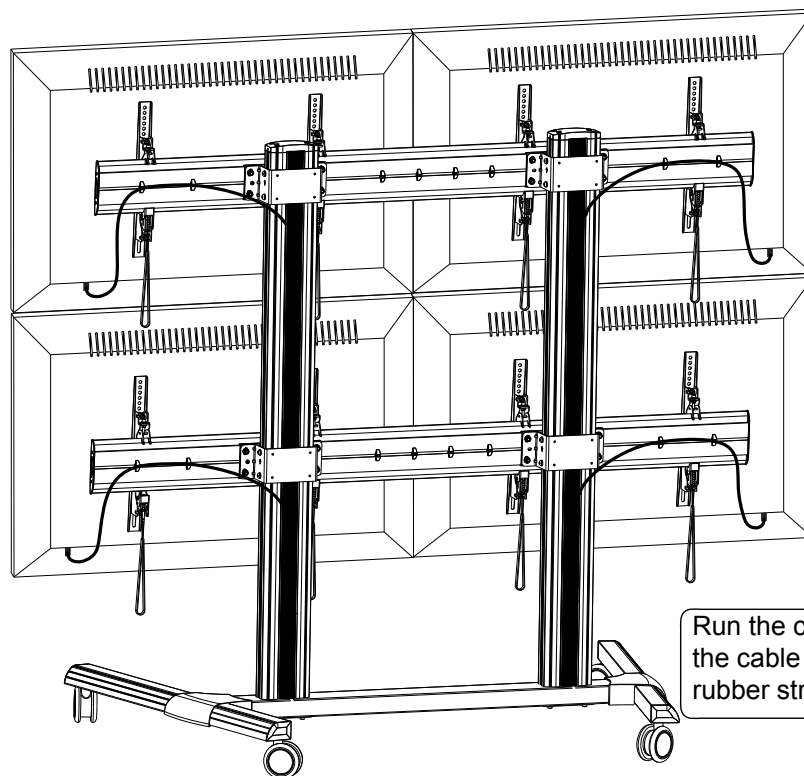 

Maintenance

- Check that the bracket is secure and safe to use at regular intervals (at least every three months).
- Please contact your distributor if you have any questions.

WARRANTY

Middle Atlantic Products (the "Company") warrants the The Display Station DS-600-2X2L-AL / DS-600-2X2C-AL to be free from defects in material or workmanship under normal use and conditions for a period of (7) seven years from date of shipment by the Company.

The Company's entire liability to the purchaser, and the purchaser's (or any other party's) sole and exclusive remedy, under this warranty shall be limited, at the Company's option, to either (a) return of and refund of the price paid for, or (b) repair or replacement at the Company's factory of the products purchased, or any part or parts thereof, which the Company has determined to be defective after inspection thereof at the Company's factory.

This warranty does not cover damage due to acts of God, accident, misuse, abuse or negligence by parties other than the Company, or any modification or alteration of the products. In addition, this warranty does not cover damage due to improper handling, assembly, installation or maintenance.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF THE PRODUCTS PURCHASED, EVEN IF THE COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE COMPANY'S LIABILITY TO THE PURCHASER (OR ANY OTHER PARTY) HEREUNDER, IF ANY, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCTS PAID TO THE COMPANY.

Corporate Headquarters

Corporate Voice 973-839-1011 - Fax 973-839-1976 / International Voice +1 973-839-8821 - Fax +1 973-839-4982
middleatlantic.com - info@middleatlantic.com

Middle Atlantic Canada

Voice 613-836-2501 - Fax 613-836-2690 / middleatlantic.ca - customerservicecanada@middleatlantic.ca

Factory Distribution

USA: NJ - CA - IL Canada: ON - BC

At Middle Atlantic Products we are always listening. Your comments are welcome.

Middle Atlantic Products is an ISO 9001 and ISO 14001 Registered Company.