### **Specifications**

Environment	PC environment – PS/2 Keyboard/Mouse		
Devices	PCs, laptops, servers, and any equipment supporting PS/2 devices		
Transmission	Transparent to the user		
Bandwidth	DC to 1 MHz		
Signals	Mouse data, mouse clock, keyboard data, keyboard clock, VCC,		
Signals	ground		
Connectors	500045: Dual 6-pin mini DIN female for keyboard/mouse side		
	500046: Dual 6-pin mini DIN male with 6-inch lead for PC side		
	RJ45 for twisted pair		
Color Code	Keyboard: purple		
	Mouse: green		
Max. Distance via	350 feet (106 m)		
Cat 5E/6 UTP/STP Cable			
RJ45 Pin Configuration	Keyboard Mouse		
<b>Reverse Polarity Sensitive</b>	Pin 4(R) Pin 5(T) Pin 1(R) Pin 2(T)		
	Pin $7(R)$ Pin $8(T)$ Pin $3(R)$ Pin $6(T)$		
	Use EIA/TIA 568 A or B, straight-through wiring		
Cable	Category 5E/6 or better twisted pair cable		
Temperature	Operating: 0° to 55°C		
	Storage: -20° to 85°C		
	Humidity: Up to 95% non-condensing		
Enclosure	ABS fire retardant plastic		
Dimensions	500045: 2.40" x 2.25" x 1.00" (6.10 x 5.72 x 2.54 cm)		
	500046: 1.875" x 1.0" diameter plus 6" PS/2 cable lead		
Weight	1.6 oz (45 g)		
Mounting	500046: Velcro pad		
Regulatory	FCC, CE (pending)		
Warranty	Lifetime		
Order Information	500045 PS/2 Converter - PS/2-F, Keyboard/Mouse Side		
	500046 PS/2 Converter – PS/2-M, PC/Server Side		



# PS/2 Converter 500045, 500046 Quick Installation Guide

#### Overview

The PS/2 Converter allows a standard PS/2 keyboard and mouse to be connected to a PC up to 350 feet (approximately 106 meters) via a Category 5E/6 unshielded twisted pair (UTP) cable in a point-to-point configuration.

There are two components: The device-side component (500045) connects easily to a PS/2 keyboard and mouse. The other component (500046) connects easily to the PC. Both models may be used in pairs or in conjunction with each other.

Typical applications include classroom projector systems, digital signage, boardroom systems, collaborative PC systems, and medical information systems.

8495 Dalton Road, Mount Royal, Quebec, Canada. H4T 1V5 Tel: (514) 905-0588 Fax: (514) 905-0589 Toll Free (North America): (877) 689-5228 E-mail: <u>videoease@muxlab.com</u> URL: <u>www.muxlab.com</u>

94-000381-B SE-000415-B

### Installation

One (1) pair of converters is required to connect a keyboard and mouse to a remote PC via Cat 5E/6 twisted pair. To install the converters, perform the following steps:

1. Plug the keyboard into the purple connector and the mouse into the green connector on the device-side converter (500045).



2. Connect the second converter (500046) to the PC by plugging the purple connector into the PC's keyboard port and the green connector into the PC's mouse port.



- 3. Complete the connection between the two converters using standard Cat 5E/6 twisted pair cable terminated by RJ45 plugs at both ends. Ensure that there are no split pairs or taps.
- 4. Power-on or restart the PC. You may not have to restart if the PC supports "hotswapping" for both keyboard and mouse. The following diagram shows a typical installation.



## Troubleshooting

The following table describes some of the symptoms, probable causes, and possible solutions in respect to the installation of the PS/2 Converter:

Symptom	Probable Causes	Possible Solutions
Pointer does not move. No keyboard output.	Faulty cable connection	Verify cable continuity between pairs of converters. Verify that connectors are properly matched (keyboard-keyboard, mouse-mouse).
	PC does not support hot- swap for peripheral devices	Restart the PC.

If you still cannot diagnose the problem, please call MuxLab Customer Technical Support at 877-689-5228 (toll-free in North America) or (+1) 514-905-0588 (International).