



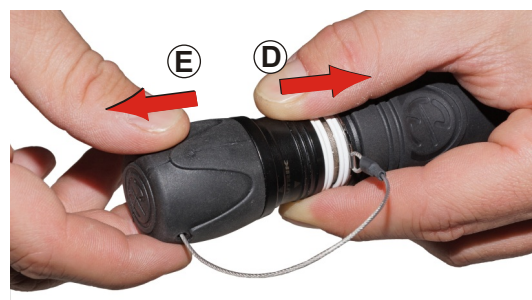

HANDLING INSTRUCTION

SCNO*X-A & SCNO-FDW-A | opticalCON protection covers

SCNO*X-A | opticalCON - cable connector cover

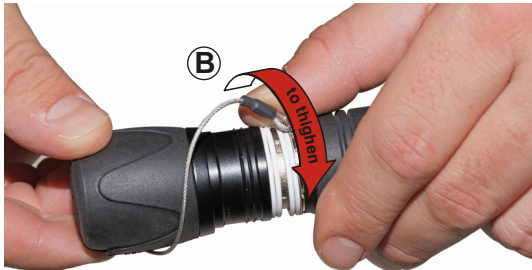

Mate protection cover

- Ⓐ Push the cover onto the connector front shell until it locks.
- Ⓑ Rotate the safety ring to tighten the steel cord around the connector body to protect the steel cord from damage.

FINISH



Removal protection cover

- Ⓒ Rotate the safety ring to lose the steel cord.
- Ⓓ Release the connector locking device.
- Ⓔ Remove protection cover.

FINISH






SCNO-FDW-A | opticalCON - chassis connector cover


Dust cover assembly

- Ⓐ Mount steel cord onto the opticalCON chassis connector.

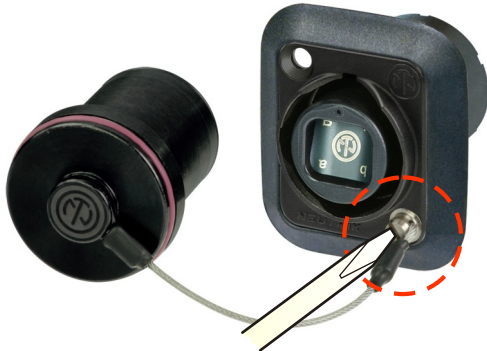

Dust cover handling

- Ⓑ Push the cover completely into the chassis until you feel a locking snap.

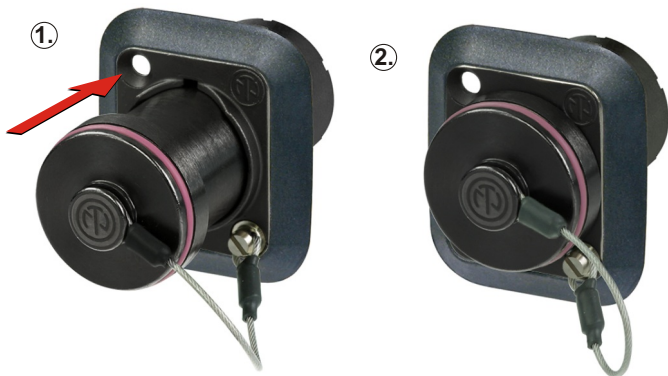

Applications example:

Cover application of chassis and cable connector (SCNO*X-A & SCNO-FDW-A).

- Ⓑ Mate cable connector and chassis connector cover to avoid contamination as long the connector is plugged.



NEUTRIK AG
NEUTRIK USA Inc.
NEUTRIK (UK) Ltd.
NEUTRIK Vertriebs GmbH

LI
USA
UK
DE/NL/AT/DK

T: +423 / 237 24 24
T: +1 704 / 972 3050
T: +44 1983 / 811 441
T: +49 8131 / 280 890

F: +423 / 232 53 93
F: +1 704 / 438 9202
F: +44 1983 / 811 439
F: +49 8131 / 280 830

NEUTRIK France
NEUTRIK Tokyo Ltd.
NEUTRIK Hong Kong Ltd.

FR
JP
HK

T: +33 1 / 4131 6750
T: +81 3 / 3663 4733
T: +852 / 2687 6055

F: +33 1 / 4131 0511
F: +81 3 / 3663 4796
F: +852 / 2687 6052