

PrompterPro 3

PC Software QUICKSTART GUIDE

Teleprompter Setting

Keyboard shortcuts:		Main Menu Options:	
F5	Stop / Start Scroll Up	Open File	Allows you to browse you computer for a file.
F6	Stop / Start Scroll Down	Show Prompt	Displays the file you are currently working on.
F7	Go to top of prompt	New File	Create a new file for prompting.
F8	Go to end of prompt	Save File	Save the progress of your file.
F9/ cmd shift+up	Speed Down x10	Demonstration	Puts the software in demonstration mode.
F10/ cmd shift+dwn	Speed Up x10	Setup	Allows you to toggle the font and BG color.
F11/cmd+up	Speed Down	Exit	It will exit from the program.
F12/cmd+dwn	Speed Up	To change the color of the font simple enter the file that you want to prompt. Then highlight the word or letter and right click on the mouse and a color palette will appear. * PrompterPro 3 supports both RTF files and Text files. * For any additional questions about PrompterPro 3 please call us at 713-272-8822.	
Ctrl/cmd + O	Open File		
Ctrl/cmd + S	Save File		
Ctrl/cmd + H	Show / Hide Tool bar		
ESC	Close Prompt Window		
Up/Down Arrows	Speed Up/Down * Scroll Up/Down		
Mouse shortcuts:			
Left Click/ cmd+click	Stop / Start Scroll (Start when tool bar is hidden)		
Right Click/ ctrl+click	Show / Hide Tool bar		
Mouse Wheel	Speed Up/Down * Scroll Up/Down		



QUICKSTART GUIDE

PrompterPro 3

Teleprompting Software for PC

Supports Windows XP | Vista | 7 | 8

PrompterPro 3

PC Software Quickstart Guide

 
Installing PrompterPro 3 (PC version only)

1. Insert the CD into the CD Drive on your computer. (If your PC does not have a CD Drive, you can download the software at <http://ikancorp.com/productdetail.php?id=389>)
2. Open "My Computer" from your desktop.
3. Double-click on the "PrompterPro 3.x.x" CD icon.
4. Double-click on the "PC" folder, then double-click on the "PrompterPro 3" folder.
5. Double-click on "PrompterPro3.msi".
6. Follow the easy installation instructions.


Setting up PrompterPro 3

If this is your first time installing any version of PrompterPro 3 on your computer, you will be prompted to enter an activation key. You will find the activation key inside the CD case.

Software Interface

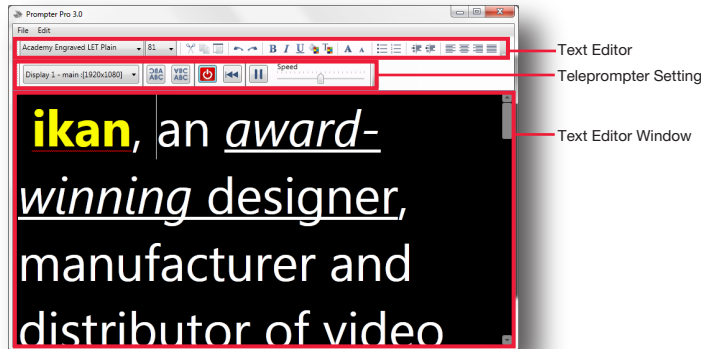


Text Editor Setting

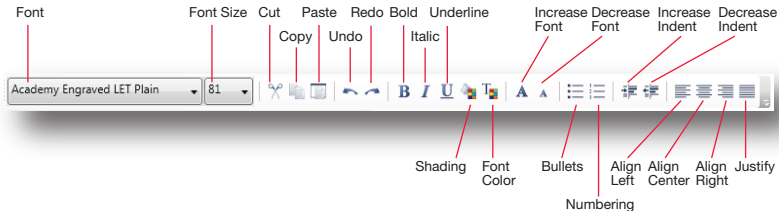 

PrompterPro 3

PC Software Quickstart Guide

 Teleprompter Setting

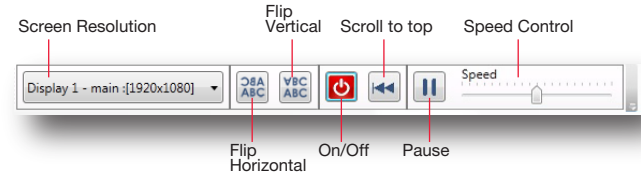

Text Editor Window

