American DJ®

## Par-46, 56, and 64 LAMP AND GEL REPLACEMENT

This Par can has been tested and the lamp has been installed at the factory. However, the lamp is not connected to the socket. You must remove the packing foam and connect the lamp to the socket. There is no power switch, after plugging the Par can in, it will light up. This Par can is fitted with a lamp which is highly susceptible to damage if improperly handled. Never move the fixture until the lamps have had ample time to cool. Remember, lamps are not covered under warranty conditions.

WARNING! The Par can lamp is packed to protect against cracking during shipping. Please remember to remove all packing material before connecting to a power source.

**Lamp Replacement: Caution!** Always disconnect the main power before attempting to replace the *lamp*. Remember always replace with the same type lamp.

WARNING! The Par can lamp is packed to protect against cracking during shipping. Please remember to remove all packing material and connect the lamp to the socket before connecting the Par can to a power source.





## **Color Gel Replacemet:**

1. Press down on the gel release clip.



## Lamp Replacement:

 Disconnect the main power, and allow ample time for the lamp to cool.
Pull the thumb knob located on the top of unit.



2. While pressing down on the gel releae clip, simply slide the color gel out.



3. Slide the back end apart from the front.

## Lamp Replacement cont.:



©American DJ® A Division of the American DJ Group of Companies American DJ® World Headquarters: 4295 Charter Street Los Angeles, CA 90058 USA Tel: 323-582-2650 / Fax: 323-582-2610 Web: www.americandj.com / E-mail: info@americandj.com