

The AS4x1  
and AS4x1R

Audio Switcher  
Four Input Stereo  
with RS232

Manual Version 3.0




**BURST ELECTRONICS INC**  
**ALBUQUERQUE, NM 87109 USA**

**(505) 898-1455**

**(505) 898-0159 FAX**

**[www.burstelectronics.com](http://www.burstelectronics.com)**

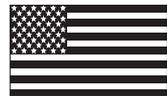

Made in USA

Hardware, software and manual copyright by Burst Electronics. All rights reserved. No part of this publication may be reproduced or distributed in any form or by any means without the written permission of Burst Electronics.





## Four Input Audio Switcher

### Overview

The Burst Electronics Model AS4x1 Audio Switcher is a Four-channel stereo audio (unbalanced) switcher with built-in monitor amp and speaker. The input and output connectors are Phono (RCA) type. The output is selected by the appropriate front panel channel switch. An LED indicates the active channel. The input gain is unity. The volume control affects the monitor speaker and the front panel monitor jack only. The Model AS4x1R (R signifies Remote Control) includes a RS232 interface.

### Power

Power is from the supplied 12 Vdc wall adapter. The AS4x1 may also be powered from an external 12 Vdc source. The dc power input has an autopolarity feature. You must feed it dc (not ac), of either polarity.

### Operation

Select the input by pressing the appropriate input channel switch. The LED for that switch will illuminate. Upon power up, the AS4x1 defaults to channel one.

The channel LED also acts as a peak or clip indicator. When the input signal is at +12 dB (ref to 0 dBm), the peak/clip LED will flash.

## Monitor Amp

The built in monitor amp will drive the internal 3" speaker or external headphones or speakers. There is a separate summing amp that drives the internal speaker. This amp sums the L and R channels.

The front panel monitor amp output is stereo via a 3-conductor 3.5 mm jack. The volume is set by the front panel control. This control has no effect on the rear outputs.

## Specifications:

### Audio

All spec ref 0 dB (0.77 Vac)

Bandwidth: 10 Hz to 40 kHz @ 1/4 dB

2 Hz to 70 kHz @ 3 dB

THD: 0.03% @ 20 Hz, 0.03% @ 1 kHz, 0.15% @ 20 kHz

S/N: 85 dB/100dBA

Crosstalk: >85 dB

Channel Separation: >50 dB

Headroom: +12 dB (3.1 Vac)

Peak Detector: Factory set to +12 dB

Input Impedance: 100k Ohms

Output Impedance: 100 Ohms

### General

Audio Connector: Phono (RCA)

Internal Speaker: 3 inch

Headphone/External Speaker Connector:

3.5 mm Stereo, Tip: Left

Size: 4.2W x 1.5H x 5.5D inches

Power: 8 to 14 Vdc 30 mA quiescent, 200 mA max,  
polarity insensitive

Wall Module Power Supply Included

Rack mount available, holds four units, side by side

Model RM4

### RS232 (Model AS4x1R)

Data: 2400 Baud 8N1, listen only

Connector: 3.5 mm 3 conductor (stereo connector)

## Remote Control

The RS232 Commands apply to the Model AS4x1R only.

The data transmission to the AS4x1R is 2400 baud 8N1.

To cause the AS4x1R to switch to an input, issue the command: Ax, where x is the channel number. Example: A2 will cause the AS4x1R to switch to channel two.

If a VS4x1R Video Switcher and a AS4x1R Audio Switcher are used together, then the command Bx will cause both units to switch.

### Commands to the AS4x1R:

<u>Command</u>	<u>Function</u>
Ax	Switches to x Channel
Bx	Switches to x Channel and causes the VS4x1 to also switch


## Audio/Video Switching

To switch both audio and video, use a AS4x1R Four-Channel Audio Switcher and a VS4x1R Four-Channel Video Switcher. These two units can be linked together via RS232. With the two units linked, audio follows video and audio breakaway is possible.

Interconnect the RS232 ports of the AS4x1R and VS4x1R using a “Stereo Patch Cable” with 3.5 mm stereo plugs on each end. An example is a Radio Shack 42-2387. See the VS4x1 manual for more details.

# AS4x1 SERIAL INTERFACE CABLE


## 3.5 mm Type

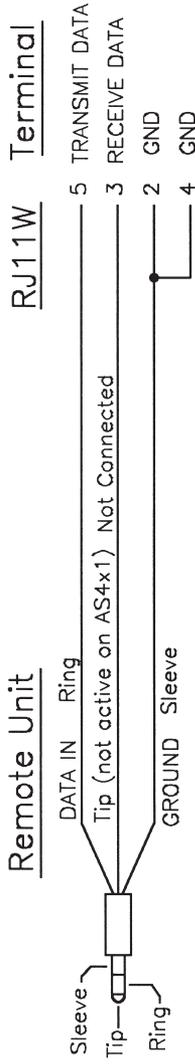

1/8 inch (3.5 mm) Stereo Male Plug

Radio Shack 274-284 or 42-2387

Mouser 161-3504 Audio Jack

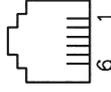

Male RJ11


6 Position, 4 Wire

Note: AS4x1 is a listen only device. It does not echo back to the terminal. This cable is for controlling a AS4x1, if controlling both a VS4x1 and AS4x1, see Drawing XS41CBLA.SCM

Title		AS4x1 SERIAL CABLE	
Size	A	BURST ELECTRONICS	Rev B
Date	11.06.00	Corrales, New Mexico 87048	
Filename	AS41CBLB.SCM	Drawn by	WJK
		Sheet	1 of 1

# VS4x1R/AS4x1R SERIAL INTERFACE CABLE


## 3.5 mm Type

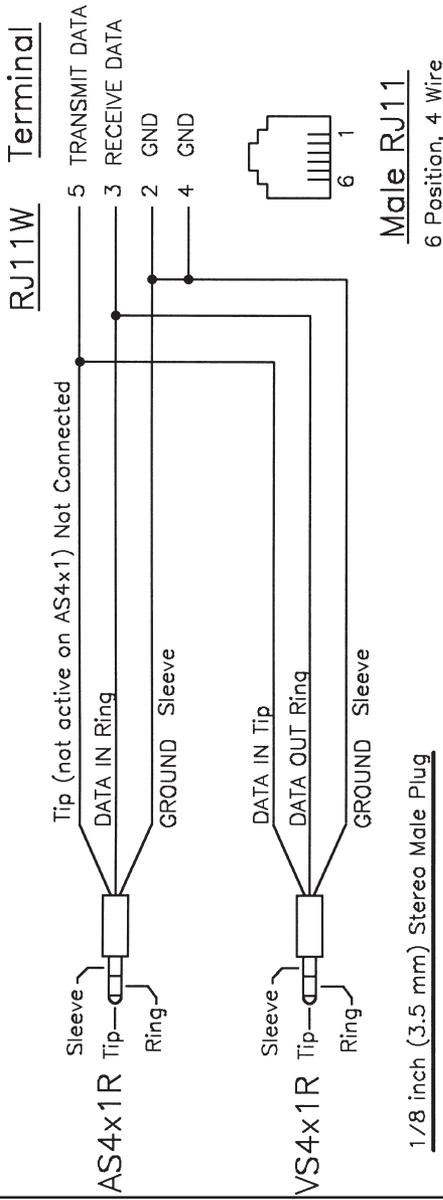

Title <b>V/AS4x1R SERIAL CABLE</b>		
Size	BURST ELECTRONICS Corrales, New Mexico 87048	Rev A
Date	1-11-99	Drawn by WJK
Filename	XS41CBLA.SCM	Sheet 1 of 1


# SERIAL INTERFACE ADAPTER ( DB9 TYPE )

## DB9S

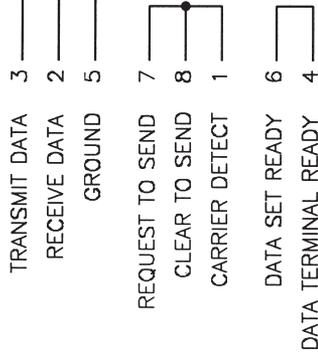


Controlled  
Device  
RJ11

## RJ11W

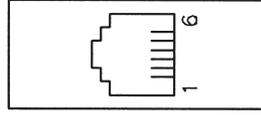

RJ11 VIEW

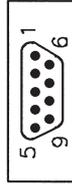

Socket (Female) Type

DB9S VIEW

Title		SERIAL INTERFACE ADAPTOR	
Size	A	BURST ELECTRONICS	Rev
Date	3-5-98	Corrales, New Mexico	D
Filename	db9	d.scm	Sheet 1 of 1
		Drawn by	WJK





# SERIAL INTERFACE ( DB25 TYPE )

Direct Modem Connection  
RS232 Modem Port  
DB25 Male

Computer Connection  
RS232 Serial Port  
DB25 Female

Controlled  
Device  
RJ11

RJ11W  
RJ11  
Cable

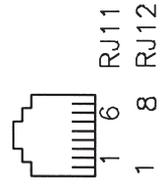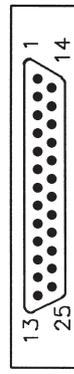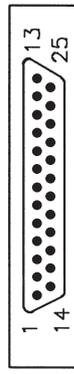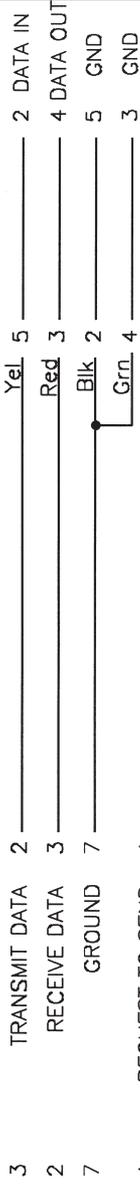

Title		SERIAL INTERFACE ADAPTOR	
Size	A	BURST ELECTRONICS Corrales, New Mexico 87048	Rev D
Date	3-5-98	Drawn by WJK	
Filename	db25_d.scm	Sheet	1 of 1

DB25 VIEW

