



18" Blacklight


NV-F18

Users Guide

Please read these instructions carefully before use

World-wide Headquarters:
3000 North 29th Ct., Hollywood, Florida, USA, FL 33020
Tel: +1-954-929-1115 Fax: +1-954-929-5560

www.ChauvetLighting.com

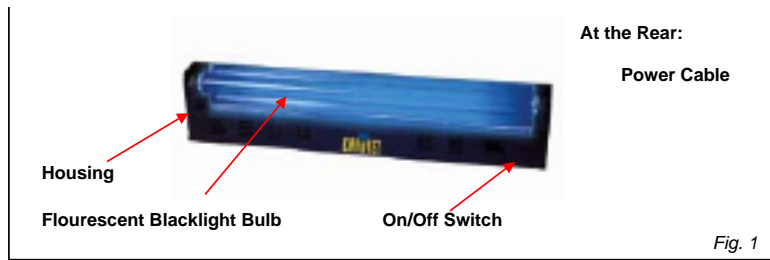

Introduction

Congratulations on the purchase of your new CHAUVET lighting effect. We are confident you will enjoy many trouble free hours with this unit. To assist with the care and use of the product we have prepared this short guide.

Operation

This lighting effect has been designed to function on a mains power supply of either 120V~60Hz or 230V~50Hz and has been fitted with a suitable power plug for use with this voltage. Check the label on the unit and the power plug for the correct voltage.

Before beginning operation refer to section on Installing/Replacing Bulbs. Connect to the mains power supply and switch on. The unit should illuminate casting an ultra - violet glow.

The duty cycle for this effect should be no more than 15 minutes on then 15 minutes off.

Installing/Replacing Bulbs

1. Disconnect from main power supply before attempting to install/replace lamp.
2. Ensure that the unit is sufficiently cool, before removing blown lamps.

In order to install the lamp, disconnect from main power supply first. Gently twist fluorescent bulb counterclockwise to remove (fig. 1). Replace bulb. Only use the appropriately rated bulb as use of any other lamp may cause the unit to be non-operational.

Finally, before using, check that the bulb is housed correctly.

Cleaning

The most important part of your lighting effect to keep clean is the bulb as this allows the light output to transmit. This should be cleaned with a soft damp cloth. The body of the unit may also be cleaned in the same way. We recommend internal cleaning be carried out by a fully qualified technician.

Troubleshooting

- If the unit is not functional - check main power supply is 'on'.
 - If the bulb does illuminate - shipping may cause bulb to loosen. Tighten bulb.
 - If the unit is functional but lamp does not light - lamp may require replacing.
- If after trying this solution you still have a problem contact your dealer or CHAUVET.

Maintenance & Servicing

Work on internal parts should be carried out by a qualified technician. Removal of any covers is considered a breach of warranty and will not be covered under any such agreement unless authorized first by the company.

Caution

No user serviceable parts, please refer to CHAUVET for service.

Power Connections

The unit is supplied with a power plug appropriate to its voltage and destination. Should any other connections be required they must be carried out with the following configuration.

Earth = Green/Yellow cable
 Neutral = Blue cable
 Live = Brown cable

In the USA & Europe, it is required that all plugs are 3-pin type i.e. with Earth/Ground connection. In the UK, it is required that all mains plugs are fitted with 5A fuses.

Technical Specifications

Power	120V~60Hz	230V~50Hz
Lamps	Part No. NV-F15BLB	Part No. NV-F15BLB
Dimensions	457mm x 89mm x 38mm / 18in x 3.5in x 1.5in	
Weight	0.9kg /1.9lbs	

User Information (Please complete for your records)

Date Purchased: / / *Serial No:* _____

Dealer Stamp: *Model:* NV-F18 18" BLACKLIGHT