

Eliminator[®]

LIGHTING

E 116[™]

PORTABLE TRUSSING SYSTEM

Specifications: E 116[™]

Weight: 42 lbs.
System Capacity: 200 lbs.
Aluminum Diameter: 1 1/2"
Warranty: 1 Year Limited Warranty

E 116 PARTS LIST

2 x T-Bars
4 x Side Mount T-Collars
1 x Center "I" Support Bar
2 x Center Posts for Tri-Pod Stands
2 x 5" Truss I-Beam Sections w/Spigot
2 x 9" Tri-Pod Stands
6 x Safety Pins
1 Hexagon Allen Wrench
(Inserted in 5" Truss End)

INSTRUCTIONS FOR ASSEMBLING YOUR E 116[™]:

Everything is included to assemble your E 116[™].

1. Open up the two Tri-Pod Stands. There are two Center posts which are packed in the E 116[™] that need to be inserted into each Tri-pod stand. Tighten tri-pod knobs, leaving inserted post exposed enough to mount Truss to top of bar.
2. Connect the two 5 ft. sections of Truss together using the spigots (flanges), mounting screws and wing nuts attached to interconnect the two. There is a center support Bar that has two T-collars attached to each end. This connects between the two 5 ft. sections. The spigots fit inside of this. Remove the two screws and wing nuts and fit center support bar onto the truss section with the spigots attached. Connect the other 5 ft. truss section and insert screws and wing nuts. Tighten allen screws in the center support bar with the allen wrench supplied.
3. Next, mount two Side mount T-Collars to each end of the 10 ft. truss assembly. Slide the fully assembled truss piece onto each tri-pod center post. We suggest doing this on the floor before standing up completed truss system: tighten all allen screws, knobs, and insert safety pins. Once complete, stand system up on tri-pod legs extending them out so that the lower tri-pod leg support bars are parallel to the ground.
4. Connect two T-bars at the top of each T-collar. Make sure there is enough room on the center post above the T-collar to mount the T-bars.
5. We suggest setting the E 116[™] at the desired height before mounting any fixtures to it. Be sure to insert the three safety pins into each tri-pod.

1 Year Limited Warranty: Eliminator Lighting warranty is valid from the date of purchase. Our 1 year limited warranty covers manufacturing defects only. Serial number, place of purchase with dated valid receipt must be submitted at time of service. Eliminator Lighting warranty does not cover items or parts prone to wear and tear: lamps, fuses, brushes and belts. Eliminator Lighting warranty is only valid with-in the United States.