

Thank you for purchasing the **VariZoom VZ-PG-EX** remote zoom controller for the Sony EX. Here are some important guidelines for safe and effective operation...


VZ-PG-EX

Connection: Insert the **VZ-PG-EX** controller cable into the lens servo jack located near the front of the Sony EX). Be sure to match the pin connections carefully. When properly connected, the cable should be firmly seated within the jack.

WARNING: ABUSE OF THE CONNECTOR MAY RESULT IN DAMAGE NOT COVERED BY THE WARRANTY. TREAT THE CONNECTOR GENTLY WHEN CONNECTING AND DISCONNECTING FROM THE LENS.

Power: The **VZ-PG-EX** controller does not require batteries or external power. Just plug the cable into the lens servo jack, and it's ready to use.

Tripod / Jib Mount: Your **VZ-PG-EX** controller comes with a heavy-duty quick-release clamping system to attach firmly to your tripod pan handle, shoulder support or camera crane/jib.

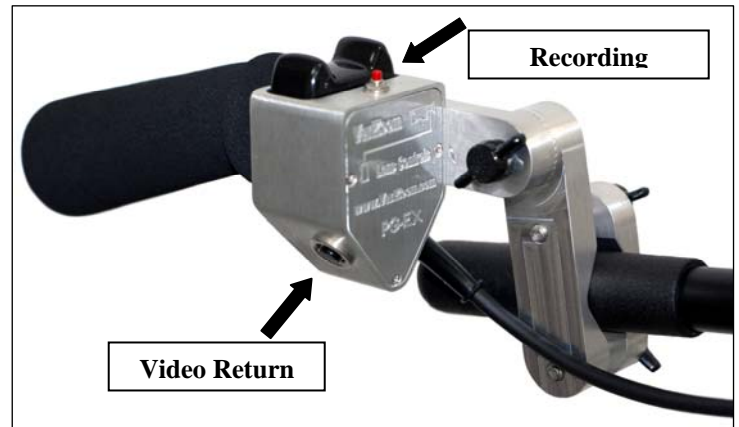

Recording: Press the button next to the zoom rocker to activate the pause and record functions on the camera.

Video Return: Allows you to see what is being recorded through the viewfinder.

Zoom: The thumb rocker is pressure sensitive and allows you to smoothly ramp up to that speed and back down again

Warranty Warning! *Do not open your control device. Opening may void your warranty and possibly render the controller useless. If you need service, send your controller to a VariZoom Service Center only. All controllers have a 2-year parts and labor warranty. Please, save your receipt and send us your comments and suggestions. Thanks!*

-- please keep this document for your records & reference --

VariZoom Lens Controls - 888-826-3399 – 512-219-7722
visit us on the web at www.varizoom.com