


# IB508-v2

## IB508-v2 LED Studio Bi-Color Light QUICKSTART GUIDE

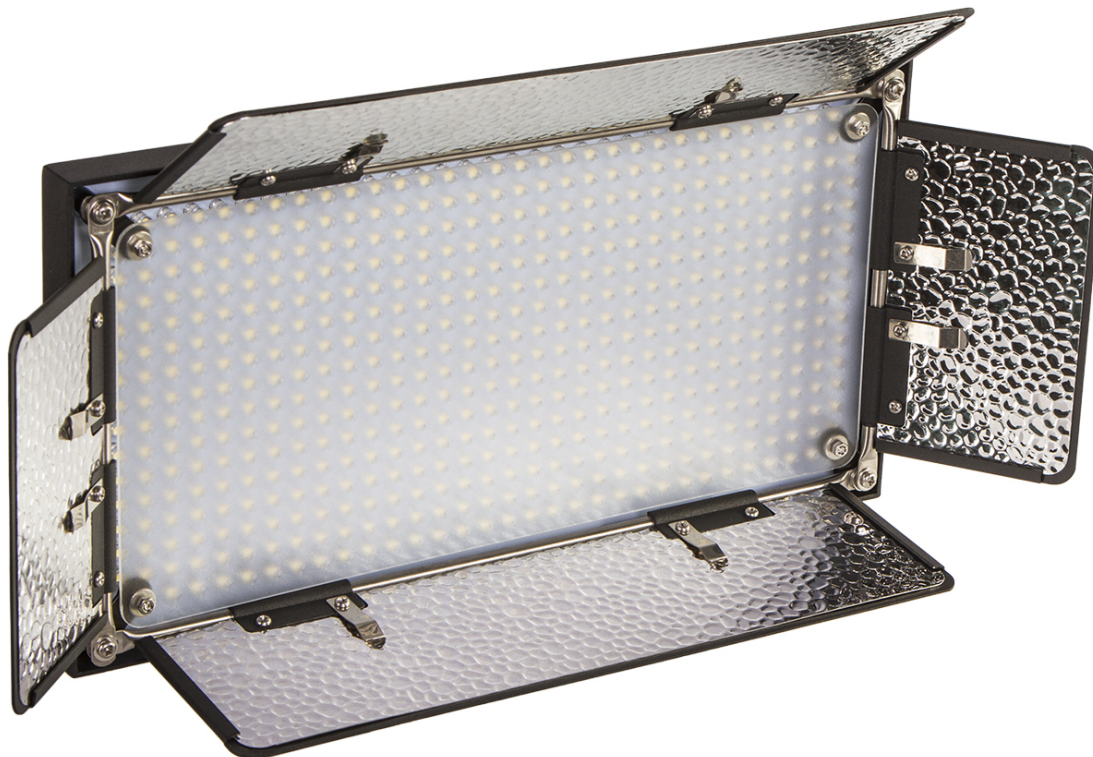

### What's included

- |  |   |
|--|---|
| <input type="checkbox"/> IB508-v2 LED Light      | <input type="checkbox"/> LM-102 Stand Adapter |
| <input type="checkbox"/> AC Adapter              | <input type="checkbox"/> Diffusion Filter     |
| <input type="checkbox"/> Sony "L" DV Battery (2) | <input type="checkbox"/> CTO Filter           |
| <input type="checkbox"/> DV Battery Charger      |   |

Checked by

### CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period has expired.

Free Service will not be Provided in the Following Situations: (\* Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors etc.

ikan


[www.ikancorp.com](http://www.ikancorp.com)

1.713.272.8822  
[support@ikancorp.com](mailto:support@ikancorp.com)

© 2014 ikan Corporation. All right reserved

# IB508-v2

## IB508-v2 LED Studio Bi-Color Light QUICKSTART GUIDE

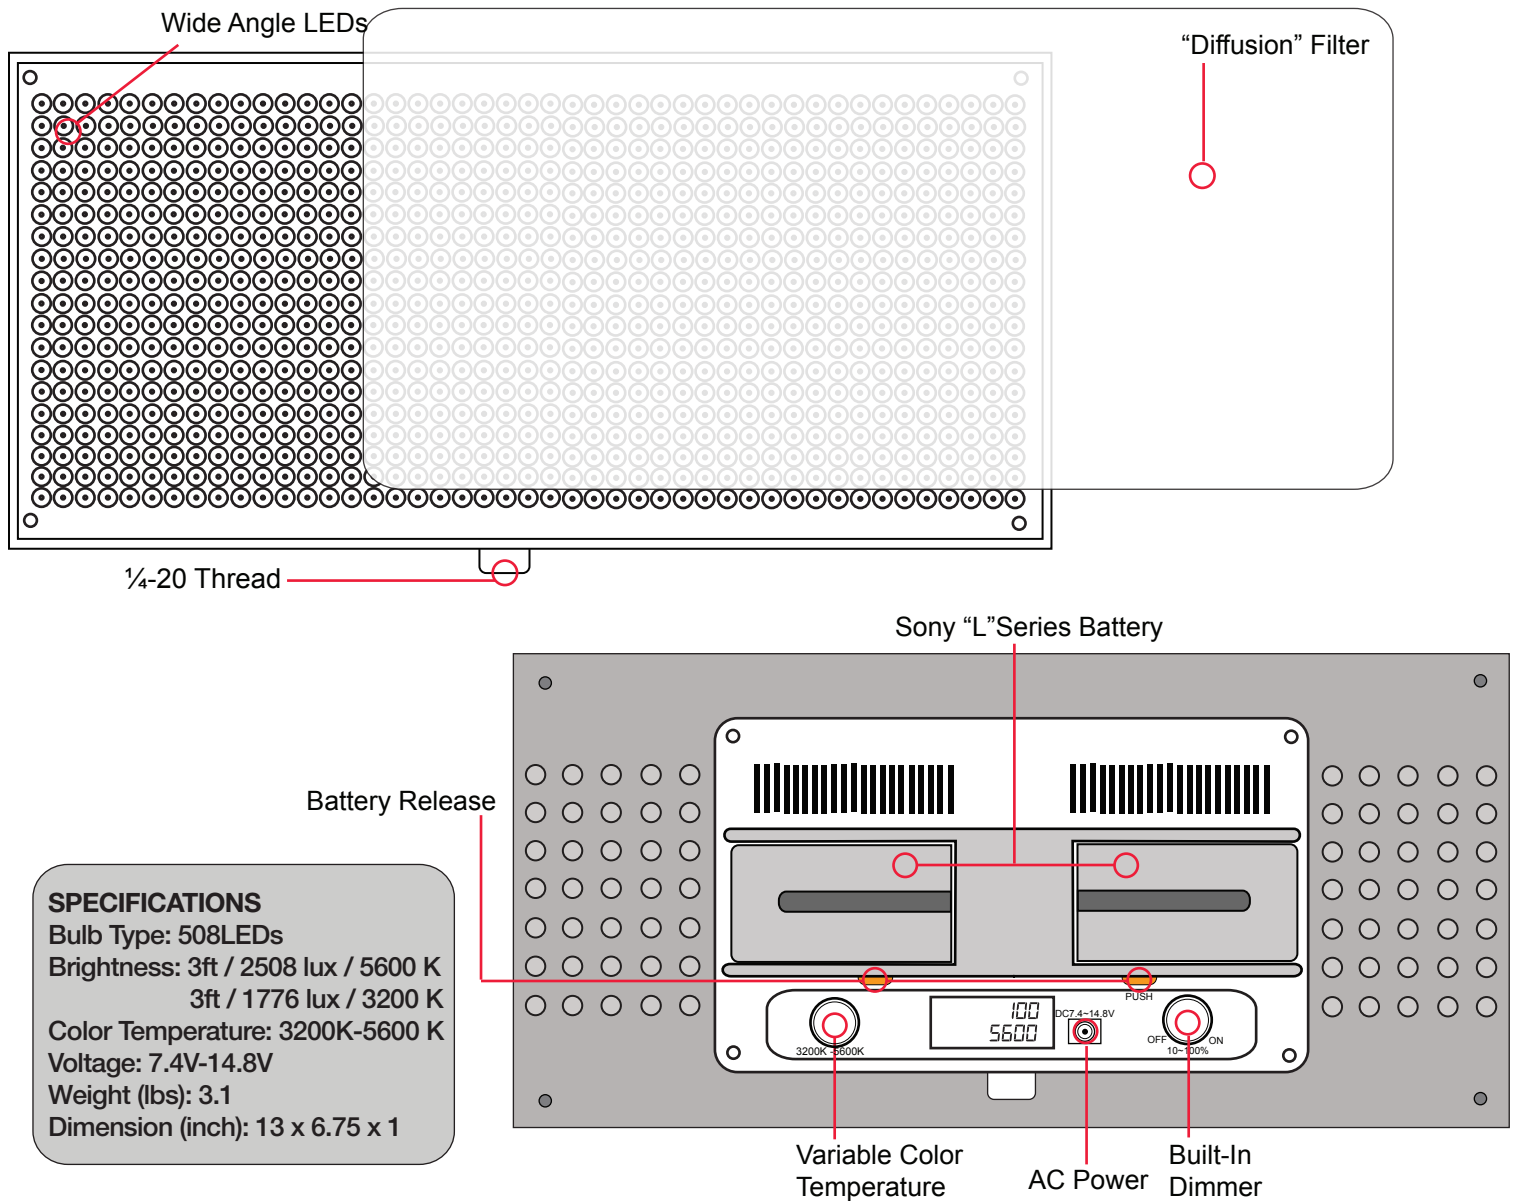

### Notes:

Due to the way the Sony L 500 Series and 300 series batteries are designed, Sony MP-F330/F570/F550 batteries will not work on the left battery slot of the IB508-v2.

When the battery indicator shows only one dot, we highly recommend switching out the battery. Allowing the battery indicator to go below one dot may result in low voltage abnormalities that may cause random LEDs to shut off.