

Instructions for installation and use



WARNING: IT IS IMPORTANT FOR EVERYONE'S SAFETY THAT ALL INSTRUCTIONS ARE FOLLOWED. RETAIN THESE INSTRUCTIONS.

Conditions for use

- This screen is intended for interior use.
- Designed for optimum functioning between 15°C and 25°C and maximum humidity of 80%.
- Must be kept away from sources of heat (as these may cause screen deformation), and protected from splashes of water, steam, dust, smoke or any other hazards that may damage the equipment.

Fixing the screen

- Never pull down the screen fabric before the screen has been properly mounted.
- Position the adjustable brackets along the case.
- **Caution: do not place them further than one third of the length of the case from each end (see A).**
- Mount using screws and pins suited to the type of wall or ceiling: see B or C. It is essential to check that the fixings are secure.
- Ensure that the screen is kept horizontal (max. variation of 3 mm per m).
- Mounting the screen on the brackets: see D.
- Locking the screen on the fixing brackets: see E.



- It is vital that the 2 elastomer locks are in place and kept clean so that they stay in place
- Other fixings available: see catalogue.

Use

Opening the screen: see F

- Pull the ring downwards until the screen is fully unrolled then allow it to roll slowly back up for a few centimeters until it stays in place.

Closing the screen: see G

- Pull the screen down and then release quickly. The screen will retract gently into the case.

Maintenance

- The mechanical components do not require any maintenance
- If the fabric becomes stained, use only a small quantity of industrial ethyl alcohol and rub gently with a non-fluffy white cotton cloth (with any other product, there is the risk of leaving a ring or of destroying the grain).

