

# Assembly Instructions

## Dress-Up Kit/Pipe and Drape Runoff System by Draper

### **Caution**

- ① Be careful not to snag fabric with steel hooks on ends of horizontal drape supports.
- ② If placed on an incline, weights such as sandbags may be necessary to add stability.
- ③ Some drapery fabrics are dry clean only. See fabric care notes below.
- ④ Drapes are hemmed at top and bottom to accept horizontal supports.
- ⑤ Drape panels are 13' wide for setup at 10', with 30% fullness.
- ⑥ Excessive heat, loading and leaving fabrics in dryer too long will detract from the permanent press characteristics.
- ⑦ Hang only recommended drapes from horizontal supports. Do not overload.

### **Dress-Up Kit Assembly**

**PLEASE NOTE: All components are labeled and color coded to facilitate assembly.**

- ① Valance Bar attaches to frame with simple bayonet-style mounting.
- ② Drape Bars mount to Valance Bar, bayonet-style.

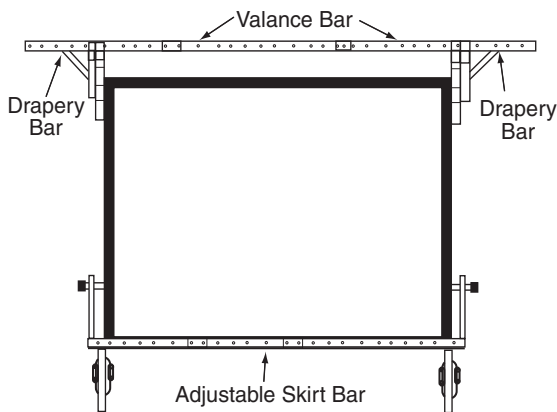


Figure 1

- ③ Optional adjustable Skirt Bar is secured to frame at desired level with positive-locking plunger mechanism. If Skirt Bar is not used, Skirt may be snapped to bottom of viewing surface.
- ④ Valance, Drapes, and Skirt snap onto Mounting Bars.

### **Pipe & Drape Runoff Assembly**

- ① Attach uprights to steel bases using studs and place as close as possible to final position (see Fig. 2).

**NOTE:** Alternate stud locations are provided to allow placement of steel bases against walls or in corners.

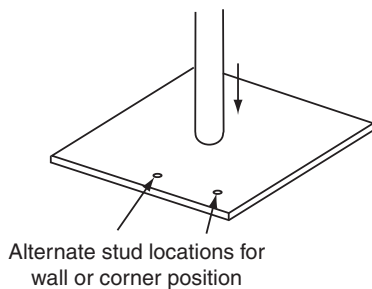


Figure 2

# DRAPER®

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999  
 www.draperinc.com ■ fax 765-987-7142  
 Copyright ©2012 Draper, Inc. Form DressKit\_Inst12 Printed in U.S.A.

- ② Thread horizontal drape support through top pocket of drape (see Fig. 3).

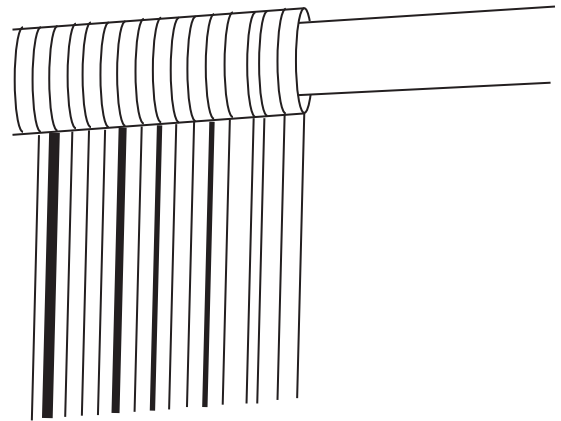


Figure 3

- ③ Attach one end of horizontal drape support to one of the uprights (see Fig. 4).
- ④ Extend or collapse horizontal drape support to proper length.
- ⑤ Attach remaining end of horizontal drape support to other upright.

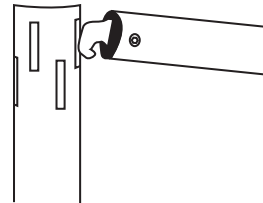


Figure 4

- ⑥ Adjust height by depressing friction lock to release upper portion of telescoping upright (see Fig. 5). Release friction lock to lock upright at desired height.

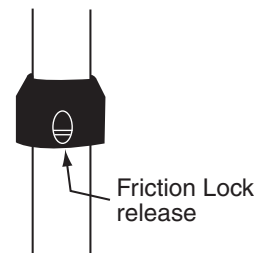


Figure 5

### **Fabric Care**

**Cotton:** 100% cotton drapery fabrics are dry clean only.

**Polyester:** Polyester drapery fabrics should be machine washed to 120 degrees Fahrenheit using mild detergents. Remove from washer immediately and tumble dry to 120 degrees Fahrenheit using a cool-down cycle. Remove immediately to avoid wrinkling.

*If you encounter any difficulties installing or servicing your screen, call your dealer or Draper, Inc., Spiceland, Ind., (765) 987-7999; or fax (765) 987-7142.*