## Operating Instructions RoadWarrior Portable Projection Screen by Draper

Scissors

Case snaps

Legs

Troubleshooting

Make sure the screen surface is not "catching" on anything. Make sure case

Make sure legs are perpendicular to screen case. If they are, screen may be

Press gently down on screen case just above each snap while opening.

Press gently down on screen case just above each snap while closing.

Loosen or remove carrying strap altogether (see below).

Carrying strap will not rotate out of the way so case will open:

Check roller and scissors to make sure nothing is interfering with their

Screen will not fully extend:

Screen tips forward or backward:

located on too severe an incline. *Snaps will not open:* 

Snaps will not close:

Screen will not close:

lid is fully open.

operation.

Lid

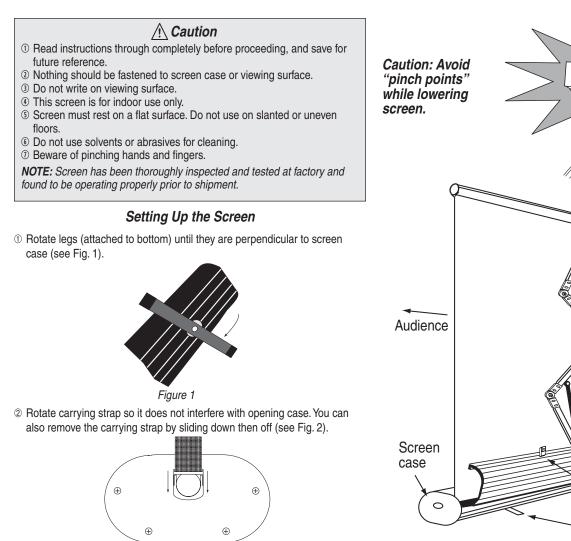


Figure 2 (side view)

- $\ensuremath{\textcircled{}}$   $\ensuremath{\textcircled{}}$  Unsnap and open screen case.
- ④ Grasp handle marked "Lift Here" (see Fig. 3), and slowly raise screen to desired height. Keep screen dowel level while raising.



Figure 3

## Collapsing the Screen

0  $\$ Generally reverse procedures used for screen setup.



411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999 www.draperinc.com ■ fax 765-987-7142