PT-Elite-UL

Universal Large Tablet Teleprompter QUICKSTART GUIDE



CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period has expired.

 
Free Service will not be Provided in the Following Situations: (*Even if the product is still within the warranty period.)


- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors etc.




What's included






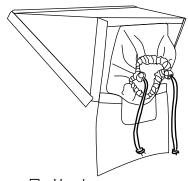


☐ Hood

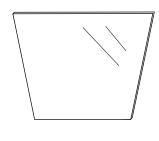


☐ 30/70 Prompter Glass

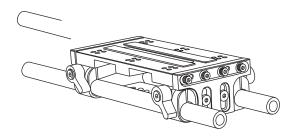


☐ EV2 Adjustable Camcorder Baseplate (Large)

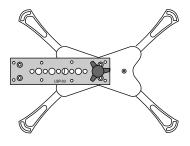

☐ iPad Teleprompter Mount

 

☐ 1 x Hex Key 3mm 1 x Hex Key 2.5mm

 

☐ 4 x Bumper



□ 1 x D-Ring




□ 2 x 4mm X 12mm Socket Head Countersink Screw






1. Fit Frame to iPad Mount. Secure with 2 x Socket Head Countersink Screw.

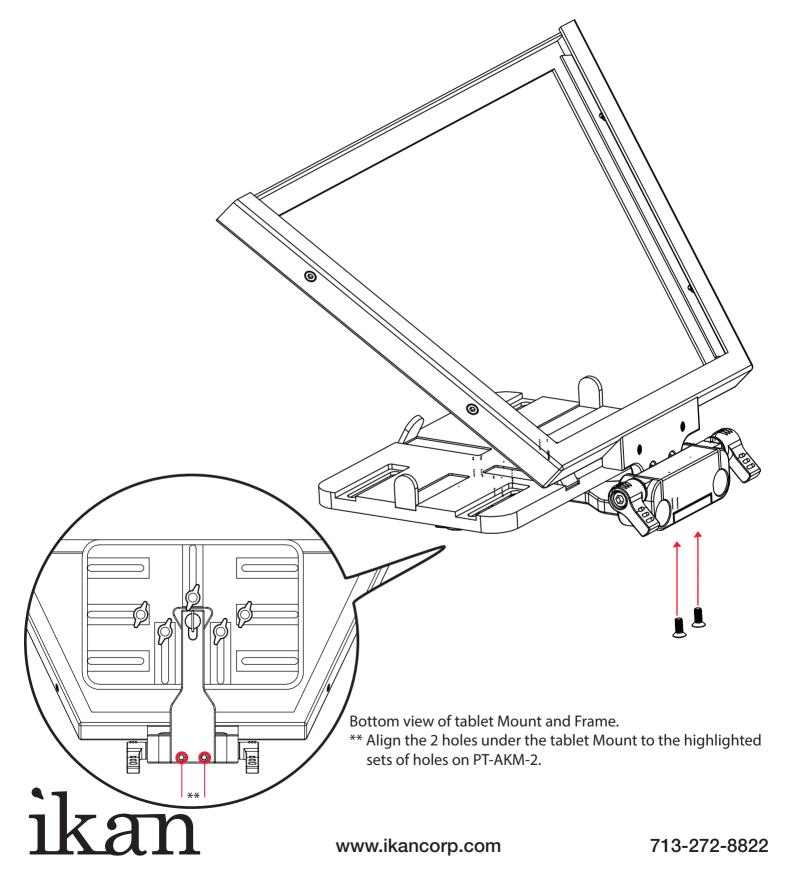


2. Remove 4 x small frame screws and 2 x brackets. Insert prompter glass into frame. Secure prompter glass by replacing brackets and screws.

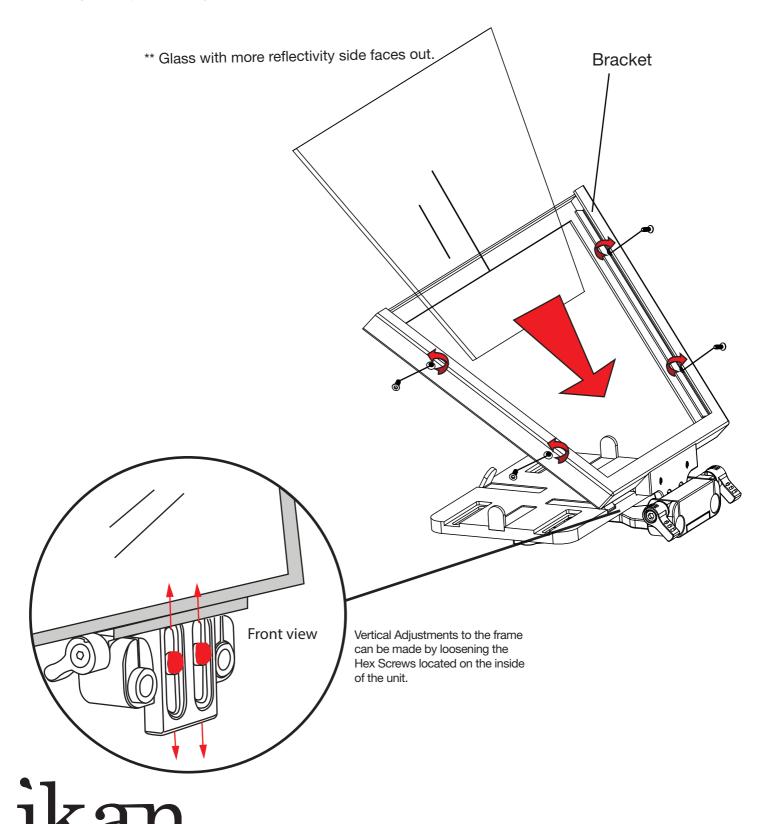


ADJUSTMENT POINTS (adjust to fit your camera size)


Numerous Adjustment Points allow for precise positioning modifications. Loosen Thumb Screws to move forward/backwards along 12" Rods. Loosen Hex Screws to make vertical and horizontal adjustments.

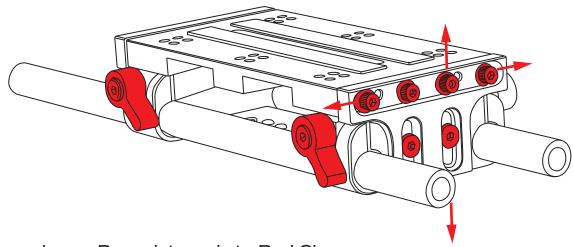

3. Secure Large Baseplate rods to Rod Clamp.

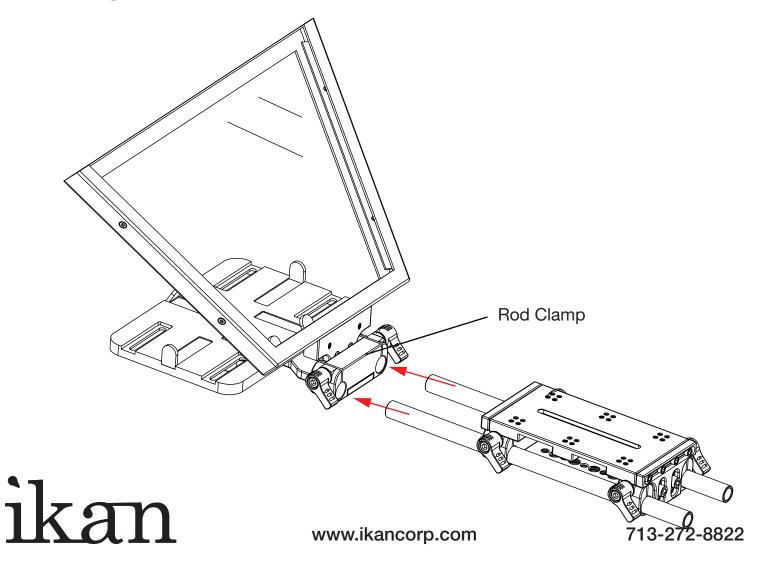

4. Attach the magnetic hood to glass frame.

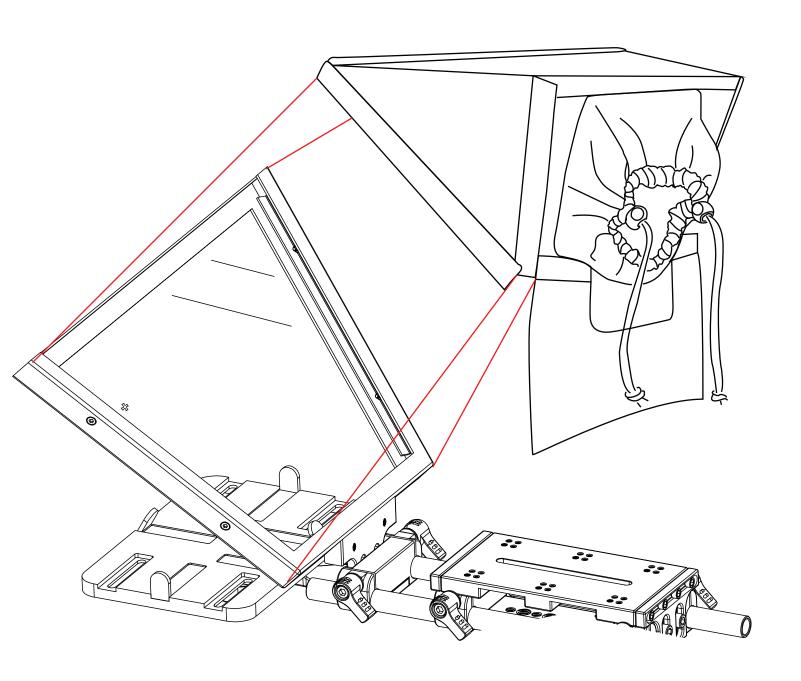



QUICK RELEASE MOUNTING OPTIONS

The ikan Large Baseplate is compatible with both the Canon TA100 and ikan-WDGL Tripod Adapter Systems. Simply mount your Quick Release Plate to the bottom of the Large Baseplate component on the appropriate end, using four (4) Socket Head Countersink Screws.

