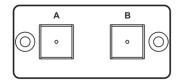
The Kramer RC-21TB 2-Button Contact Closure Switch

Congratulations on purchasing your Kramer **RC-21TB** single slot wall plate insert *2-Button Contact Closure Switch* which is ideal for using as a means of remote control in boardrooms and conference rooms. It can be used with the **VP-81SID** step-in switcher or any other Kramer product with contact closure control.

The **RC-21TB** front panel has two momentary switching buttons. On the rear are remote momentary contact closure terminal block connectors that connect to a remote switch terminal block connector. When the button is pressed it lights and the switch is made.

Figure 1 shows the **RC-21TB** front panel and the pinout on the rear:



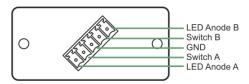


Figure 1: RC-21TB Front Panel and Rear

To install the front panel button labels:

1. Unscrew the two spacers, remove the washers on the rear side of the insert and push out the two studs holding the front panel, see <u>Figure 2</u>.

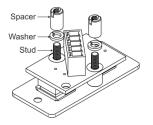


Figure 2: Removing the Front Panel

- 2. Separate the PC board from the front panel.
- 3. Remove the required labels from the supplied button label sheet.
- 4. Hold the button cap so that it is oriented as shown in Figure 3, with the "wings" at the top and lower sides.

	NO

Figure 3: Button Orientation

- 5. Insert the label (properly oriented) inside the cap.
- Retaining the orientation, place the button cap with the label over the buttons, see Figure 4.

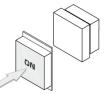


Figure 4: Placing the Button Cap

- 7. Place the front plate over the buttons.
- 8. Reassemble the PC board
- **Note**: Center the buttons in the opening before tightening the studs to prevent the buttons from sticking during reassembly.
- 9. Insert the studs through the front panel. On the rear side of the insert place the washers and then the spacers and tighten.

The **RC-21TB** can remotely switch the inputs of a machine via its remote contact closure terminal blocks.

In the example illustrated in <u>Figure 5</u> two **SID-H** *HDMI Step In Commander* units are connected to **RC-21TB**.

Machine B

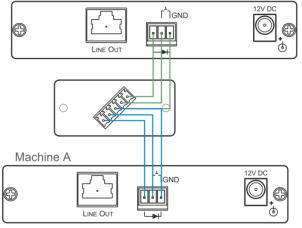


Figure 5: RC-21TB connected to two SID-H Units

To connect the **RC-21TB**, as illustrated in the example in Figure 5 and Figure 6:

- 1. Connect the remote terminal block connectors on each SID-H machine to the A and B terminal block connectors of the **RC-21TB**.
- 2. Mount the RC-21TB in a single slot of a wall plate frame or a TBUS inner Frame.

Momentarily pressing button A or B on the **RC-21TB** activates the STEP-IN process (allowing this machine's input to be selected on the **VP-81SID**) in Machine A or Machine B, respectively.



KRAMER ELECTRONICS LTD.



MODEL:

RC-21TB 2-Button Contact Closure Switch

For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this user manual may be found.

We welcome your questions, comments, and feedback. Web site: www.kramerelectronics.com E-mail: info@kramerel.com




SAFETY WARNING
Disconnect the unit from the power
supply before opening and servicing

CE

P/N: 2900-300297 Rev 3



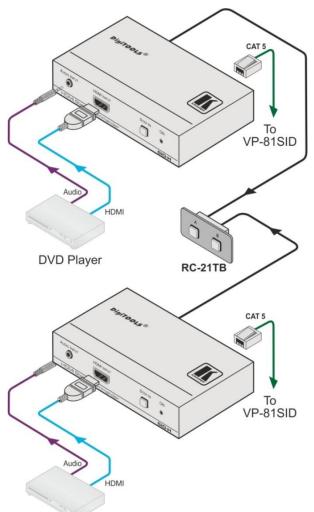

DVD Player Figure 6: Connecting the: RC-21TB