KRAMER





Scan for full manual

VP-427H2 Quick Start Guide

This guide helps you install and use your VP-427H2 for the first time.

Go to <u>www.kramerav.com/downloads/VP-427H2</u> to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box


✓ VP-427H2 4K HDBT to HDMI Receiver/Scaler


✓ 1 Bracket set

✓ 1 Quick start guide

✓ 1 Power adapter and cord
 ✓ 4 Rubber feet

Step 2: Get to know your VP-427H2

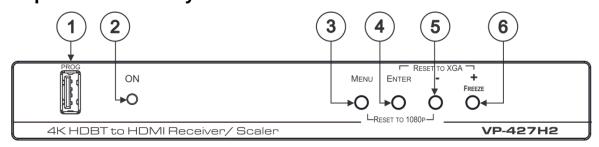

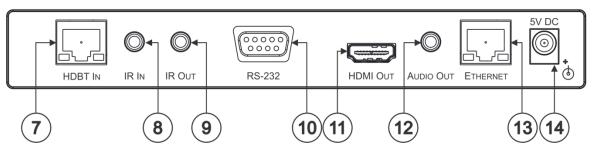

#	Feature	Function		
1	PROG USB Connector	Connects to a USB memory stick for programming upgrade		
2	ON LED	Lights green when the unit is powered on		
3	MENU Button	Press to enter/exit the on-screen display (OSD) menu. Press together with the – button to reset to 1080p		
4	ENTER Button	In OSD, press to choose the highlighted menu item. Press together with the +/FREEZE button to reset to XGA		
5	_	In OSD, press to move back through the list or to decrement the parameter value		
6	+/FREEZE Button	In OSD, press to move forward through the list or to increment the parameter value. When not in OSD, press to freeze the display		
7	HDBT IN RJ-45 Connector	Connects to an HDBaseT transmitter		
8	IR IN 3.5mm Mini Jack	Connects to an IR sensor		
9	IR OUT 3.5mm Mini Jack	Connects to an IR emitter		
10	RS-232 9-pin D-sub Connector	Connects to an acceptor to embed/de-embed control commands in the HDBaseT data stream		
11	HDMI OUT Connector	Connects to an HDMI acceptor		
12	AUDIO OUT 3.5mm Mini Jack	Connects to an unbalanced stereo audio acceptor		
13	ETHERNET RJ-45 Connector	Connect to a PC via a LAN		
14	5V DC	+5V DC connector for powering the unit		


VP-427H2 Quick Start (P/N: 2900-300831QS REV 4)


Rev: 4

Step 3: Install the VP-427H2

Install VP-427H2 using one of the following methods:


- Attach the rubber feet and place the unit on a flat surface.
- Fasten a bracket (included) on each side of the unit and attach it to a flat surface. For more information go to www.kramerav.com/downloads/VP-427H2.

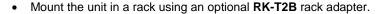

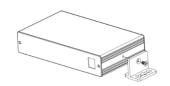

Step 4: Connect the inputs and outputs

Always switch OFF the power on each device before connecting it to your **VP-427H2**. For best results, we recommend that you always use Kramer high-performance cables to connect AV equipment to the **VP-427H2**.

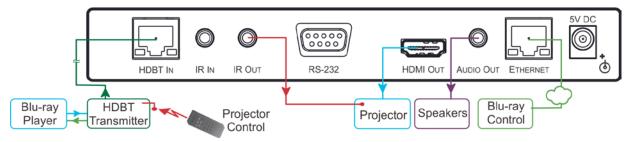

Step 5: Connect the power

Connect the 5V DC power adapter to the VP-427H2 and plug the adapter into the mains.

Safety Instructions



Caution: There are no operator serviceable parts inside the unit.

Warning: Use only the Kramer Electronics power supply that is provided with the unit. Warning: Disconnect the power and unplug the unit from the wall before installing.

See $\underline{www.KramerAV.com}$ for updated safety information.

Technical Specifications

Inputs:	1 HDBaseT twisted pair on an R	J-45 connector, 1 IR on a 3.5mm	mini jack		
Outputs:	1 HDMI connector, 1 IR on a 3.5mm mini jack, 1 unbalanced stereo audio (1.2Vrms nominal, 100Ω) on a 3.5mm mini jack				
Ports:	rts: 1 bidirectional RS-232 port on a 9-pin D-sub connector, 1 Ethernet on an RJ-45 connector, 1 USB (A) for upgrading				
Compliance with HDMI Standard:	Supports up to HDMI 2.0, and HDCP 2.2				
Output Resolutions:	640x480@60Hz, 800x600@60Hz 1024x768@60Hz, 1280x768@60Hz, 1360x768@60Hz, 1280x800@60Hz, 1280x1024@60Hz, 1440x900@60Hz, 1400x1050@60Hz, 1680x1050@60Hz, 1600x1200@60Hz, 1920x1200@60Hz 480P@60Hz, 576P@50Hz, 720P@50/60Hz, 1080P@24/25/30Hz, 4k2k@24/25/30Hz, 4k2k (4:2:0)@50/60Hz, 4k2k (4:4:4)@50/60Hz, Native				
Output Refresh Rate:	60Hz for computer graphics resolutions, 50/60Hz for HDTV resolutions				
Audio Sampling Rate:	48kHz for analog audio output				
Video Latency:	Progressive input: 30ms (approx.); interlaced input: 50ms (approx.)				
Embedded Audio:	HDMI and HDBT support multi-channel audio				
RS-232 Baud Rate:	115200bps max.				
Controls:	Front panel buttons, OSD menu				
Indicators:	ON LED (green)				
Power Consumption:	5V DC, 2.5A	Power Source:	5.2V/4A		
Operating Temperature:	0° to +40°C (32° to 104°F)	Storage Temperature:	-40° to +70°C (-40° to 158°F)		
Humidity:	dity: 10% to 90%, RHL non-condensing				
Dimensions:					
Shipping Dimensions:	ing Dimensions: 35.1cm x 21.2cm x 7.2cm (13.8" x 8.35" x 2.8") W, D, H				
Weight:	0.56kg (1.2lb)	Shipping Weight:	1.1kg (2.42lb)		
Included Accessories:	Power supply	Options:	RK-T2B 19" rack adapter		
Specifications are subject	to change without notice at www.l	kramerav.com	•		



