## **HHT-200 HDMI cable tester**

**How does it work:** The tester measures the continuity of each wire in a HDMI cable.

Battery replacement: 9 V battery needed on this box only. Slide the lid below off to replace it. How to test: Slide the "Pin Scan" switch to Auto or Manual; observe the LEDs on the receiver box. If the LEDs cycle in sequence one at a time, the cable is good. If a LED is skipped, there's a open wire. If more than 1 LED lit at any time, there's a short circuit.

Luxi Electronics Corp www.luxielectronics.com