


INSTRUCTION SHEET

LD-12

SIDE RACK GANGING INSTRUCTIONS

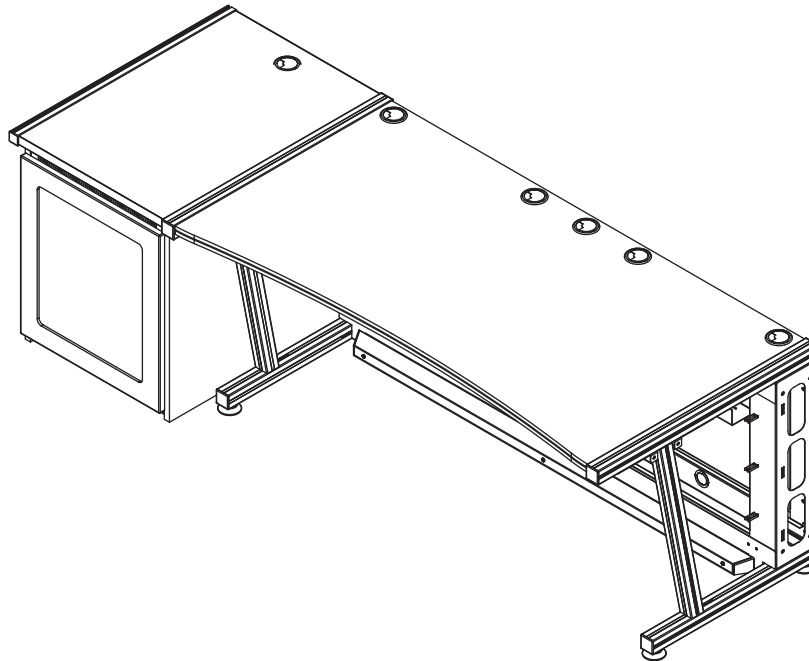

THANK YOU

Thank you for purchasing the LD-12 Side Rack. Please read these instructions thoroughly before installing / assembling this product.

PRODUCT FEATURES

- Integrates seamlessly with LCD Monitoring / Command Desk
- Features pass-throughs for effective cable management between rack and desk
- Rear fan exhaust facilitates proper active thermal management






Caution

This product ships upside down. Tip the side rack on its back when removing it from box. Tipping the side rack carefully onto excess cardboard will help prevent scratches or marks.

HARDWARE KIT INCLUDES

Qty		Description
6		10 x 5/8 Truss Head Screw
3		6 x 1/2 Truss Head Screw
3		10 x 5/8 Pan Head Screw
3		Grommet

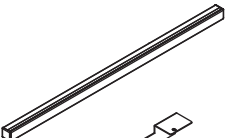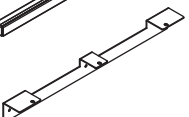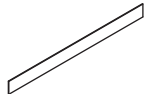  
Qty		Description
1		Trim
1		Bracket
2		Vent blocker

ASSEMBLY


NOTE: If attaching a desk to both sides, skip to STEP 3

- 1) Attach the bracket opposite the side that will be attached to the desk as shown.
(3 screws, 10 x 5/8 Pan Head)


10 x 5/8
PAN HEAD
SCREW
(3 places)

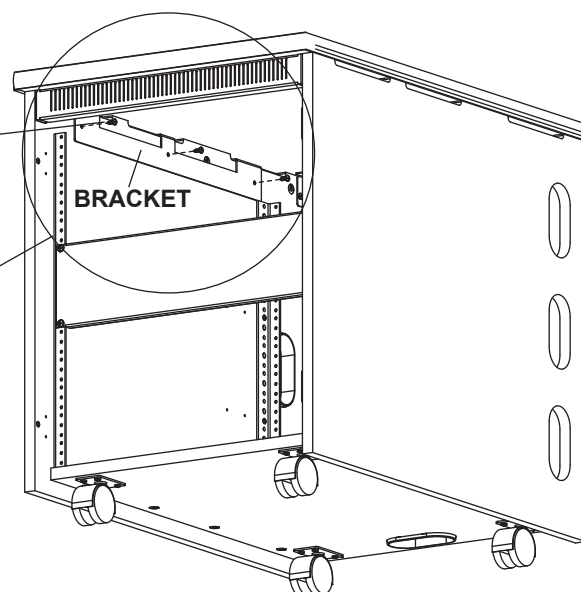

BRACKET

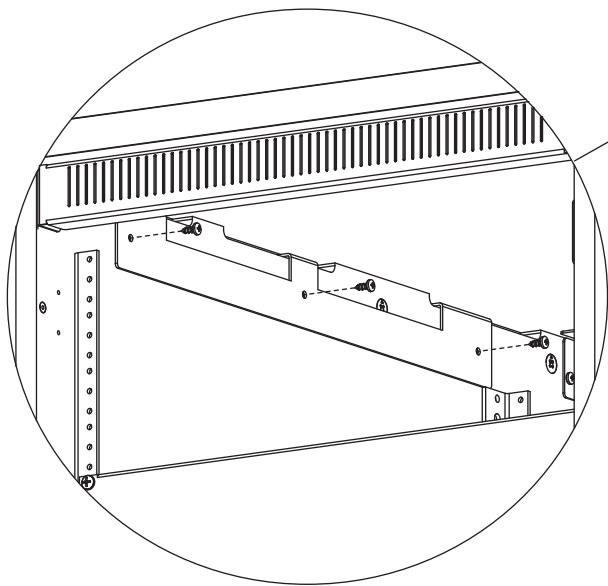

- 2) Attach the trim to the bracket as shown. Do not tighten screws until trim is properly aligned
(3 screws, 6 x 1/2 Truss Head). The tab on the side rack goes into the slot in the trim. Add grommets as desired.

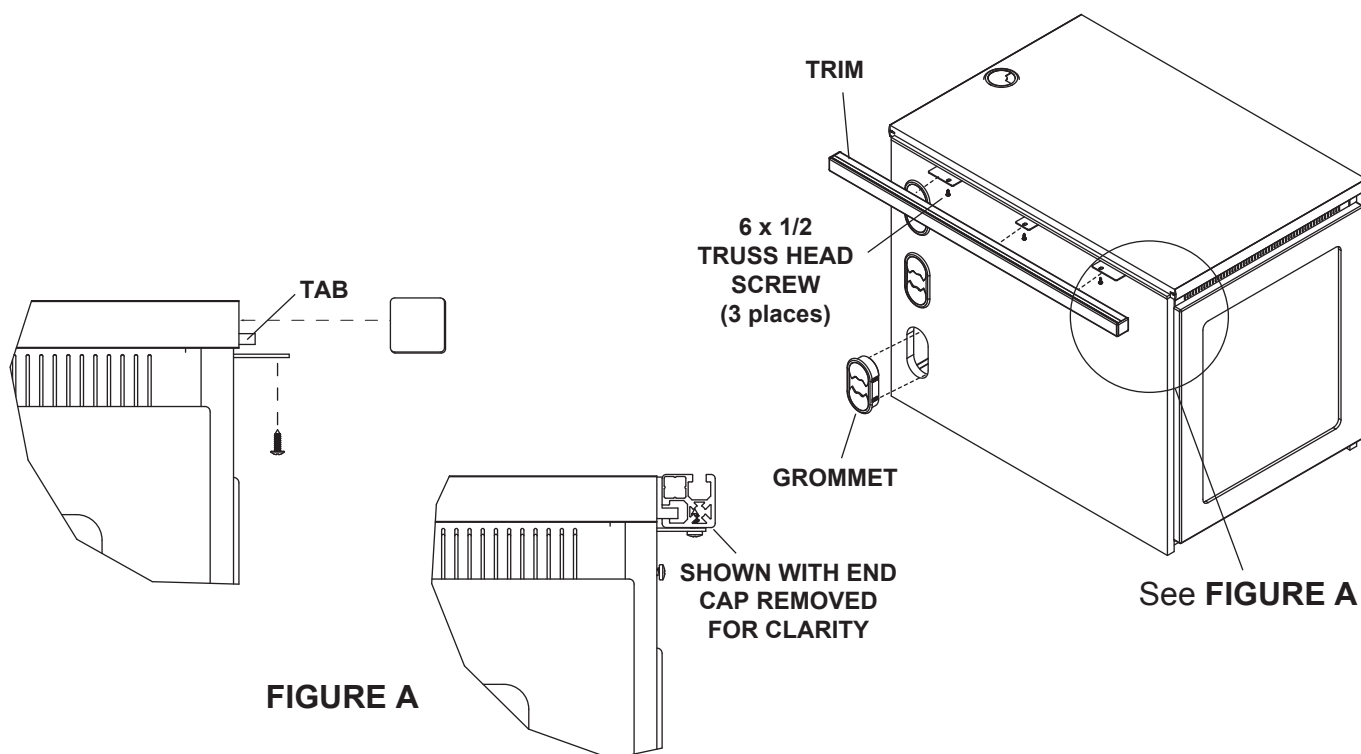

TRIM

6 x 1/2
TRUSS HEAD
SCREW
(3 places)

GROMMET


SHOWN WITH END
CAP REMOVED
FOR CLARITY

See **FIGURE A**


FIGURE A

ASSEMBLY (Continued)

- 3) Remove the side panel from the desk if one is present. Line up the mounting holes on the desk with the pilot holes on the LD-12 Side Rack. The tab on the side rack goes into the slot in the desk trim. Anchor the LCD Monitoring Desk to the LD-12 Side Rack as shown.
(3 screws, 10 x 5/8 Truss Head)

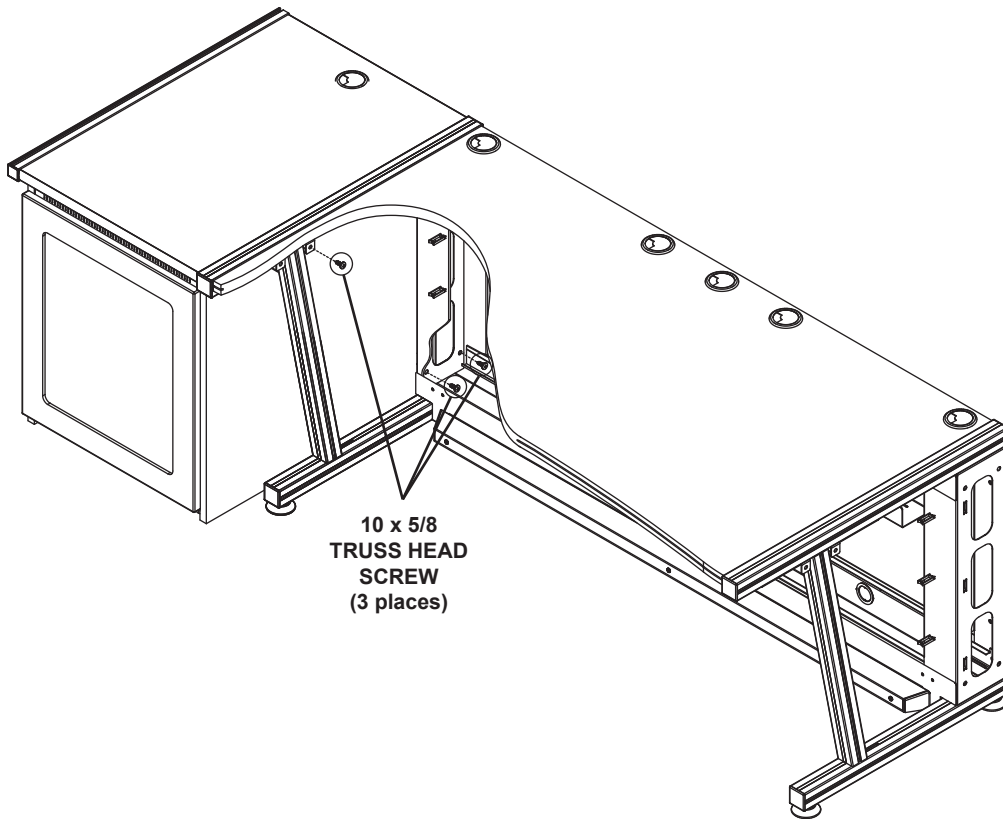


- 4) The front door can be changed to open from the other side. Remove screws and flip the door before re-installing to opposite side. Align the door before tightening the screws.

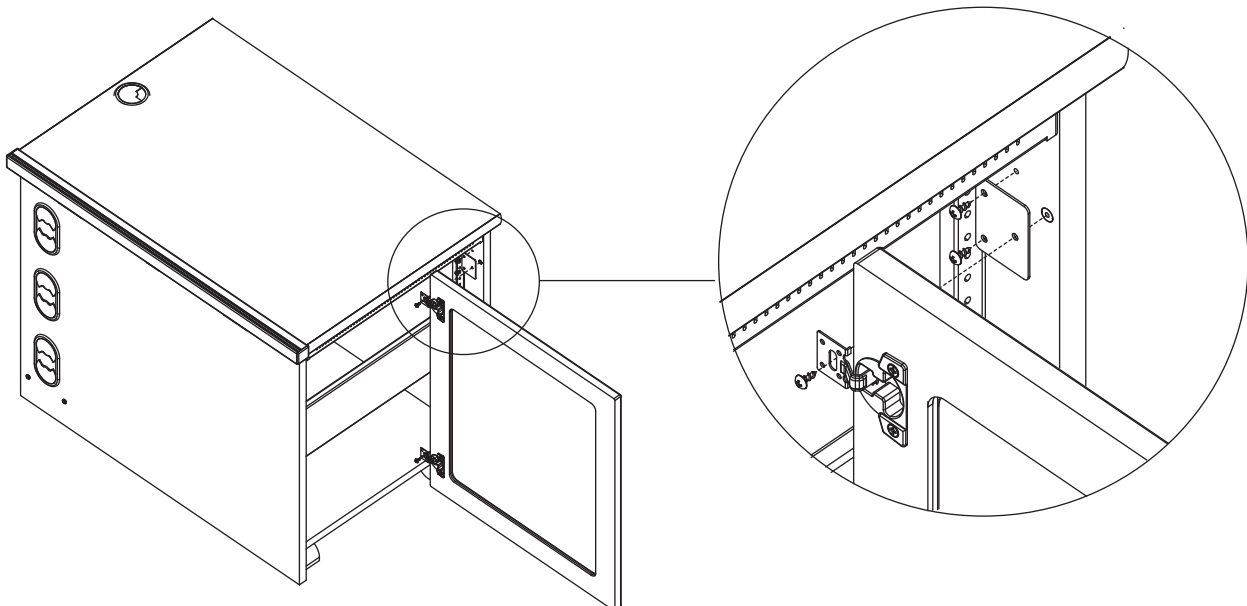


ACTIVE COOLING CONFIGURATION

Protect sensitive equipment using advanced thermal management. Place the provided vent blockers inside the rack to cover the front and rear vents. Remove the 2 space vent panel on the rear door and install the optional UQFP Series Fan Panel. (UQFP-4 shown)

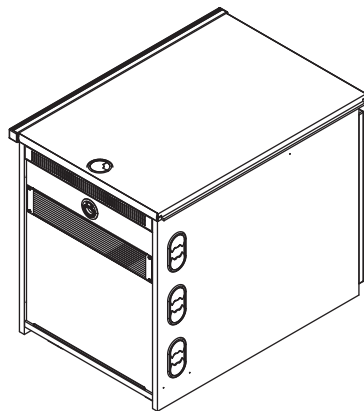

Standard vented rear door


INSERT
MAGNETIC VENT
BLOCKER BEHIND
VENTS
(front and back)

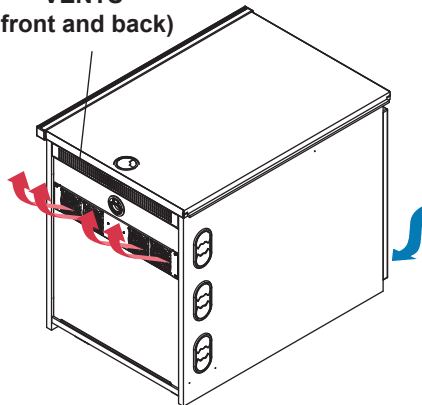

Active thermal management
with vent blockers and optional
fan panel, UQFP-4

CABLE MANAGEMENT

Use the grommets and holes on the LD-12 Side Rack to conceal cables.

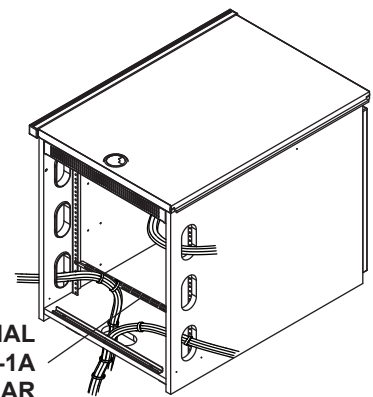

OPTIONAL
LBP-1A
LACER BAR

WARRANTY

Middle Atlantic Products (the "Company") warrants the LD-12 Side Rack to be free from defects in material or workmanship under normal use and conditions for a period of (7) seven years from date of shipment by the company.

The Company's entire liability to the purchaser, and the purchaser's (or any other party's) sole and exclusive remedy, under this warranty shall be limited, at the Company's option, to either (a) return of and refund of the price paid for, or (b) repair or replacement at the Company's factory of the products purchased, or any part or parts thereof, which the Company has determined to be defective after inspection thereof at the Company's factory.

This warranty does not cover damage due to acts of God, accident, misuse, abuse or negligence by parties other than the Company, or any modification or alteration of the products. In addition, this warranty does not cover damage due to improper handling, assembly, installation or maintenance.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF THE PRODUCTS PURCHASED, EVEN IF THE COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE COMPANY'S LIABILITY TO THE PURCHASER (OR ANY OTHER PARTY) HEREUNDER, IF ANY, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCTS PAID TO THE COMPANY.

Corporate Headquarters

Corporate Voice 973-839-1011 - Fax 973-839-1976 / International Voice +1 973-839-8821 - Fax +1 973-839-4982
middleatlantic.com - info@middleatlantic.com

Middle Atlantic Canada

Voice 613-836-2501 - Fax 613-836-2690 / middleatlantic.ca - customerservicecanada@middleatlantic.ca

Factory Distribution

USA: NJ - CA - IL Canada: ON - BC

At Middle Atlantic Products we are always listening. Your comments are welcome.

Middle Atlantic Products is an ISO 9001 and ISO 14001 Registered Company.