

THANK YOU

Thank you for purchasing a Select Series PDU with RackLink[™] product. Please read these instructions thoroughly before installing this product.

PRODUCT FEATURES

- Available in horizontal rack (RLNK-915R), half rack (RLNK-415R), compact (RLNK-215), and vertical (RLNK-1015V and RLNK-1615V) models.
- Remotely reboot connected equipment.
- Integrated sequencing.
- Set email alerts.
- Access the following link for software downloads, firmware updates, and the Select Series PDU with RackLink User Manual:

www.middleatlantic.com/downloads



ead these instructions.	 Heed all warnings. 	Clean only with dry cloth.	
ep these instructions.	 Follow all instructions. 	 Only use attachments/accessories sp 	ecified by the manufacturer.
DANGER HAZARD presence of uninsula persons.	OUS VOLTAGE: The lightning ated dangerous voltage within t	flash with the arrowhead symbol, within an each ne product's enclosure that may be of sufficie	quilateral triangle is intended to alert the user to ent magnitude to constitute a risk of electric sho
WARNING: A warnin	ng alerts you to a situation that	could result in serious personal injury or deat	h.
CAUTION: A caution	n alerts you to a situation that n	nay result in minor personal injury or damage	to the product and/or property.
NOTE: A note is use	ed to highlight procedures perta	ining to the installation, operation, or mainten	ance of the product.
WARNING: Failur equipment or void specifications.	e to read, understand and f ling of the warranty. It is the	ollow the following information can resu responsibility of the Installer/User to er	It in serious personal injury, damage to th nsure that this product is loaded according
CAUTION: The so	ocket-outlet shall be installe	d near the equipment and shall be eas	ily accessible.
CAUTION: Use in	door in dry locations only.		
STRUCTIONS IN	MPORTANTES SUR	LA SÉCURITÉ	
e ces instructions.	Respectez tous les avertis	sements. • Nettoyer uniquement avec un	chiffon sec.
nservez ces instructions.	Suivez toutes les instruction	• N'utilisez que des accessoires	s spécifiés par le fabricant.
DANGER TENSION présence de tension tion.	I DANGEREUSE: Le symbole on dangereuse non isolée dans l'	le la pointe de flèche, dans un triangle équila enceinte du produit qui peut être d'une ample	téral, est destiné à alerter l'utilisateur sur la eur suffisante pour constituer un risque d'électro
AVERTISSEMENT:	Un avertissement vous avertit	d'une situation pouvant entraîner des blessur	es graves ou la mort.
ATTENTION: Une a	ttention vous avertit d'une situa	tion pouvant entraîner des blessures mineure	es ou des dommages au produit et/ou à la
REMARQUE: Une r	emarque est utilisée pour mettr	e en évidence les procédures relatives à l'ins	tallation, au fonctionnement ou à l'entretien du
AVERTISSEMEN dommages à l'équest chargé confor	T: Refus de lire, comprend uipement ou invalider la ga mément aux spécifications	e et suivre la renseignements suivants rantie. Il est la responsabilité de l'insta	peut traduire par de graves blessures, o llateur/utilisateur de s'assurer que ce pro
CAUTION: La pris	se de courant doit être insta	llée près de l'équipement et doit être fa	cilement accessible.
CAUTION: Pour ê	ètre utilisé en intérieur dans	un endroit sec seulement.	
JPPLIED COMPO	NENTS AND HARDV	VARE	_
ORIZONTAL MODEI	LS (RLNK-915R AND RL	.NK-415R)	
(both RLNK-915R a	and 1		
RLNK-415R show	n)	CH	Power
		Ferrite	Cable



REQUIRED TOOLS

• #2 Phillips Screwdriver

WARNING: Use tools with caution and follow all necessary safety protocols. **AVERTISSEMENT:** Utiliser des outils avec prudence et suivre tous les protocoles de sécurité nécessaires.

RACKLINK HARDWARE SETUP

WARNING: For safety instructions, refer to the "Select Series PDU with RackLink User Manual" at www.middleatlantic.com/downloads.

AVERTISSEMENT: Pour obtenir des instructions de sécurité, reportez-vous à la "Select Series PDU with RackLink User Manual" à www.middleatlantic.com/downloads.

- 1. Install the device in the location it will reside.
- 2. Plug the device into a properly grounded AC power source.
- 3. Connect the device to your network using a shielded Cat 5 cable, or better.
- 4. Attach the ferrite provided (part number: 600-01660) as close as possible to the connector going into your device on your shielded Cat 5 cable. (FIGURE A)

NOTE: The following hardware setup instructions apply to vertical (RLNK-1015V and RLNK-1615V) and the compact (RLNK-215) models only.

Ferrite

FIGURE A

Infinite

Positional Slot

Nut

Rackrail

Mounting

Bracket

Installing Vertical (RLNK-1015V and RLNK-1615V) Models in an Enclosure

- 1. Install the mounting clips through the infinite or fixed position holes in a Middle Atlantic Product enclosure as shown. (FIGURE B)
- 2. Insert the PDU by gently tapping with the palm of your hand.

TIP: To remove the PDU from the mounting clips, wedge a flat head screwdriver between the side of the PDU and clip, and gently pry the PDU from the clip as shown. (FIGURE C)



RACKLINK HARDWARE SETUP

Installing The Compact (RLNK-215) Model in an Enclosure

- 1. Install mounting clip into the desired location using the outer two provided mounting holes. (**FIGURE D**)
- 2. Insert the RLNK-215 into the mounting clip. (FIGURE C)



NETWORKING DEFAULTS

The default network setup is DHCP and the default static address is 192.168.1.200.

INSTALLING THE DEVICE DISCOVERY SOFTWARE

1. Download and run the Device Discovery **setup.exe** file for PC or MAC from:

www.middleatlantic.com/downloads

2. Follow the steps until the Device Discovery tool launches.

3. When launched, the Device Discovery tool discovers all RackLink devices on the same subnet.

For more information about installing the Device Discovery tool, refer to the "Select Series PDU with RackLink User Manual" at www.middleatlantic.com/downloads, or contact support at 1-800-266-7225.

ACCESSING YOUR RACKLINK VIA THE BROWSER-BASED INTERFACE

1. Locate your device on the list shown in the Device Discovery tool and launch the browser-based interface by clicking the corresponding Device Control button.

NOTE: The default account names and passwords for the Administrator, User, and Control Systems accounts, respectively, on your RackLink device are as follows:

Administrator Account	User Account	Control System Account
Username: admin	Username: user	Username: user
Password: admin	Password: user	Password: password

For more information about using the browser-based interface, refer to the "Select Series PDU with RackLink User Manual" at www.middleatlantic.com/downloads, or contact support at 1-800-266-7225.

ALERT LED STATES

An LED labeled ALERT on your PDU indicates various states. This table explains how to interpret the LED states.

Alert LED State	What It Means
Blinking Green	Acquiring IP address (during startup).
Green	Normal operation, IP acquired, and no alarms.
Blinking Green/Red	No alarms, running on default IP (DHCP not acquired).
Blinking Red	Lost IP connection.
Red	Network is active, alarms present.

UPDATING RACKLINK DEVICE FIRMWARE

NOTE:

- The current firmware version installed on your RackLink appears on the lower-left of all browser-based interface screens.
- For more information about firmware updates, refer to the "Select Series PDU with RackLink User Manual" at www.middleatlantic.com/downloads, or contact support at 1-800-266-7225.
- 1. Access the latest version of the RackLink device firmware.
- 2. Sign in to the browser-based interface using the admin/admin account.
- 3. Click **Menu > Firmware**.
- 4. Click Choose File and locate the latest version of the firmware from Step 1.
- 5. Click Upload.

The screen indicates that it's uploading the firmware file and eventually shows a completed status.

6. Click Restart Unit.

The Upload Reminder pop-up appears.

7. Click Restart.

At this point, the unit will restart, install the new firmware, and return to the main page.

TROUBLESHOOTING

Forgotten Password

Press the Restore Defaults button on the device. This will default the login and password to admin/admin. **NOTE**: Pressing this button also defaults the device to using DHCP.

Cannot Access User Interface

Check to see if you can access a general webpage. Verify the green LED on your Ethernet port is lit solid and the yellow LED is blinking.

Unit Will Not Operate After Firmware Upgrade

Contact support at 1-800-266-7225.

RackLink Not Receiving Power

Check that your power cable is securely fastened and confirm the circuit breaker on the unit is in the ON position.

Plug another device into the same receptacle and see if the other unit receives power.

WARRANTY

For warranty information, refer to http://www.middleatlantic.com/company/about-us.aspx#warranty

Corporate Headquarters

Corporate Voice: 973-839-1011 - Fax: 973-839-1976 / International Voice: +1 973-839-8821 - Fax: +1 973-839-4982 www.middleatlantic.com - info@middleatlantic.com

Middle Atlantic Canada

Voice: 613-836-2501 - Fax: 613-836-2690 / ca.middleatlantic.com - customerservicecanada@middleatlantic.ca

Factory Distribution USA: NJ - CA - IL Canada: ON - BC

At Middle Atlantic Products we are always listening. Your comments are welcome.

Middle Atlantic Products is an ISO 9001 and ISO 14001 Registered Company.

