

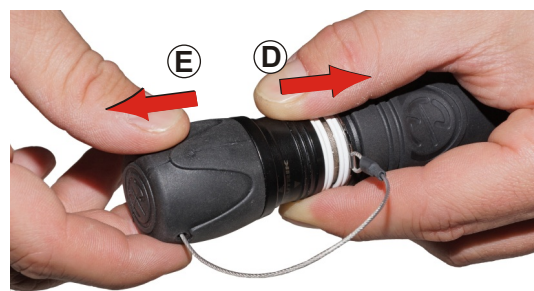


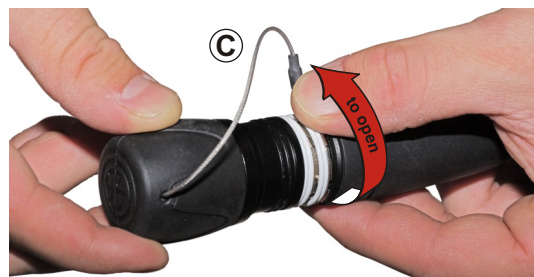

# HANDLING INSTRUCTION

SCNO\*X-A & SCNO-FDW-A | opticalCON protection covers

## SCNO\*X-A | opticalCON - cable connector cover

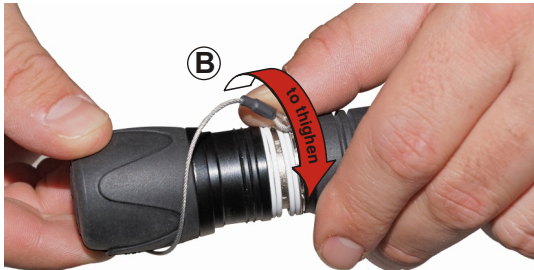

### Mate protection cover

- Ⓐ Push the cover onto the connector front shell until it locks.
- Ⓑ Rotate the safety ring to tighten the steel cord around the connector body to protect the steel cord from damage.

FINISH



### Removal protection cover

- Ⓒ Rotate the safety ring to lose the steel cord.
- Ⓓ Release the connector locking device.
- Ⓔ Remove protection cover.

FINISH





## SCNO-FDW-A | opticalCON - chassis connector cover


### Dust cover assembly

- Ⓐ Mount steel cord onto the opticalCON chassis connector.



### Dust cover handling

- Ⓑ Push the cover completely into the chassis until you feel a locking snap.

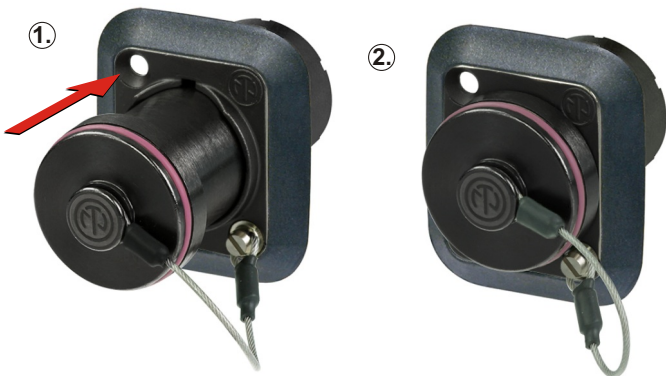

### Applications example:

Cover application of chassis and cable connector (SCNO\*X-A & SCNO-FDW-A).

- Ⓑ Mate cable connector and chassis connector cover to avoid contamination as long the connector is plugged.

