





Installation and Assembly: Shelf Bracket for Media Device


Model: DSX200

Parts List


Description	Qty.	Part #
A shelf	1	124-1941
B right vertical support	1	124-1944
C left vertical support	1	124-1943
D adjustment bracket	2	124-1945
E M5 x 16 phillips screw	8	520-1189
F M5 x 25 mm phillips screw	2	520-9543
G 1/4-20 x 1/2 round phillips screw	4	510-9108
H safety belt	1	170-8039-1

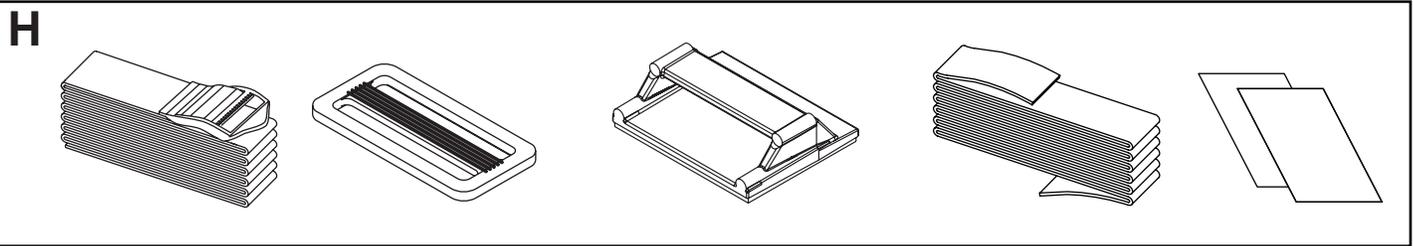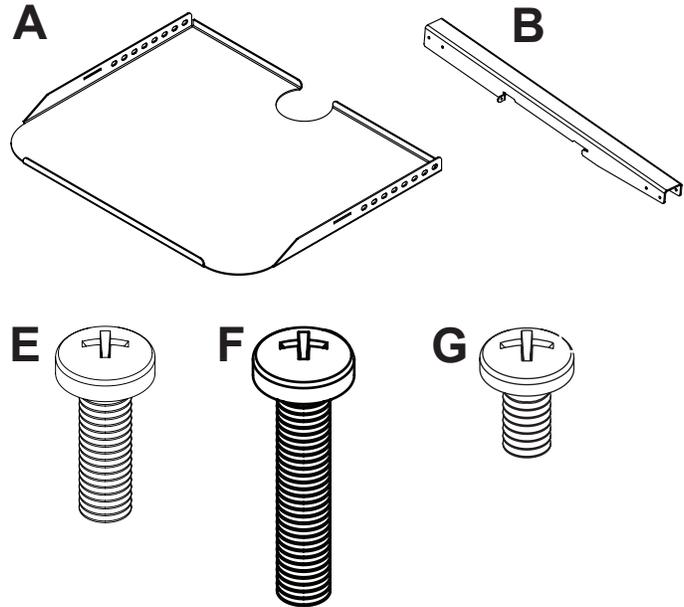

1 Secure two adjustment brackets (D) to shelf (A) using four 1/4-20 x 1/2 round phillips screws (G).

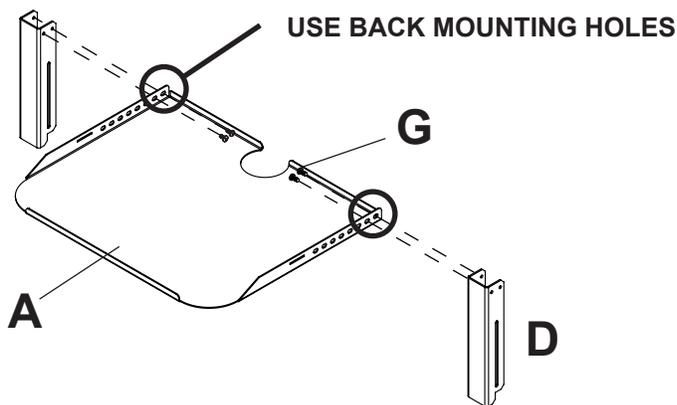

High Shelf Position

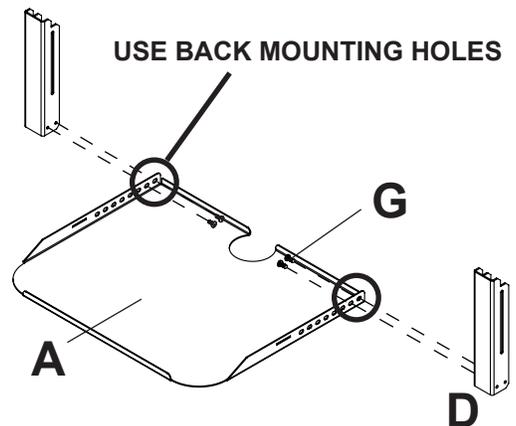


Low Shelf Position


Attaching to Wall Plate

- 2** Hook right and left vertical supports (**B** and **C**) onto wall plate (not supplied) and secure using two M5 x 25 mm phillips screws (**F**).


NOTE: Don't fully tighten M5 x 25 mm phillips screws (**F**) until after Step 3

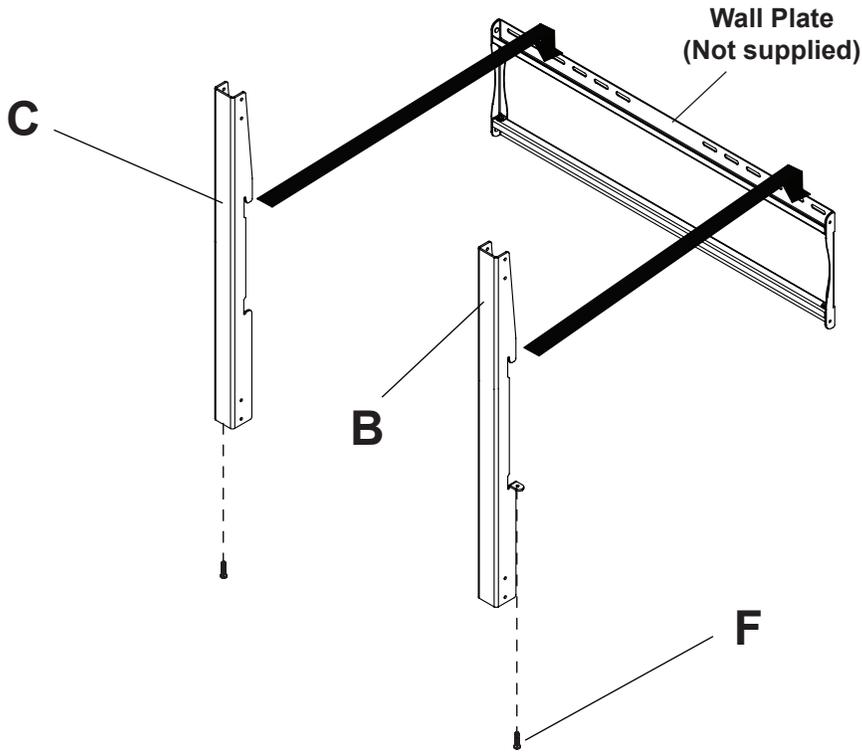

- 3** Secure adjustment brackets (**D**) to right and left vertical supports (**B** and **C**) using eight M5 x 16 mm phillips screws (**E**). Position right and left vertical supports (**B** and **C**) in desired location then tighten M5 x 25 mm phillips screws (**F**).

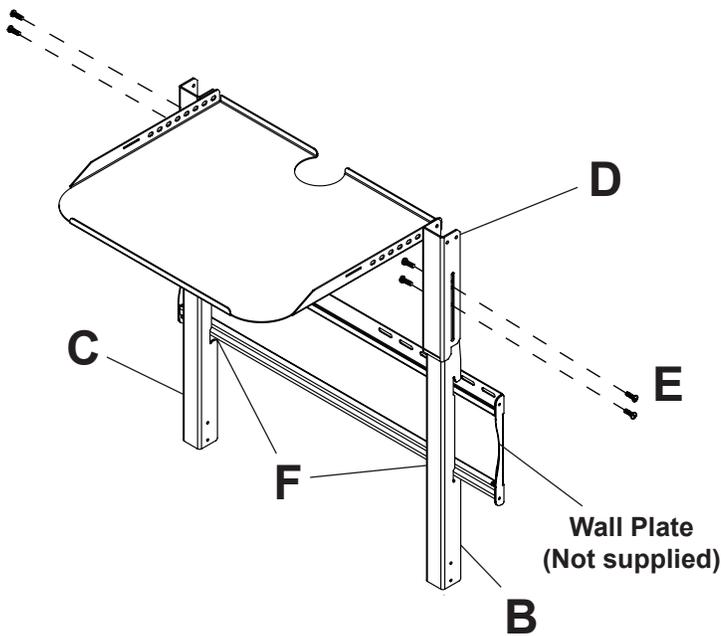



High Shelf Position

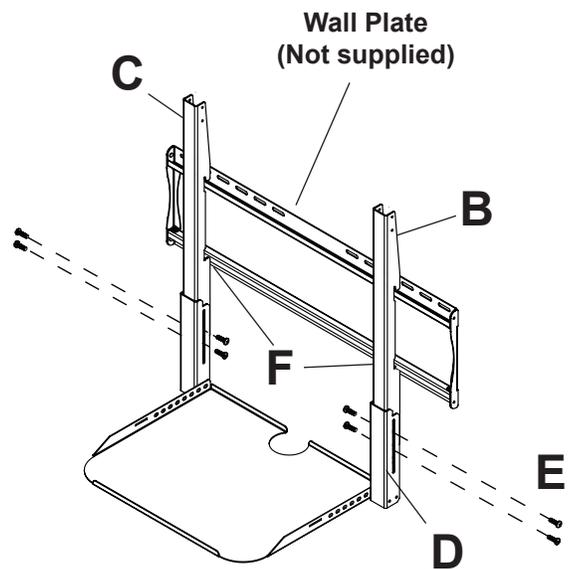


Low Shelf Position

Attaching Safety Belt


- 4** Select slot in tray as shown in fig 4.1.
Remove backing and attach one clear strip through slot and around edge of tray as shown in fig. 4.2.
Repeat for other slot on other side of tray.
NOTE: This material prevents fraying or cutting of the belt.

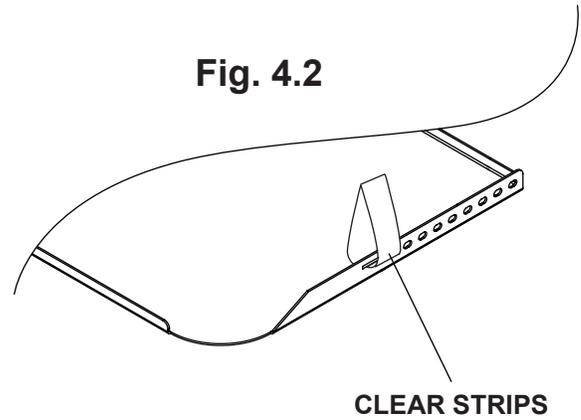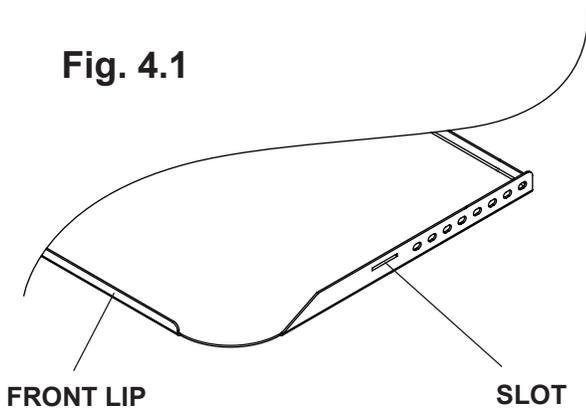


- 5** Take one belt and hold it so that the tri-bar belt clip is facing as illustrated. Feed belt up through the slot you have chosen. Remember, belt only goes through outside slot. Now feed belt through belt clip as shown.
Repeat on other side of tray using other belt.

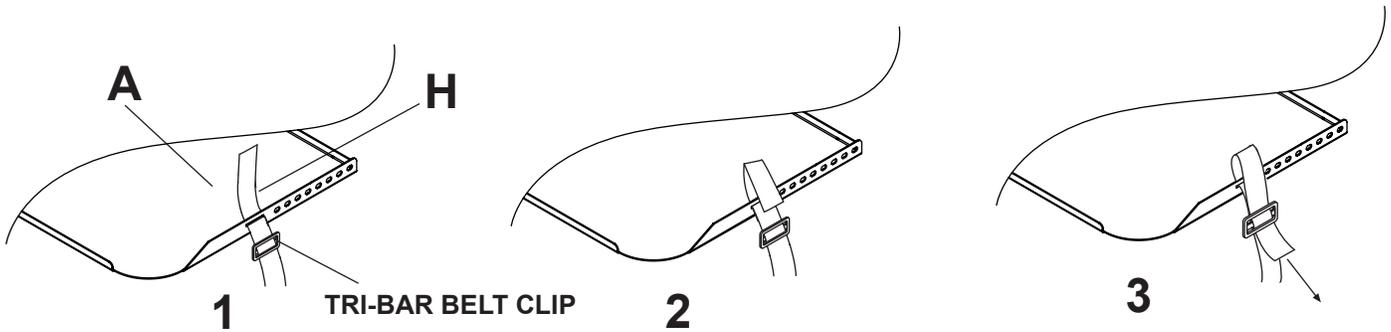

- 6** Continue by sliding on one belt guide and tri-bar clip on each side of the buckle. Refer to drawing below.

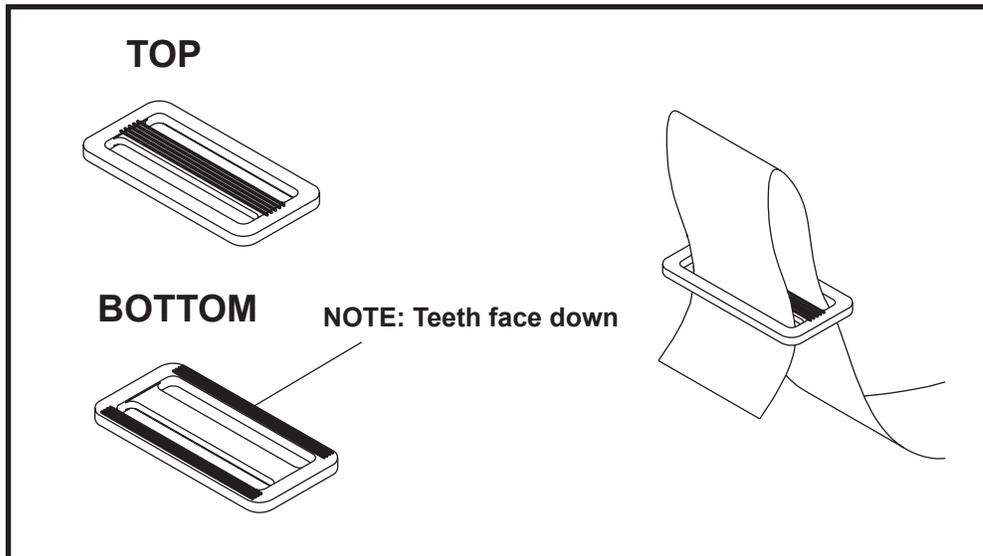


Pull end of safety belt (H) out of bottom buckle slot and back down through top buckle slot.
NOTE: Do not tighten safety belt (H).

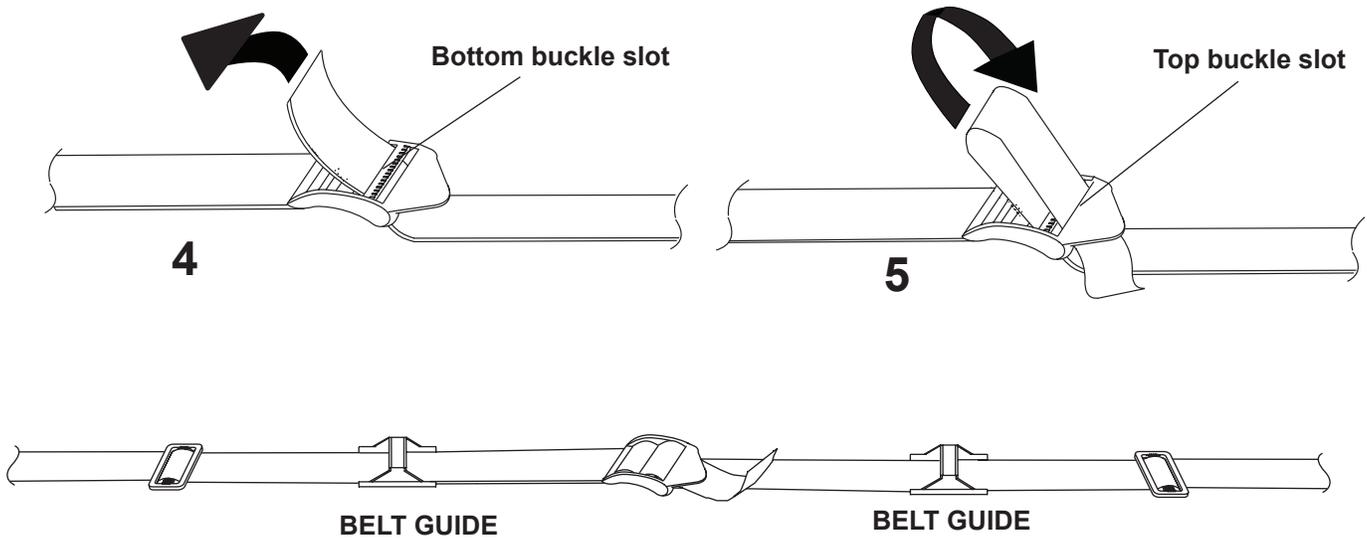

NOTE: To attach screen to wall plate, spacers may be needed. Refer to wall mount instructions for use of spacers.

6 Tighten safety belt (H) by pulling on loose end of safety belt.

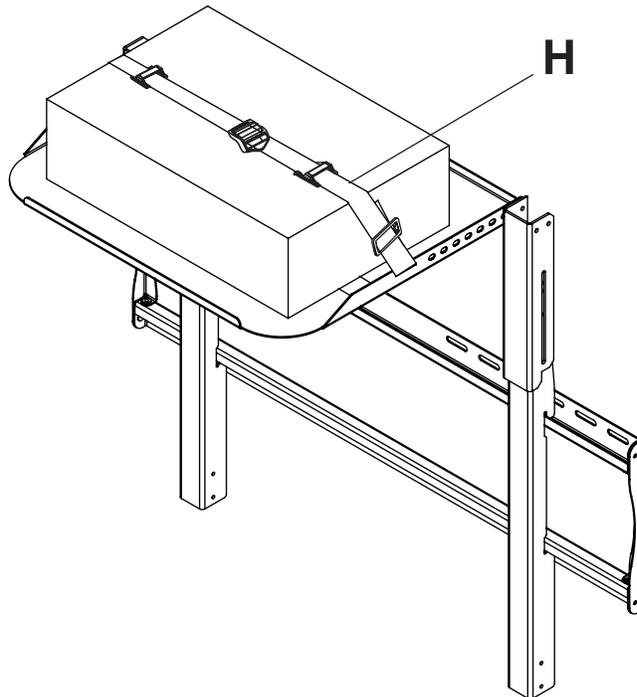

- 7** Make sure that attachment brackets (not included) are at desired tilt before installing to wall plate (not included). Measure display hole pattern before securing display to wall plate (not included).

Large Mounting Hole Pattern Vertical brackets Outside

If display mounting pattern is larger than distance between vertical supports of shelf mount brackets, position attachment brackets on outside with ratchet handles facing outward as shown in Fig 7.1.

RATCHET HANDLE

ATTACHMENT BRACKETS

VERTICAL BRACKETS

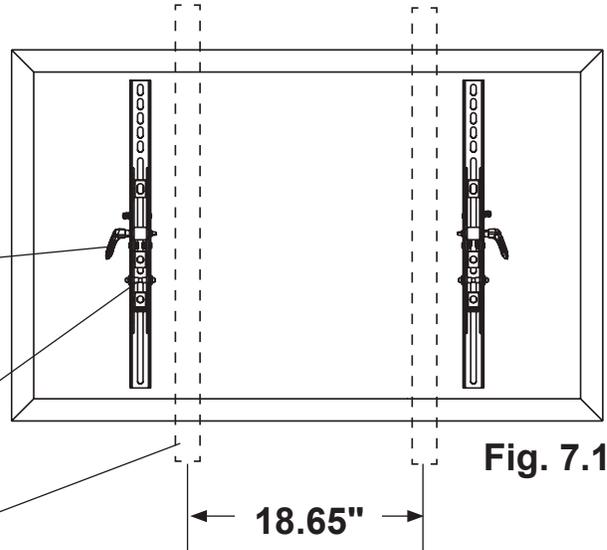


Fig. 7.1

Small Mounting Hole Pattern Vertical brackets inside

If display mounting holes are smaller than distance between vertical supports of shelf mount brackets, position attachment brackets on inside with ratchet handles facing inward as shown in Fig 7.2.

RATCHET HANDLE

ATTACHMENT BRACKETS

VERTICAL BRACKETS

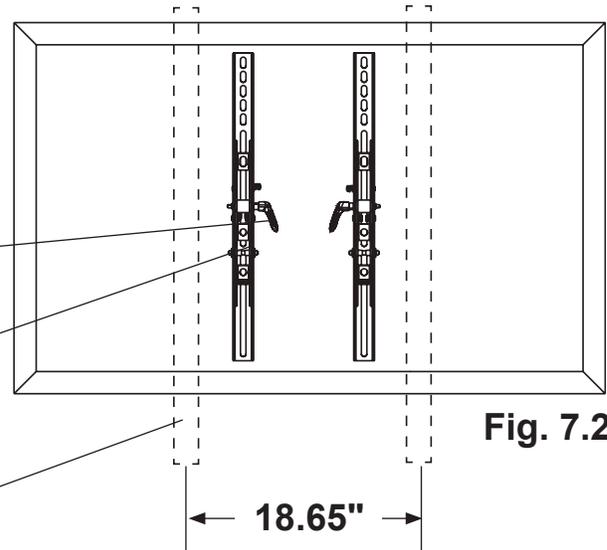


Fig. 7.2

Same Mounting Hole Pattern Vertical brackets inside and Outside

NOTE: Shelf will be offset to the right or left in this orientation.

If display mounting holes are equal to distance between vertical supports of shelf mount brackets, position attachment brackets on right or left side of shelf mount brackets with ratchet handles facing outward as shown in Fig 7.3.

NOTE: Vertical brackets can be mounted on right or left side of shelf as shown in light gray.

RATCHET HANDLE

ATTACHMENT BRACKETS

VERTICAL BRACKETS

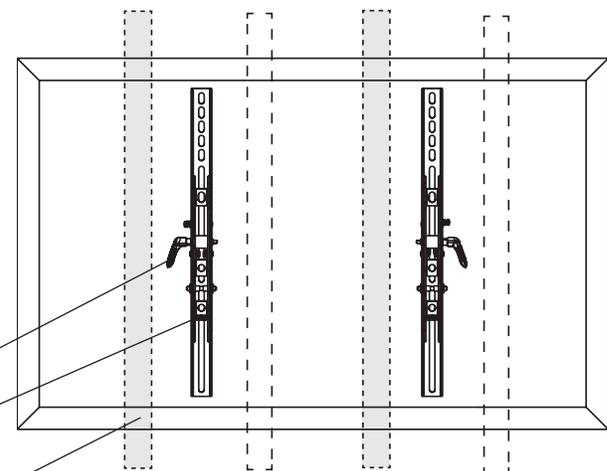


Fig. 7.3