

Installation and Assembly - DVD/DVR/VCR Mount for Slimline® Standard Wall Mount

Models: VPM 25-W,
SVPM 25-W




This product is intended for use with UL Listed products and must be installed by a qualified professional installer.

Maximum Load Capacity:
50 lb (22.7 kg)

Read instruction sheet before you start installation and assembly.


Installing a Single DVD/DVR/VCR Mount	page 4
Installing Multiple DVD/DVR/VCR Mounts	page 5

INSIDE DIMENSIONS		MEDIA PLAYER DIMENSIONS	
WIDTH (W)	HEIGHT (H)	MAXIMUM	MINIMUM
13.25" - 17.25" (337 mm - 438 mm)	1.5" - 2.75" (38 mm - 70 mm)	17.25" x 2.50" (438 mm x 64 mm)	13.25" x 1.5" (337 mm x 38 mm)

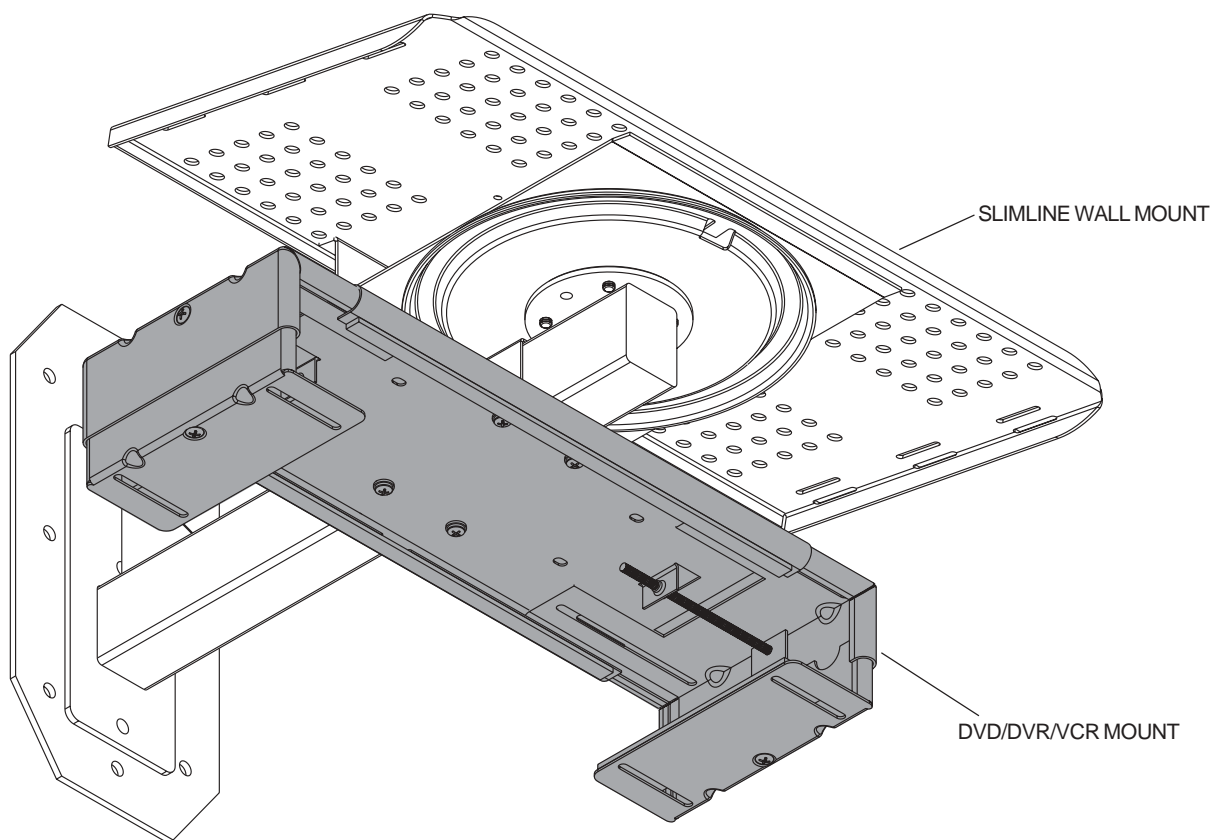

Parts List

Description	Qty.	VPM 25-W	SVPM 25-W
		Part	Part
A DVD/DVR/DVR mount	1	081-0072	081-0073
B hanger bracket	1	1245-271	1245-271
C M5 x .8 x 12 mm phillips screw/washer combo	4	520-1030	520-1030
D #10-24 x 1/2" carriage bolt	4	520-9523	520-9523
E #10-24 nylock nut	4	530-9341	530-9341
F #10 SAE washer	4	540-9400	540-9400
G M5 x 1" penta-pin™ tool driver	1	—	520-9249
H 1.5" x 4.5" x .125" adhesive foam	2	599-1122	599-1122
I .375" x 12.75" x .125" adhesive foam	2	599-3802	599-3802

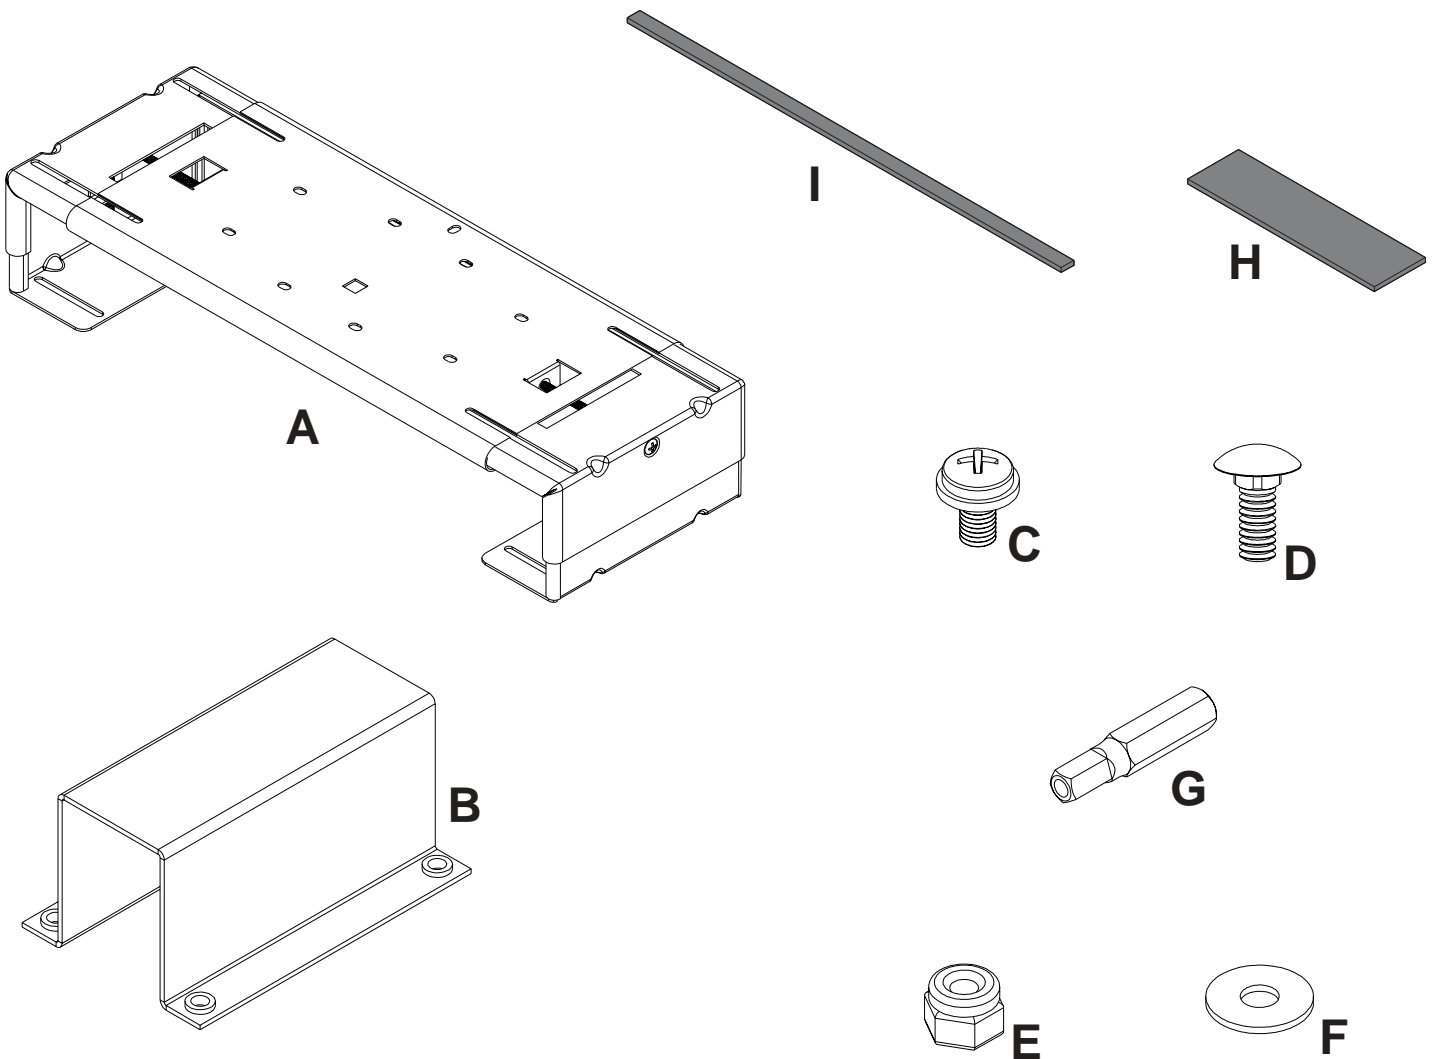

1

Peel and place four pieces of adhesive foam (**H**, **I**) on the horizontal cross support and vertical adjusters as shown in figure 1.1 and 1.2.

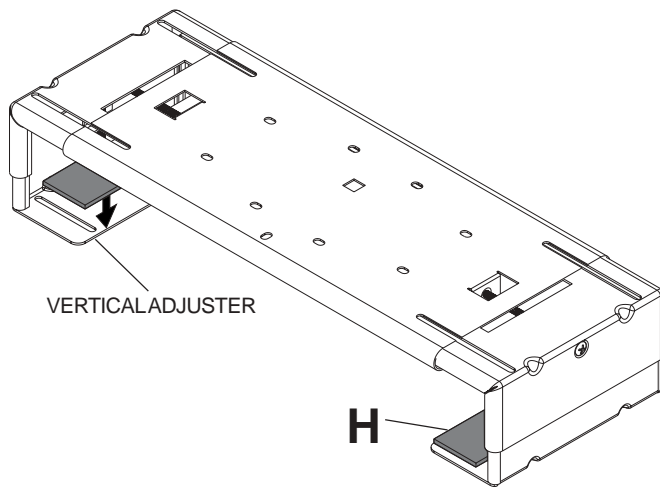


fig 1.1


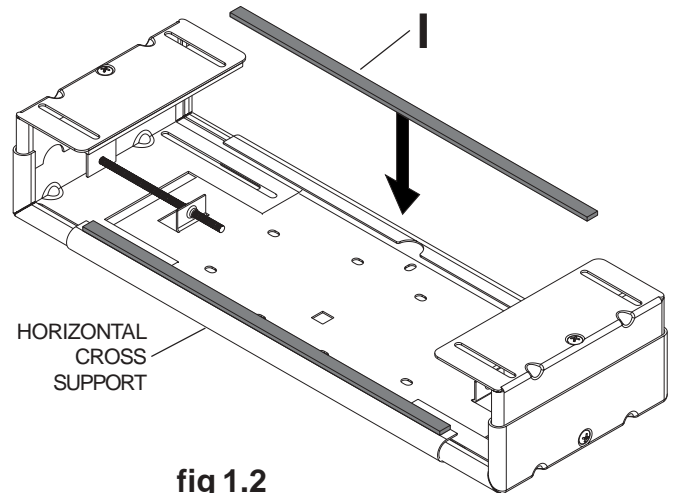


fig 1.2

2



Slide hanger bracket (**B**) onto arm, underneath the tray. Attach DVD/DVR/VCR mount (**A**) to hanger bracket (**B**) using four M5 x 12 mm screw/washer combos (**C**) as shown below.

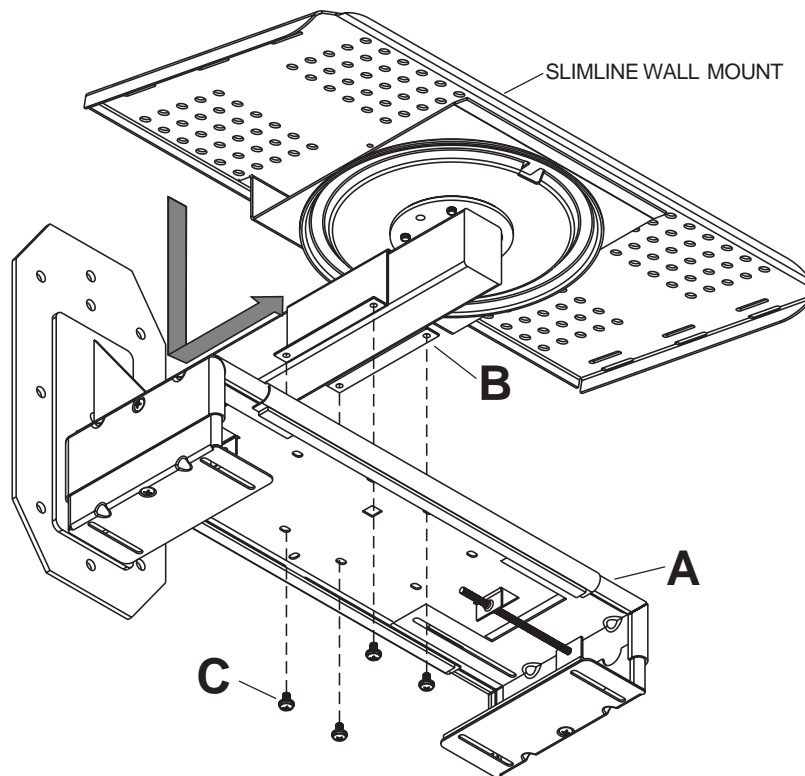

Installing a Single DVD/DVR/VCR Mount

3 Adjust size of DVD/DVR/VCR mount (**A**) to fit media player by loosening vertical and horizontal adjustment screws where shown in figure 2.1 on both sides. Insert media player and align front of player with front of TV on Slimline® wall mount. Tighten vertical and horizontal adjustment screws where shown in figure 2.2 on both sides until player securely fits in mount.

Note: TV and Slimline wall mount not shown in illustrations.

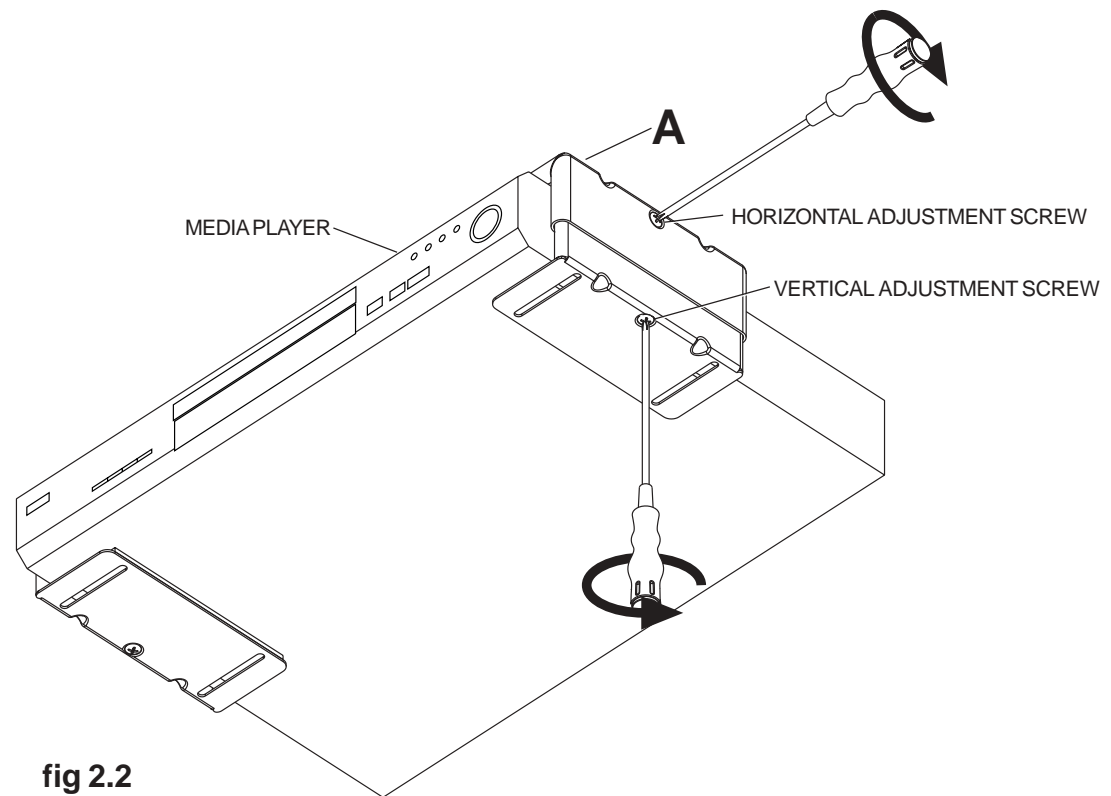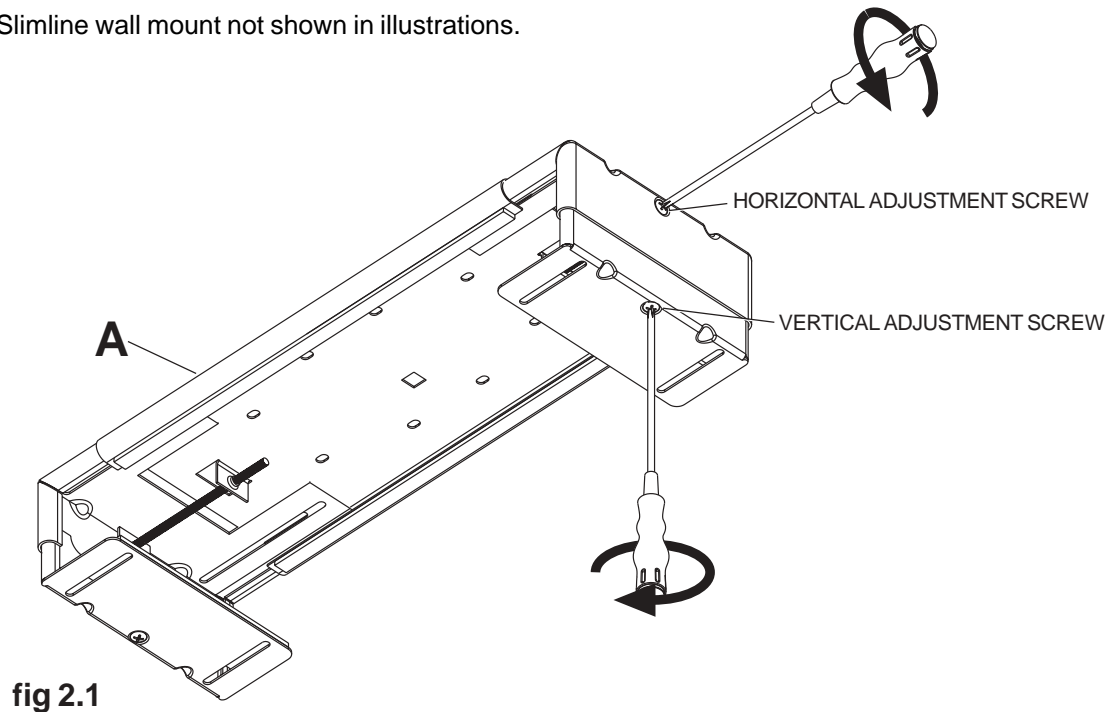

Installing Multiple DVD/DVR/VCR Mounts

3


If adhesive foam (H) is covering slots, trim foam (H) to expose slots. Insert four carriage bolts (D) into slots of upper DVD mount (A). Loosely attach lower DVD mount (A) using four #10 SAE washers (F) and #10-24 nylock nuts (E). This will allow access to the vertical adjustment screws of the upper mount by being able to easily move the lower mount. **Note:** TV and TV mount not shown in illustrations.

⚠ WARNING

- Do not stack more than three DVD/DVR/VCR Mounts from a TV mount.

⚠ WARNING

- Stacked load cannot exceed 50 lb.

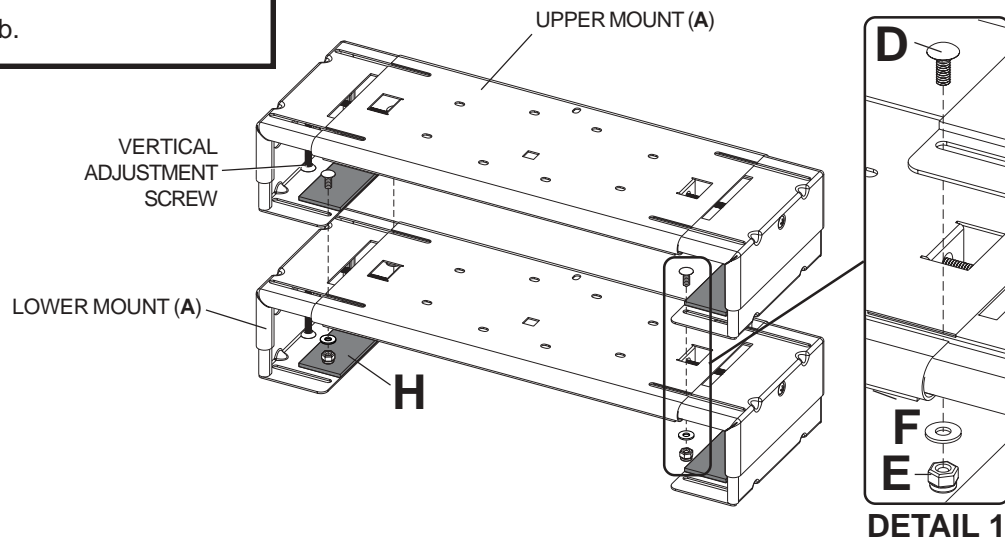

4

Adjust size of the upper DVD mount (A) to fit media player by loosening screws on both sides. Insert media player and align front of player with front of TV on TV mount. Tighten vertical and horizontal adjustment screws where shown on both sides until player securely fits in mount.

Note: To access the vertical adjustment screws of the upper mount, slide the lower mount to the side. Repeat for the opposite side.

Center lower DVD mount (A) and securely tighten four nuts (E). Repeat beginning of this step to install the media player into the lower DVD mount.

