 


# KickPlate™

## boundary mic isolator

Part No. P300 0202 00

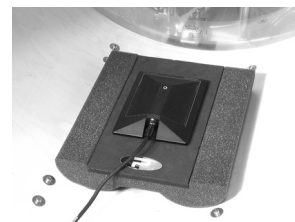 


### USER GUIDE


Congratulations on your purchase of a Primacoustic KickPlate. We are sure you will enjoy many years of improved performance with your microphones and ultimately a better sounding mix. Please take a minute to go through this manual to make sure you are familiar with the workings. If you have any questions, we suggest you visit the KickPlate FAQ section on our web site. This is where we post the latest updates. If you cannot find the answer you are looking for, feel free to send us an email at [info@primacoustic.com](mailto:info@primacoustic.com). We will do our very best to get back to you promptly.

#### OVERVIEW


The KickPlate is an isolating platform designed for those who employ boundary microphones like the popular Shure® Beta91A inside the bass drum. The KickPlate features a dual pontoon isolation base that allows it to be used in kick drums of all sizes. This isolates the microphone from the vibrations.

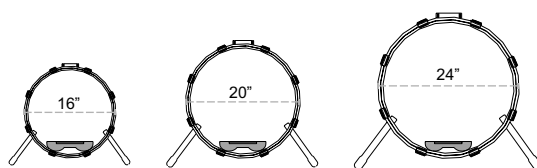

 A heavy steel platform provides a stable microphone mounting surface. This is topped with a no-slip Neoprene pad to keep the microphone in place.

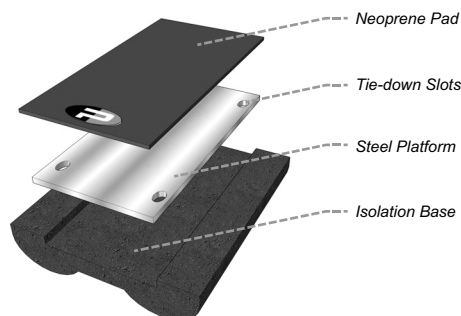


 For those who travel, four cut-out slots provide tie-down points to help hold the KickPlate firmly in place. This can be attached to the inside lugs of the bass drum using heavy wire. Once in place the KickPlate will help reduce resonance and noise from the drum hardware entering the mic.

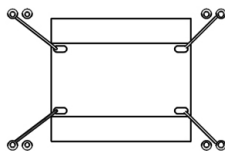


#### STUDIO SET-UP

 Simply place the KickPlate inside the drum shell and position the microphone on the no-slip top pad. The image below shows the KickPlate inside a bass drum with a Beta 91A. Move the KickPlate further in or out of the shell to find the best balance and tone.

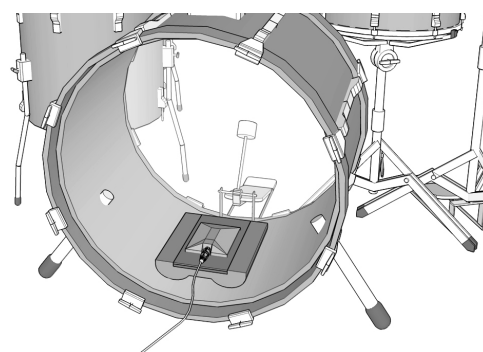

#### LIVE SETUP

 If you intend to travel with the KickPlate attached inside the drum shell, make sure it is well secured and checked regularly to ensure it will not dislodge. The heavy plate can damage the drum if not properly attached. Pass a wire through the tie-down slots and wrap it around itself at least four times. At the other end, loosen the drum hardware so the wire can wrap around the bolt. Re-tighten the hardware and your good to go!

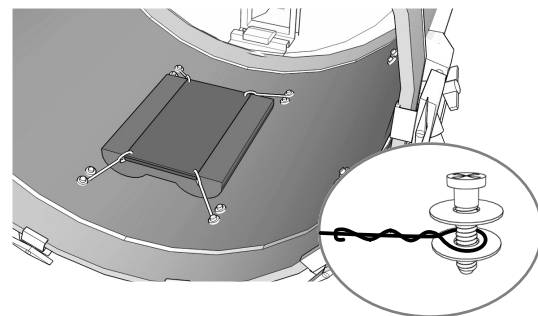

#### LIMITED WARRANTY

Primacoustic products are guaranteed to be free of manufacturing defects for a period of thirty (30) days after purchase. In the unlikely event that a defect is uncovered, please email [info@primacoustic.com](mailto:info@primacoustic.com) or call 604-942-1001 to obtain a return authorization number (RA#) from Primacoustic before the thirty (30) day warranty period expires. Once you have obtained an RA number return the product, freight prepaid, within fifteen (15) days after the date the RA number is issued. In the original packaging (or another, affording an equal degree of protection) include all of the following: (1) RA number clearly marked on the returned package; (2) a copy of the original bill of sale showing proof of purchase from an authorized retail seller; and (3) a written note describing the defect including your name, address, telephone number, email address and the applicable RA number. You are solely responsible for all shipping and insurance costs for returning the product to Primacoustic, and you will not be reimbursed or compensated for any loss or damage incurred. Primacoustic will at its discretion repair or replace the product. Should the product be no longer available, Primacoustic reserves the right to exchange this with a product of similar performance and value. Due to different dye lots, Primacoustic cannot guarantee exact color match. This Warranty shall solely extend to the original owner and is limited to manufacturing defects only and excludes damage due to improper installation, freight handling, wear and tear, abuse, misuse, misapplication, color fading or deterioration due to prolonged exposure to ultra violet light, smoke, humidity or other environmental factors. It is understood that the use and suitability of the product is entirely the responsibility of the buyer or specifying engineer and as such, these parties agree to hold Primacoustic, or its associated company, and/or officers, harmless from any responsibility whatsoever other than what is clearly outlined in this warranty. This warranty gives you specific legal rights, and you may also have other rights, which may vary depending on where you live and where the product was purchased.

Primacoustic is a division of Radial Engineering Ltd.  
1588 Kebet Way, Port Coquitlam, BC Canada V3C 5M5  
Tel: (604) 942-1001 • Fax (604) 942-1010 • [info@primacoustic.com](mailto:info@primacoustic.com)

Specifications and appearances subject to change without notice.  
Copyright © 2011, all rights reserved. User Guide part #: R870 2058 00

