



ACCESSORIES

DC-1B, DC-2B, DC-3B, DC-4B

DC-1G, DC-2G, DC-3G, DC-4G

DC-1W, DC-2W, DC-3W, DC-4W

Desk Top Chassis

(B-Black, G-Gray, W-White)

The DC-1, 2, 3 and 4 desk top chassis hold one, two, three or four Decora®-style products, including RDL remote controls and connector plates.

Installation/Operation

EN55103-1 E1-E5; EN55103-2 E1-E4

Typical Performance reflects product at publication time exclusive of EMC data, if any, supplied with product. Specifications are subject to change without notice.

Step 1
Attach the DC mounting bracket to the mounting surface using 4 screws.
(NOT INCLUDED)
Set the chassis over the mounting bracket.

Step 2
Slide the chassis over the mounting bracket and secure with the two screws.

The DC can also be mounted to a vertical surface.

