




<div data-bbox="426 724 716 884"><p>Contact Information Kontakt-Info Información de contacto Coordonnées Contatti</p></div> <div data-bbox="426 917 688 1092"><p>Address BeachTek Inc. 1855 Kirschner Rd. Suite 230 Kelowna, British Columbia Canada V1Y 4N7</p></div> <div data-bbox="426 1118 567 1175"><p>Phone 416-690-9457</p></div> <div data-bbox="426 1199 625 1255"><p>Email info@beachtek.com</p></div> <div data-bbox="426 1279 621 1335"><p>Website www.beachtek.com</p></div> <div data-bbox="686 1282 816 1335"></div>	<div data-bbox="1087 365 1654 433"><p><i>Operating Manual</i></p></div> <div data-bbox="1115 495 1394 593"><p>DXA-2T Camcorder Adapter</p></div> <div data-bbox="1152 617 1570 893"></div> <div data-bbox="1087 928 1654 991"><p>This operating manual explains the function settings and how to use the adapter to record audio into the camera.</p></div> <div data-bbox="1087 1199 1297 1285"></div> <div data-bbox="1087 1308 1329 1335"><p>©BeachTek Inc. 2010</p></div>
	<div data-bbox="1087 1721 1654 1754"><p><i>Thank You for Purchasing a BeachTek Product</i></p></div> <div data-bbox="1087 1789 1654 1938"><ul style="list-style-type: none">• Before using this high quality device, please read this operating manual thoroughly to obtain the highest performance.• Please contact us if you have any problems or questions.</div> <div data-bbox="1087 2012 1226 2041"><p><i>Description</i></p></div> <div data-bbox="1087 2077 1654 2493"><p>The BeachTek DXA-2T is a two-channel, transformer balanced XLR adapter for today's small, compact camcorders. This adapter is designed to easily attach professional microphones and other audio gear to any camcorder that has a built-in microphone jack. The DXA-2T gives you all the benefits of using balanced audio devices for noise-free operation as well as control over the signal levels to ensure the best possible sound recording. Since the adapter is a passive device, it is completely noise-free and the premium transformers ensure superb audio. The adapter is also virtually unclipable and offers an extremely wide dynamic range. No power or batteries are required to operate the adapter.</p></div> <div data-bbox="1087 2531 1654 2656"><p>The DXA-2T is very easy to set up and use. It allows you to connect a wide variety of audio devices including professional microphones, wireless systems and even take a feed from a house sound system or mixer. The dual trim</p></div>

English	
<p>controls allow you to adjust the input levels independently and the output switch lets you select mono or stereo operation. The rugged die-cast aluminum construction is encased in a rubber boot which makes this device truly reliable and dependable even in the most demanding situations. Its compact size fits neatly under any camcorder – it can also be mounted to any standard tripod.</p>	<p><i>Features</i></p> <p>Inputs</p> <ul style="list-style-type: none">• Two transformer balanced XLR connectors• One unbalanced mini-jack — ideal for wireless microphones <p>Output</p> <ul style="list-style-type: none">• Unbalanced stereo mini-jack with a replaceable output cable• Selectable MONO or STEREO <p>Trim Controls</p> <ul style="list-style-type: none">• Adjusts signal level on each channel from unity to no output <p>LINE / MIC Switches</p> <ul style="list-style-type: none">• Switchable input between LINE or MIC levels for versatility <p>Balancing Transformers</p> <ul style="list-style-type: none">• Premium wide-bandwidth transformers for superb audio• Shielded in a custom deep drawn mu-metal cover for very quiet operation <p>Chassis</p> <ul style="list-style-type: none">• Die-cast aluminum chassis• Rubber boot provides added protection and comfort
2	3

English	
<p><i>Quick Setup Guide</i></p> <ol style="list-style-type: none">1) Mount the DXA-2T to the camera by lining up the mounting bolt and azimuth pin on top of the adapter with the tripod holes on the underside of the camera. Turn the mounting bolt under the adapter with a coin or screwdriver until snug.2) Connect the supplied output cable from the OUT jack on the adapter to the MIC input on the camcorder. If the camera has a MIC/LINE input selector, set it to MIC.3) Initially set the G2/G1 ground switch to G2.4) Set the LIN/MIC switches to MIC for microphones and wireless systems or LIN for mixers.5) Set the M/S switch to M for mono when using one channel or to S for stereo when using two channels.6) Initially set the LEFT and RIGHT trim controls fully clockwise for no attenuation.7) Connect your audio sources to the LEFT and RIGHT XLR or AUX inputs on the adapter.8) Plug your headphones into the PHONES jack on the camera to monitor the audio. Be sure that you hear audio on both channels from the connected devices.	<ol style="list-style-type: none">9) Before starting to record, adjust the LEFT and RIGHT trim controls if you hear any distortion through the headphones or if the camera vu meter shows peaking.10) You may need to switch the G2/G1 ground switch to G1 if you hear any odd noises from ground loops. Set it to whatever position sounds best.11) You are now ready to begin recording. <p>Note, we recommend the use of sensitive condenser type microphones for the best results. Dynamic microphones usually do not have sufficient output levels and may result in an excessive amount of hiss from the high level of amplification necessary by the camera's audio preamplifiers. Microphones with a sensitivity rating of greater than -40 dBV are ideal.</p>
4	5

Adapter Controls and Connectors

❶ M/S Switch

The M (MONO) setting mixes both channels together and sends the audio to both the right and left channels, which is ideal when only one microphone is being used. Be sure to keep the trim control for the unused channel fully clockwise (yes, clockwise) so that it does not interfere with the working channel. The S (STEREO) setting keeps both channels separated and should normally be used when two microphones are connected. This provides two discrete channels of audio.


❷ G2/G1 Switch

Set the G2/G1 ground switch on the DXA-2T to the position that gives you the least amount of noise. This switch allows the input and output grounds to be isolated to prevent ground loops when connected to AC powered mixing boards.

❸ LIN/MIC Switches

To connect a microphone to either channel of the DXA-2T, set the corresponding LIN/MIC switch to MIC. To connect a line level output from a mixer to the DXA-2T, set the LIN/MIC switch to LIN to activate a 40 dB pad. This attenuates the signal to the proper level so that it will not overdrive the input of your camcorder.

Control Panel

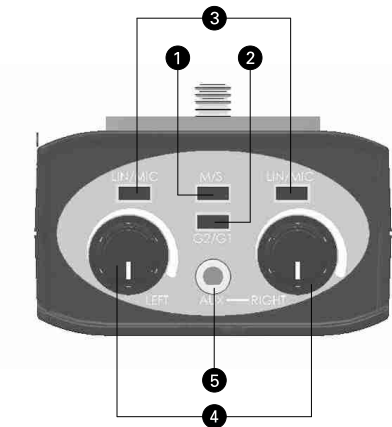

❹ LEFT and RIGHT Trim Controls

Each channel has a trim control that attenuates the input signal from unity to no gain. Since the adapter is passive you should normally set the trim controls as high as possible without causing distortion. If necessary, adjust either the left or right trim control to balance both inputs so they are of equal amplitude.

Most camcorders use an automatic gain control (AGC) to adjust the optimum audio level for recording. If your camcorder has no way of disabling this feature, the adapter can still be used to adjust the input levels but will not override the AGC circuitry.

If your camcorder allows you to switch the AGC off, you can use this option for manual control over the audio levels. For the best signal to noise performance, set the gain on the camera to about 30 to 40% of maximum and then adjust the trim controls on the adapter for the proper level. As a guide, the recording levels should be no higher than -12 dBFS (-12 dBV below maximum). Please refer to your camcorder's user manual for more information on setting the proper recording levels.

❺ AUX Input Jack

The unbalanced input is ideal for connecting a wireless receiver that has a mini-plug output cable. This sends the signal to the right channel. Be sure to disconnect any cables from the right XLR input when using the AUX input.


❻ LEFT and RIGHT XLR Inputs

The two balanced XLR inputs attach to professional microphones or other audio gear such as mixers and sound boards.


❼ OUT Jack

This jack outputs the mic level signal from the adapter for connection to the camera. Use the supplied output cable to connect to the MIC input on the camera.

XLR Panel

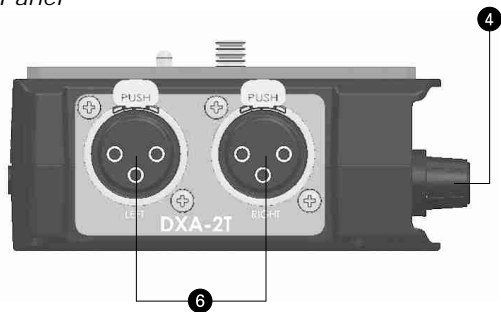

Back Panel

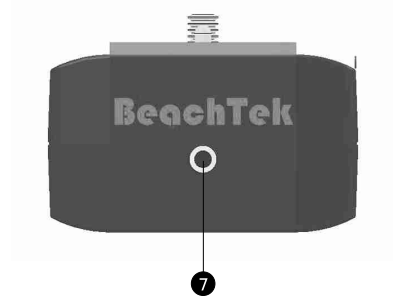

<i>Specifications</i>		<i>Limited Two Year Warranty</i>	English
Input Level	MIC setting: -35 dBu ideal LINE setting: -10 to +4 dBu ideal		
Output Level	Nominal MIC levels	This warranty covers any defects or malfunction in your new BeachTek adapter for two years from date of purchase. BeachTek will replace or repair any defective or malfunctioning adapter, within the warranty period, at no charge. The warranty does not cover damage resulting from accident, alteration, misuse or abuse. The device must be sent to our service center at your expense. Should you require service please contact us for an RMA Request before returning the unit. Return instructions can be found on our website at www.beachtek.com under the Support Option. Upon receiving the returned adapter it will be inspected, and replaced or repaired if found defective. The unit will be shipped back to you within five business days at our expense.	
Frequency Response	20 Hz to 20 kHz (+/- 3 dB)		
Dimensions	3.75" x 2.5" x 1.5" (L x W x H) (95 mm x 64 mm x 38 mm)		
Weight	10 oz (0.28 kg)		
10		11	