

## Warranty

Cerevo LiveShell PRO's warranty obligations for this hardware product are limited to the terms set forth herein. Cerevo, as defined below, warrants this Cerevo-branded hardware product against defects in materials and workmanship under normal use for a period of ONE YEAR from the date of retail purchase by the original end-user purchaser ("Warranty Period"). However, this warranty does not apply:

- if there is no purchase date, name or signature from the agent on the warranty, or the contents specified on the warranty are altered. The purchase date can be verified by a valid receipt.
- to damage during transportation after the purchase.
- to damage caused by accident, abuse, misuse, liquid contact, fire, earthquake or other external causes.
- to damage caused by connection with other equipment.
- to consumable parts, such as batteries.
- to damage caused by use with non-Cerevo products.
- to damage caused by operating the product outside the permitted or intended uses described by Cerevo.
- to damage caused by service (including repairs and modifications) performed by anyone who is not a representative of Cerevo.
- to damage caused by exposing the product outside of the recommended environment.
- if the product is taken apart.

If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Cerevo will either:

- repair the hardware defect at no charge, using new or refurbished parts that are equivalent to new in performance and reliability
- exchange the product with a product that is new or refurbished that is equivalent to new in performance and reliability and is at least functionally equivalent to the original product
- refund the purchase price of the product.

To the extent permitted by law, this warranty and the remedies set forth above are exclusive and in lieu of all other warranties, remedies and conditions, whether oral, written, statutory, express or implied.

As permitted by applicable law, Cerevo specifically disclaims any and all statutory or implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose and warranties against hidden or latent defects.

A replacement product or part assumes the remaining warranty of the original product or ninety (90) days from the date of replacement or repair, whichever provides longer coverage for you.

When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Cerevo's property.

When a refund is given, the product for which the refund is provided must be returned to Cerevo and becomes Cerevo's property.

Cerevo does not warrant that the operation of the product will be uninterrupted or error-free.

Cerevo is not responsible for damage arising from failure to follow instructions relating to the product's use.

**Important:** Please do not open this hardware. Doing so voids your warranty.

Except as provided in this warranty and to the extent permitted by law, Cerevo is not responsible for direct, special, incidental or consequential damages resulting from any breach of warranty or condition, or under any other legal theory.

If you would like to request warranty service, please contact us.

## Hardware Precautions

Use this product in an environment that has a temperature between 32°~ 104°F (0°~40°C) and a humidity between 10% ~90%. A low or high temperature may cause the battery to have a lower life and could temporally stop the device as well. Do not use any other electrical adapters other than the provided. Doing so could damage the product or result in a fire. Use the adapter with surge protection only in electrical outlets supplying the electric currents specified on the adapter. Do not use this product in any location that is subjected to direct sunlight, water, humidity, fire, or high temperatures. Doing so could damage the product or result in electric shock.

**⚠ WARNING: KEEP THE WI-FI ADAPTER OUT OF REACH OF CHILDREN AND PETS TO AVOID ACCIDENTAL INGESTION.**

FCC COUTION FCC ID: NDD9577111007 Model: CDP-WF01

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any inter ference received, including interference that may cause undesired operation.

Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

## Contact Information

Please review the online manual(<http://s.cerevo.com/prodoc>) and FAQ(<http://s.cerevo.com/profaq>) before contacting us. We are only available through email. When you contact us, please provide 1. your name, 2. product name, 3. the registered email address on the Dashboard. Please note that we are not available weekends and holidays.

Please contact our support team at [support-us@cerevo.com](mailto:support-us@cerevo.com)

# LiveShell PRO Quick Setup Guide



Thank you for purchasing LiveShell PRO. Review the Online Manual periodically due to the frequent updates and information about potential new features that will be updated there. \*This Quick Setup Guide only covers network environments where IP can be automatically acquired through DHCP, and ID input and consent agreement are not required.

Detail instructions are available online. [LiveShell PRO Online Manual http://s.cerevo.com/prodoc](http://s.cerevo.com/prodoc)

## STEP ①

### 1 LiveShell PRO Device Preparations

Connect to AC adapter (Do not turn on the power yet).



#### When you use Ethernet

Next, connect the Ethernet cable to the main device. Press and hold the button on the upper left (Power button) for 5 seconds to turn on the power. **Please make sure that this step order is followed.**

- Press and hold for 5 seconds (Power Button).
- PIN Code is shown.
- Connect Ethernet Cable.

#### Language Setup

When you turn on the LiveShell PRO, the language setup page shows up on the screen. Select a language using the lower left/right buttons and click the button on the upper right corner to confirm.

Wait for one minute, and it is ready to connect when the PIN code is displayed on the screen.



#### When you use Wireless(Wi-Fi)

Connect the Wi-Fi adapter, push all the way. Press and hold the button on the upper left (Power button) for 5 seconds to turn on the power.

- Press and hold for 5 seconds (Power Button).
- Connect Wi-Fi Adapter.

Click the upper right button to confirm.



Wait for one minute. The device is ready to connect when the screen says "Initial Registration".

### 2 How to get a Ustream Account

If you don't have Ustream ID/PW yet, please get it from Ustream Web site.



### 3 Register for Dashboard (Free)

Please access <http://s.cerevo.com/pro> from your PC/smartphone and go to Sign-up page to Sign-up as a member.



Click the URL sent to your registered email address to complete your Sign-up.

## STEP ②

\* This Quick Setup Guide only covers network environments where IP can be automatically acquired through DHCP, and ID input and consent agreement are not required.

Detail instructions are available online.




LiveShell PRO Online Manual <http://s.cerevo.com/prodoc>



## When you use Ethernet


### 1. Setup Ustream Account

Please enter your Ustream username and password.

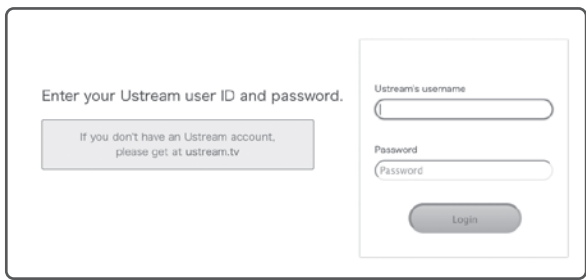

### 2. Select a broadcast channel and network connection type


Select a broadcast channel and a type of network.

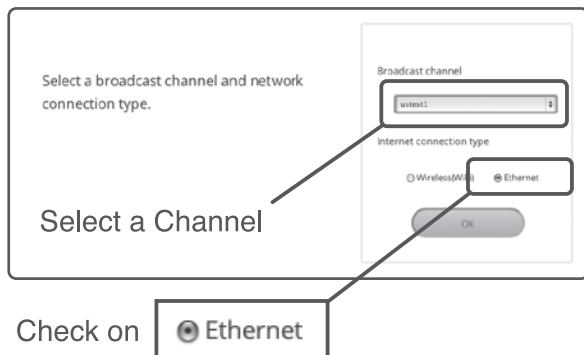

Check on ☒ Ethernet

### 3. Enter PIN Code


Lastly, please enter the PIN code that was displayed on the screen of the LiveShell PRO.

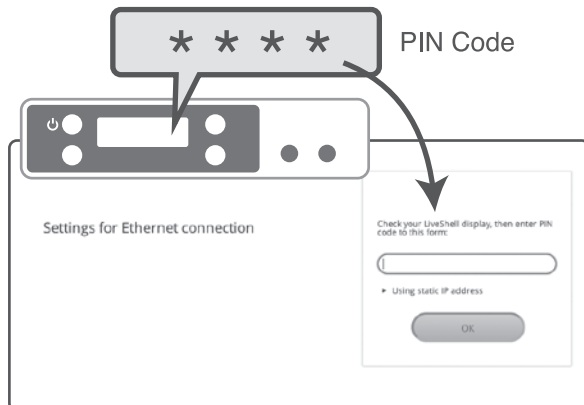

## When you use Wireless (Wi-Fi)


### 1. Setup Ustream Account

Please enter your Ustream username and password.

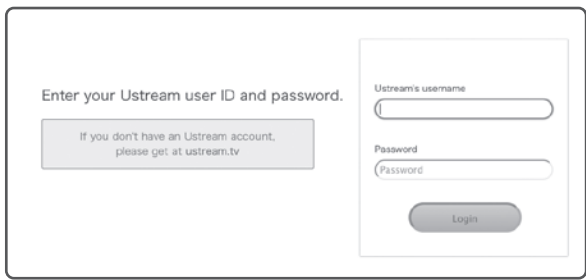

### 2. Select a broadcast channel and network connection type


Select a broadcast channel and a type of network.

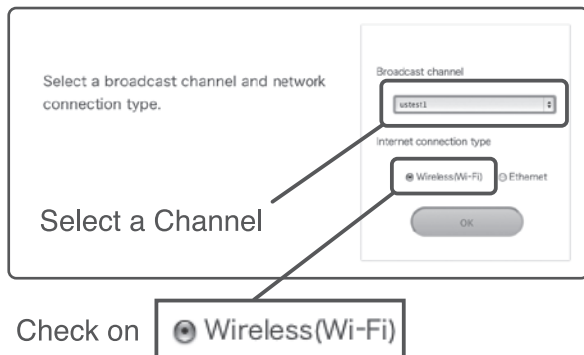

Check on ☒ Wireless(Wi-Fi)

### 3. Setup Network


Next, please enter the Wireless network name(ESSID) and password.

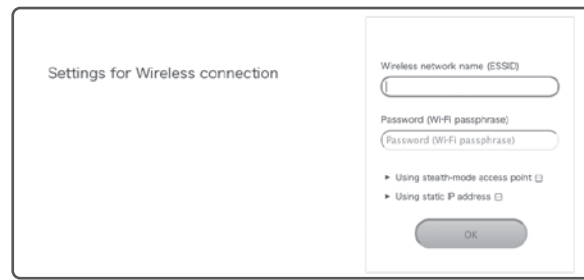

\* Please be sure to use the correct case (upper or lower) and symbols (hyphens/underscores, etc).

### 4. Transferring Network Setting

Connect the "MIC IN" port on the LiveShell PRO to the headphone jack on your PC/Smartphone using the provided blue cable, and click Play button '▶'. If the Play button does not show up on your browser of PC/Smartphone, select "Download and Play".

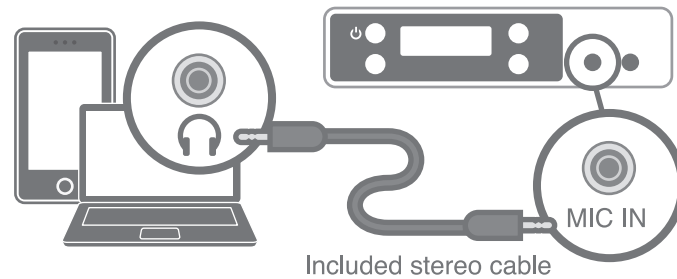

Included stereo cable

If this does not work, adjust the volume on your PC/Smartphone, or check and see if you are running another application using audio output. Installing Google Chrome (a free web browser) sometimes helps resolve this issue.



保証書

Live Shell PRO(以下、本機)についての保証は、本保証における条件に限定されるものとします。株式会社Cerevo(以下、弊社)は、以下に定める通り本機について通常の使用時において材質および製造上の瑕疵がないことを、最初のエンドユーザである購入者が販売店から購入した日より1年間(以下「保証期間」といいます)保証します。但し、本保証は、以下のいかなる場合においても適用ありません。

(a) 本保証書が無い場合

(b) 本保証書にご購入日、お名前、ご購入代理店印の記入がない場合、または字句が改ざんされている場合

但し、ご購入日を証明できる領収書がある場合は除きます。

(c) ご購入後の輸送、移動、落下による故障及び損傷

(d) 事故、乱用、誤使用、液体との接触、火事、地震または他の外的原因による損害

(e) 他の機器との接続に起因する故障・損傷

(f) 電池等の消耗品についての損害、不具合

(g) 特定の他社製品との相性問題

(h) 弊社が定め、許可し、意図した使用方法以外で製品を動作させたことにより生じる損害、動作不具合

(i) 弊社以外の者が行ったサービス(修理・改造等を含む)によって生じる損害、動作不具合

(j) 弊社が指定した動作環境以外での損害、動作不具合

(k) 本機を分解された場合

万一、ハードウェアに瑕疵があり、かつ有効な請求が保証期間内に弊社になされた場合、弊社は法律が認める限りにおいて以下のいずれかを行うことができます：

(1) 新品の部品あるいは性能および信頼性において新品と同等の再生部品を使用して無償にて修理させていただきます

(2) 新品の製品に交換するか、性能および信頼性において新品と同等の再生製品に交換させていただきます

(3) 製品代金の返金をさせていただきます。

修理又は交換された本機は、製品保証の残存期間または交換/修理日より90日間のいずれか長い期間、お客様に対して保証されるものとします。製品または部品が交換された場合、新しい製品または部品がお客様の所有物となり、不具合製品または部品は弊社の所有物になるものとします。製品代金が返金される場合、返金対象製品は、弊社に返却されるものとします。

法によって最大限認められる範囲内において、ここに示した本保証およびその救済方法は、唯一の保証であり、口頭あるいは書面のいずれかを問わず、制定法上、明示あるいは黙示を問わず、その他の保証、救済、条件について代わるものです。適用される法律によって認められる場合、弊社は、特に一切の制定法上の、または黙示の保証をしないものとし、これには商品性、特定目的適合性、隠れたあるいは潜在的欠陥に対する黙示の保証をしないことを含むものですが、これに限るものではありません。

弊社は、製品の使用が中断されず、またはエラーなく作動することを保証しません。また製品の使用に関する指示に従わないことに起因する損害に対して責任を負いません。

**重要: 本機を開けないでください。開けると本保証の対象外となります。**

本保証で認められることを除き、法によって最大限認められる範囲内において、弊社は保証もしくは条件違反から生じる、いかなる法的理論に基づく直接、特別、間接、結果的損害に責任を負わないものとします。

保証を受けるには、弊社サポート窓口までご連絡ください。

ご購入日 / 店名

取り扱いに関する注意事項・その他

本機は 0° ～ 40° C、湿度10%～90%で結露なき環境でお使いください。低温または高温によってバッテリーの消耗が早くなったり、機器が一時的に動作しなくなる場合があります。

・ACアダプタは必ず本製品付属のものをお使いください。本製品付属以外のACアダプタを使うと、故障、発煙、発火の恐れがあります。

・直射日光が当たる場所、水がかかる場所、火気の周辺、熱気がこもるところでの使用はおやめください。故障や変形、感電の恐れがあります。

お問い合わせ先

お問い合わせの前に、オンラインマニュアル( <http://s.cerevo.com/prodoc> )及びFAQ( <http://s.cerevo.com/profaq> )を確認ください。その上で、1. 氏名 2. 製品名 3. Dashboardに登録したメールアドレスを添えてメールにてご連絡ください。土日祝日は返信対応業務を行っておりません。また、電話での受付は行っておりませんので、ご了承ください。

サポート窓口

Eメール宛先

[support@cerevo.com](mailto:support@cerevo.com)

LiveShell PRO クイックセットアップガイド

この度はLiveShell PROをお買い上げいただきありがとうございます。本機の機能は発売後も追加・修正されますのでオンラインマニュアルをご覧ください。

本ガイドは、DHCPで自動的にIPが取得でき、ブラウザでのID入力や利用許諾同意操作等が必要なネットワーク環境についてのみ記載します。固定IP環境などでの利用については、オンラインマニュアルをご参照ください。

説明書はオンラインで

LiveShell PROオンラインマニュアル  
<http://s.cerevo.com/prodoc>

STEP ①

1 LiveShell PRO 本体の準備

まず、ACアダプタを接続してください。（まだ電源はいれなくてください）

有線 LAN を使用する場合

次に有線LANケーブルを本機側面に接続します。その後、左上ボタン（電源ボタン）を5秒間押し続け電源を入れてください。**この順序は大変重要ですので、お間違えないようご注意ください。**

② 5秒間長押し（電源ボタン）

③ 数字が表示されます

\*\*\*\*

① LANケーブルを接続

言語の設定

電源を入れると、言語設定画面が表示されます。左下/右下ボタンでご利用になる言語を選択し、右上ボタンで決定します。

1 分程待ち、本体液晶画面に数桁の数字が表示されれば本体側の準備は完了です。

無線 LAN を使用する場合

付属のWiFiアダプタの装着を確認し、左上ボタン（電源ボタン）を5秒間押し続け電源を入れてください。

② 5秒間長押し（電源ボタン）

① WiFiアダプタの装着を確認

右上ボタンで決定

HELLO Language/言語 English

HELLO Language/言語 日本語

1 分程待ち、本体液晶画面に「初期登録待受中」と表示されれば本体側の準備は完了です。

2 Ustream アカウントの取得

Ustreamに会員登録されていない方はUstreamのユーザーIDとパスワードを入手しておいてください。

<http://www.ustream.tv>

サインアップ Click!

3 Dashboard への会員登録（無料）

パソコン又はスマートフォンのブラウザを使って <http://s.cerevo.com/pro> にアクセスし「新規登録」から会員登録を行ってください。

<http://s.cerevo.com/pro>

Click!

メールアドレスとお好きなパスワードを入力

STEP ②

※ 本ガイドではDHCPで自動的にIPが取得でき、ブラウザ上でのID入力や利用許諾への同意操作などが必要のないネットワーク環境についてのみ記載します。

説明書はオンラインで

LiveShell PROオンラインマニュアル  
<http://s.cerevo.com/prodoc>

有線 LAN を使用する場合

1. Ustream アカウントの設定

UstreamのユーザーIDとパスワードを入力します。

2. 配信チャンネルとインターネット接続方法を選択

本機で配信したいチャンネルと、使用するインターネット接続方法を選びます。

3. 数字の入力

最後に、本体液晶画面に表示されている数桁の数字を入力します。

※ 画像はパソコン使用時の設定画面です

セットアップ完了

しばらく待って、下記Dashboardメインパネル画面が表示されれば、セットアップは完了です。メインパネルの詳細な使い方についてはオンラインマニュアルをご覧ください。

LiveShell PROオンラインマニュアル  
<http://s.cerevo.com/prodoc>

※ 本機の画面にエラー表示されて進まない場合は、オンラインマニュアルをご参照ください。

無線 LAN を使用する場合

1. Ustream アカウントの設定

UstreamのユーザーIDとパスワードを入力します。

2. 配信チャンネルとインターネット接続方法を選択

本機で配信したいチャンネルと、使用するインターネット接続方法を選びます。

3. ネットワークの設定

次に、無線LANのネットワーク名（ESSID）とパスワードを入力します。

4. ネットワーク情報の書き込み

本機の「MIC IN」端子と、お使いのパソコン又はスマートフォンのヘッドフォン端子を付属の青いケーブルで接続し、再生ボタン ▶ を押してください。再生ボタンが表示されない場合は、「ダウンロードした後、再生する」を選びます。

同梱のステレオケーブル

うまく行かない場合、パソコン又はスマートフォンの音量を調節したり、他に音が鳴るようなアプリを起動していないか確認してください。また、Google Chrome（無料）をインストールして使うことで不具合が解消される場合があります。