peerless®

Installation and Assembly:

Models: HDS-S
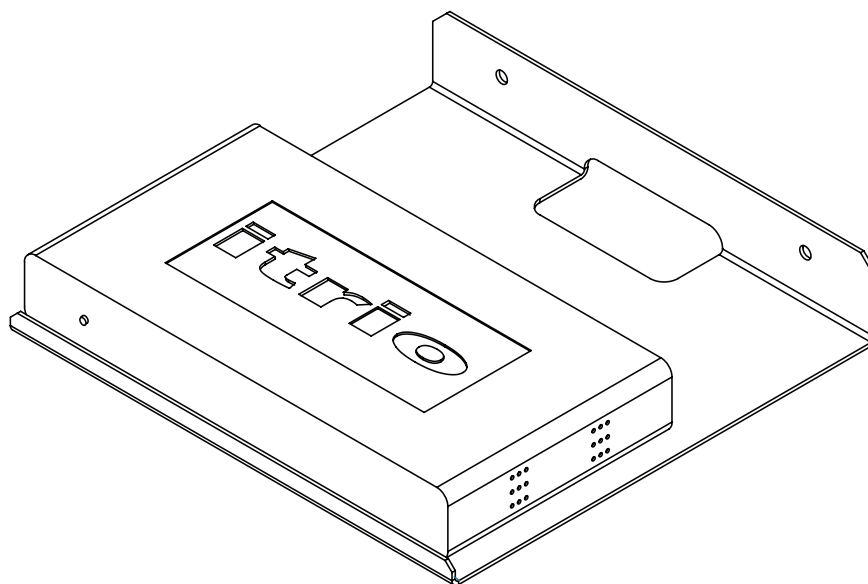
	PARTS LIST		
	Description	**Qty.**	**Part #**
A	wall shelf	1	009-P1329
B	#8 x 1" phillips head screw	2	520-0671
C	drywall anchor	2	590-2107
D	rubber pad	3	590-1159
E	cable tie	2	560-9711

A

B   **C**   **D**   **E**

Visit the Peerless Web Site at www.peerlessmounts.com   For customer care call 1-800-865-2112.
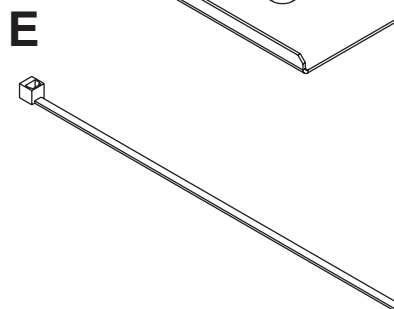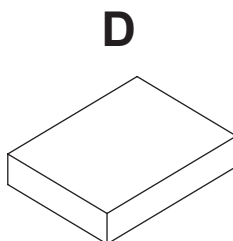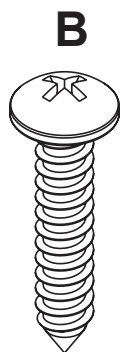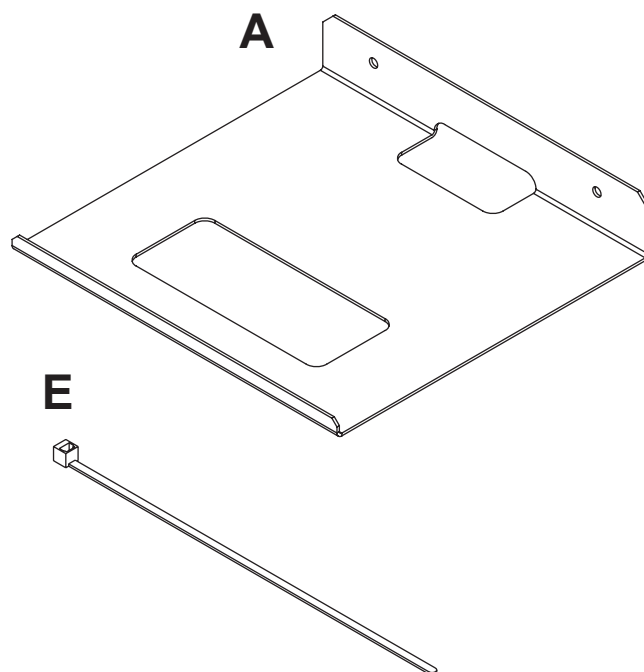
Installation to Drywall

> ## ⚠ WARNING
>
> - Drywall must be 1/2" or thicker.
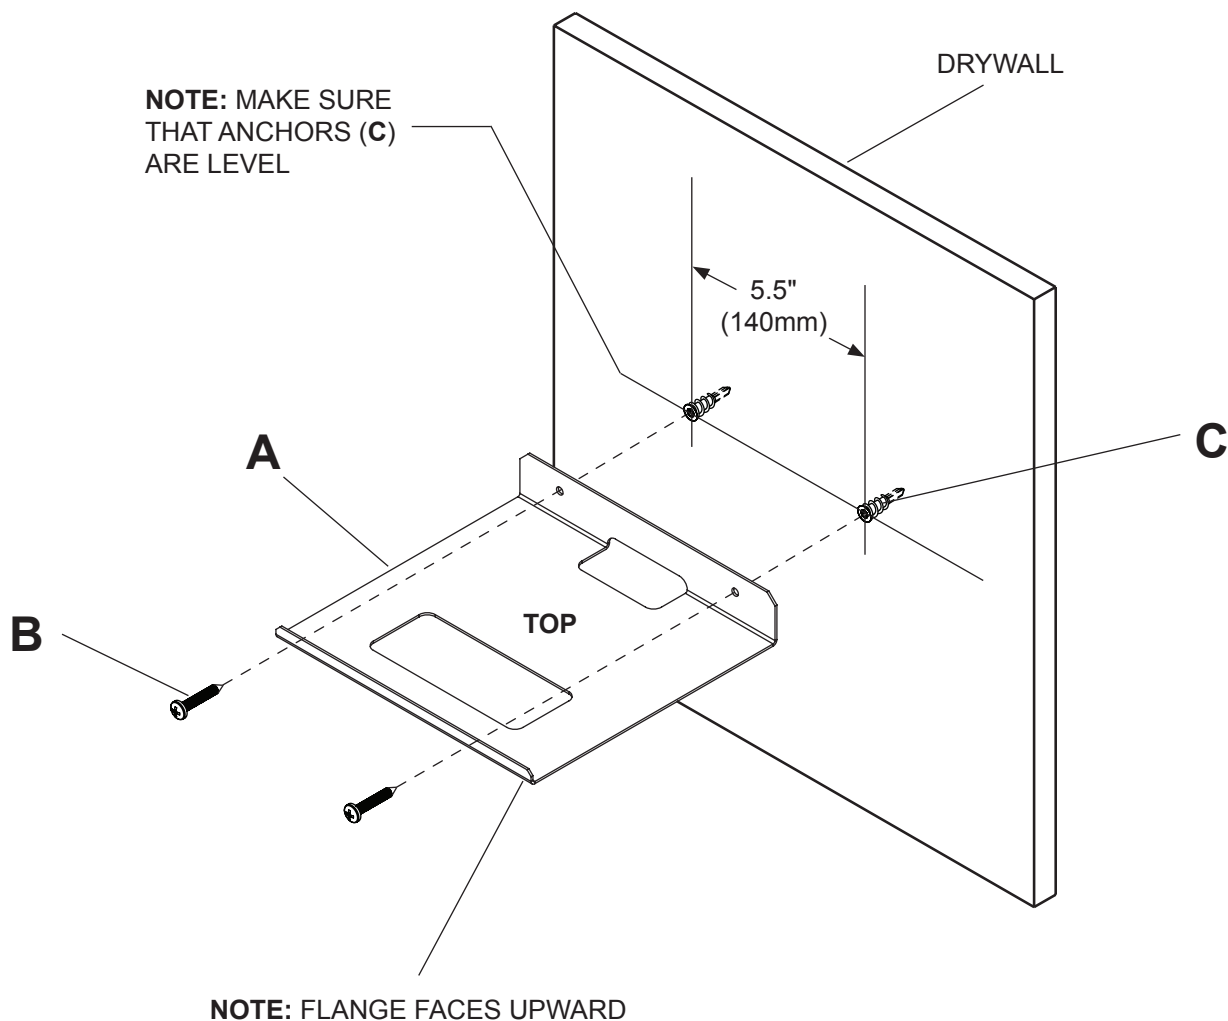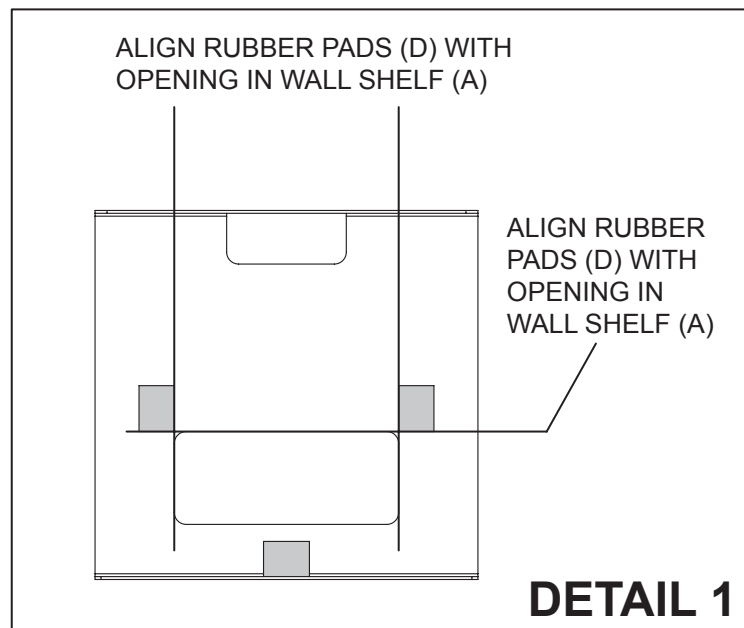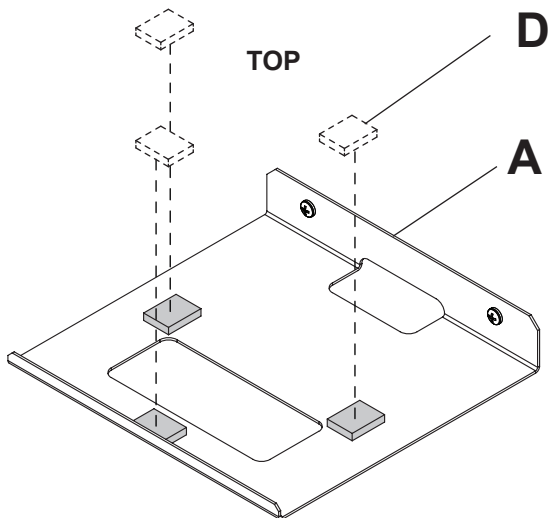> - Make sure that the wall will safely support the combined load of the equipment and all attached hardware and components.
> - Using a power drill to secure anchors may cause anchors to fail.

1 **NOTE:** Flange on wall shelf faces upward.
Using wall shelf (**A**) as a template, mark the center of the two mounting holes. Using a phillips screwdriver, install two anchors (**C**) into drywall as shown below.
Loosely fasten wall shelf (**A**) to drywall using two #8 x 1" phillips head screws (**D**).
Level, hold, and then tighten all screws.

DRYWALL

NOTE: MAKE SURE THAT ANCHORS (**C**) ARE LEVEL

5.5"
(140mm)

A

B

C

TOP

NOTE: FLANGE FACES UPWARD

Visit the Peerless Web Site at www.peerlessmounts.com

For customer care call 1-800-865-2112.

2 **NOTE:** Rubber pads must be in orientation as shown in detail 1.
Place three rubber pads (**D**) onto top surface of wall shelf in orientation as shown in detail 1.

TOP

D

A

ALIGN RUBBER PADS (D) WITH
OPENING IN WALL SHELF (A)

ALIGN RUBBER
PADS (D) WITH
OPENING IN
WALL SHELF (A)

DETAIL 1

3 Place computer on top of rubber pads (**D**) as shown below.
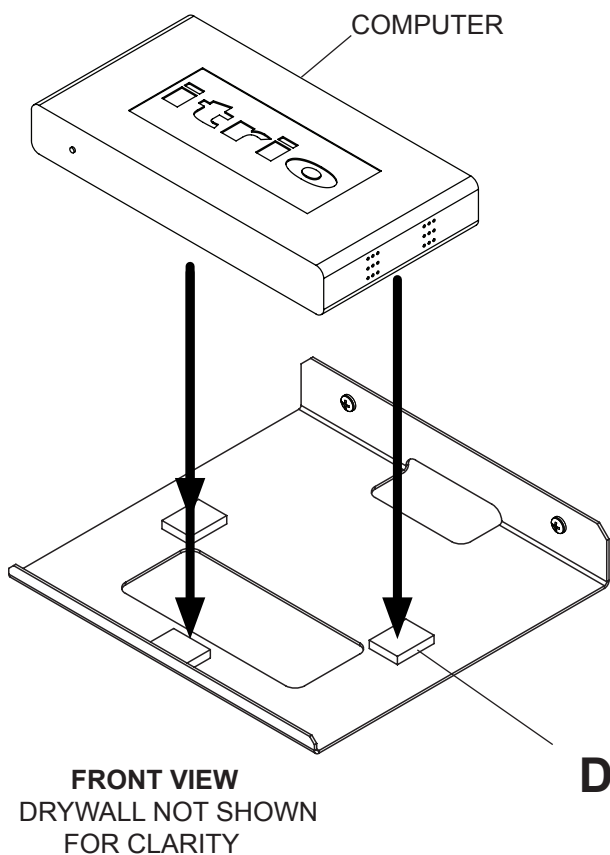
4 Route computer cables through opening as shown.
NOTE: Cable ties (**E**) can be used as needed.

COMPUTER

D

FRONT VIEW
DRYWALL NOT SHOWN
FOR CLARITY

COMPUTER

COMPUTER CABLES

BACK VIEW
DRYWALL NOT SHOWN
FOR CLARITY

ISSUED: 03-11-11 SHEET #: 125-9196-1

Visit the Peerless Web Site at www.peerlessmounts.com

For customer care call 1-800-865-2112.