


Wall-mounted Blackboard Instructions

Note: After assembly, remove the protective film from the board with a utility knife.

Parts List Note: Hardware provided is for drywall installation. If attaching to other material fasteners are to be furnished by other.

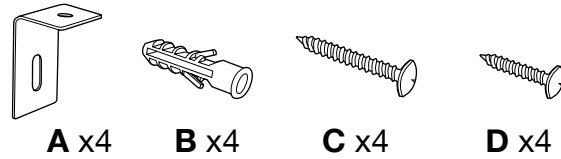

Tools Required



- Tape Measure
- Chalk Line
- Drill
- 1/4" Drill Bit
- Extended Drive Phillips
- Hammer

12/11/13

- 1** Snap two horizontal chalk lines at the desired height. If attaching to drywall drill four 1/4" holes as specified.
- 2** Insert drywall anchors **B** into holes then attach brackets **A** at the bottom with screw **C** making sure the bracket is in the lowest position.
- 3** Attach brackets **A** at the top with screw **C** making sure the bracket is in the highest position. Tighten screw just enough so that the bracket can be tapped down with hammer.
- 4** Place black board on lower brackets making sure to center it. Attach bracket to wallboard using screw **D** starting with the middle lower bracket.
- 5** Tap the top brackets down so they are touching the top of the board. Attach bracket to wallboard using screw **D**.


35 1/2" x 47 1/4" Board

Vertical Orientation

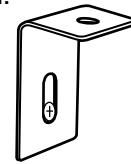

NOTICE ON BLACKBOARD UNITS

Do not use dry erase markers on black board units. Only Neon Wet-Erase markers should be used on the black board's surface. Sold separately.

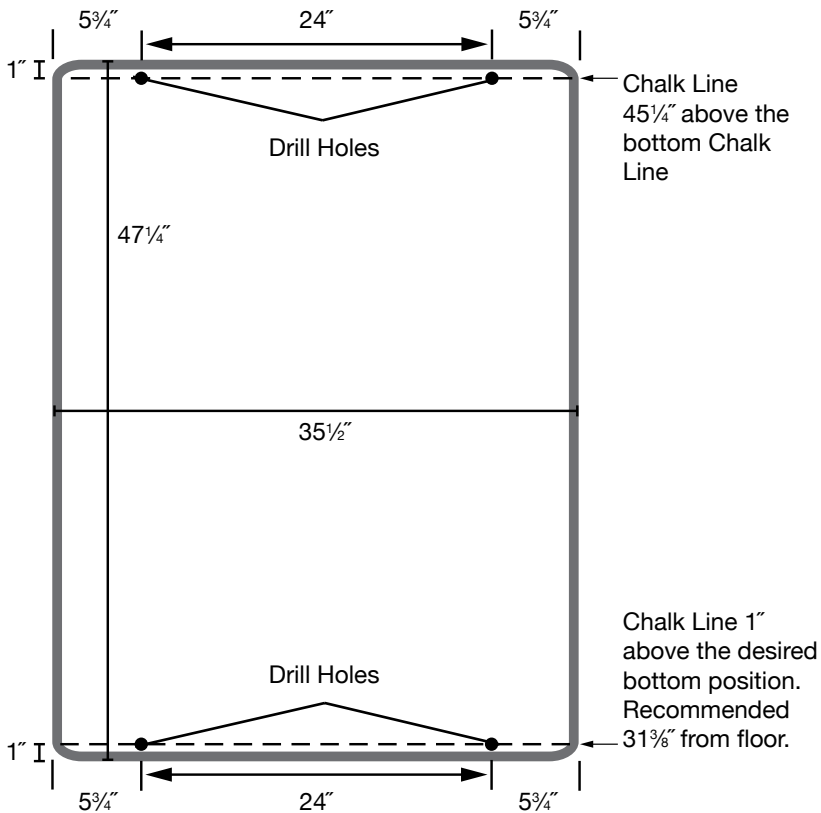

Horizontal Orientation

