

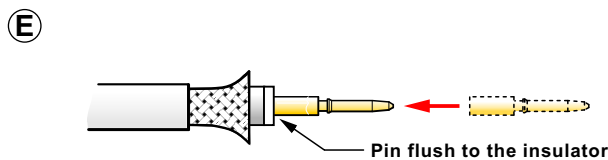
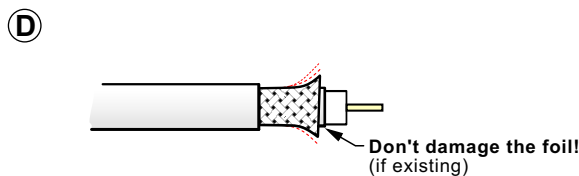


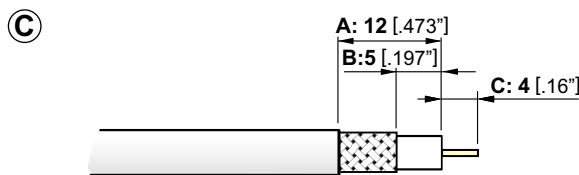

ASSEMBLY INSTRUCTION

rearTWIST BNC 75 Cable Connector - Crimp version

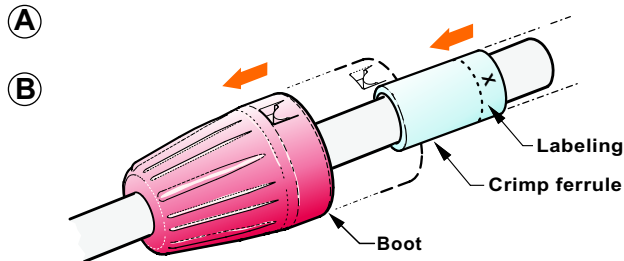

A Slide the boot onto the cable
- Position the labeling to the cabelend

B Slide the crimp ferrule onto the cable



C Prepare cable as shown
- Use an adjustable coaxial cable stripper

D Spread the braided shield
(It's easily with the NEUTRIK®
"SHIELD-SPREADING-TOOL"!)

E Crimp the pin
- position the pin on the center conductor
- Crimp the pin with the tool
(For best crimping-results it is recommended to use the original Neutrik crimp tool
- HXBNC with the corresponding insert
or hexcrimp acc. to IEC 803-W (SW 1.7)
or squarecrimp acc. to IEC 803-2 (SW 1.6)
- Pin can also be soldered (Optional)!
- Straighten the pin if misaligned.


F Insert the cable into the connector body

G Slide the crimp ferrule over the shield to the front and push the cable to it's end position until you hear a snap noise.

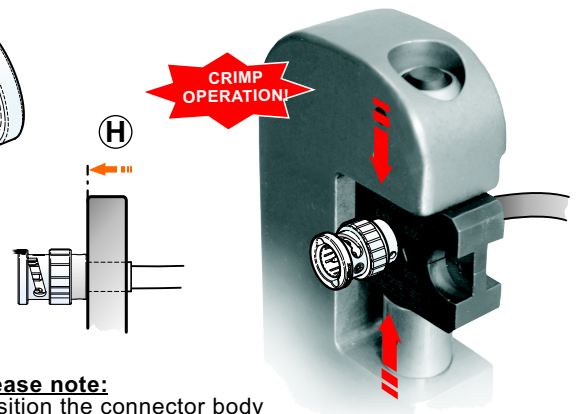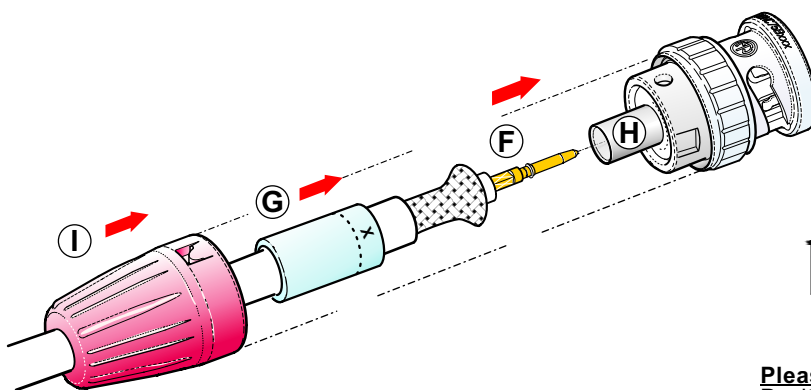

Please note:
Position the connector body
Flush with the die face.

Assembled Connector

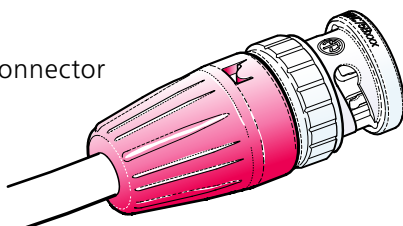

H Crimp the ferrule with the tool

(For best crimping-results it is recommended to use the original Neutrik tool - HXBNC with the corresponding insert)

I Snap the boot onto the connector body

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93
NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704 / 438 9202
NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439
NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511
NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796
NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052

Draft. Nr.: BDA 076 / 3102M0771 | Update: 17.02.2012 | Data subject to change without prior notice. ©2012 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® are registered trademark.

www.neutrik.com

NEUTRIK®