

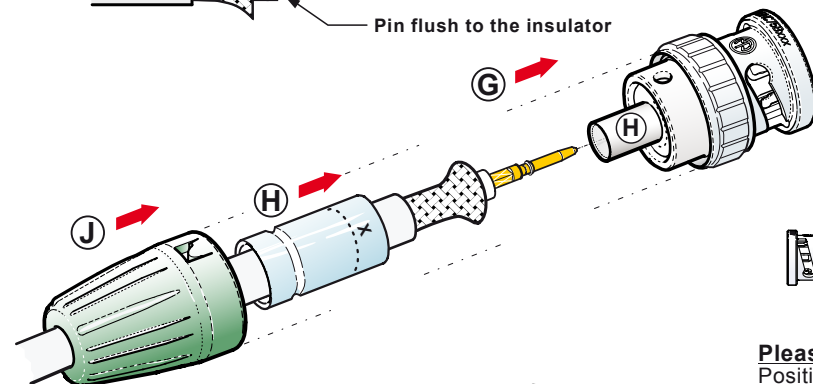

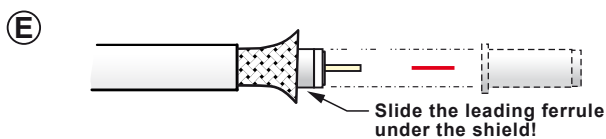
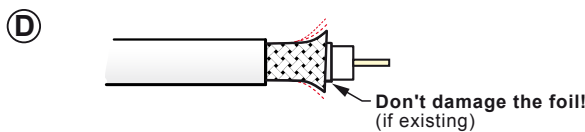


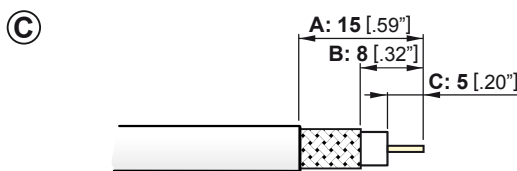


# ASSEMBLY INSTRUCTION

## Rear Twist BNC - Tiny | 75Ω Cable Connector - Crimp version

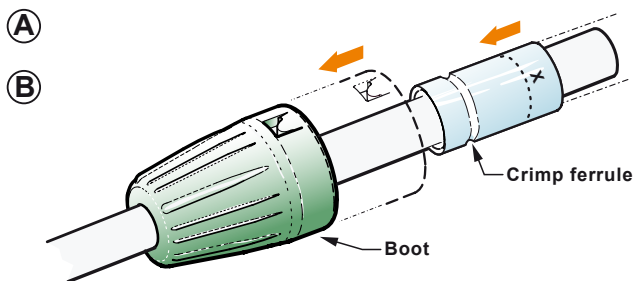


Assembled Connector

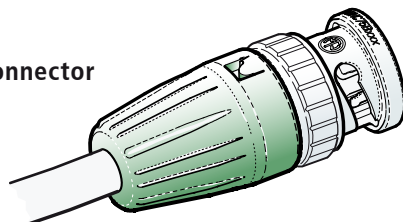

A Slide the boot onto the cable

B Slide the crimp ferrule onto the cable

C Prepare cable as shown  
- Use an adjustable coaxial cable stripper

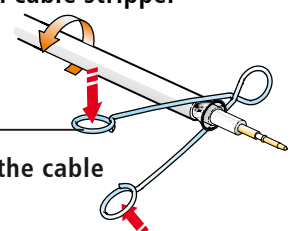D Spread the braided shield  
(It's easily with the NEUTRIK®  
"SHIELD-SPREADING-TOOL"!) 

E Slide the leading ferrule on the cable

F Crimp the pin  
- position the pin on the center conductor  
- Crimp the pin with the tool


(For best crimping-results it is recommended to use the original Neutrik crimp tool

- HXBNC with the corresponding insert  
or hexcrimp acc. to IEC 803-W (SW 1.7)  
or squarecrimp acc. to IEC 803-2 (SW 1.6)

- Pin can also be soldered (Optional!)  
- Straighten the pin if misaligned.

G Insert the cable into the connector body

H Slide the crimp ferrule over the shield to the front and push the cable and leading ferrule to its end position until you hear a snap noise.

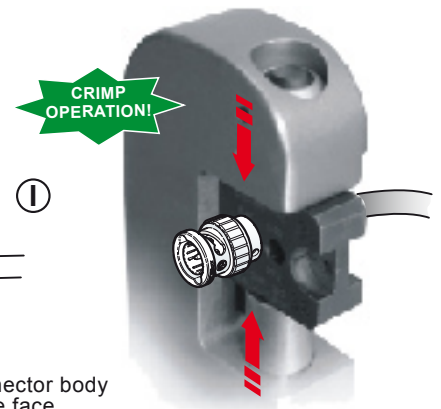

Please note:  
Position the connector body  
Flush with the die face.

I Crimp the ferrule with the tool

(For best crimping-results it is recommended to use the original Neutrik tool - HXBNC with the corresponding insert)

J Snap the boot onto the connector body

NEUTRIK AG  
NEUTRIK Z. rich AG  
NEUTRIK USA Inc.  
NEUTRIK (UK) Ltd.

LI  
CH  
USA  
UK

T: +423 / 237 24 24 F: +423 / 232 53 93  
T: +41 44 / 736 5010 F: +41 44 / 736 5011  
T: +1 732 / 901 9488 F: +1 732 / 901 9608  
T: +44 1983 / 811 441 F: +44 1983 / 811 439

NEUTRIK Vertriebs GmbH  
NEUTRIK France  
NEUTRIK Tokyo Ltd.  
NEUTRIK Hong Kong Ltd.

DE/NL/AT  
FR  
JP  
HK

T: +49 8131 / 280 890 F: +49 8131 / 280 830  
T: +33 1 / 4131 6750 F: +33 1 / 4131 0511  
T: +81 3 / 3663 4733 F: +81 3 / 3663 4796  
T: +852 / 2687 6055 F: +852 / 2687 6052