

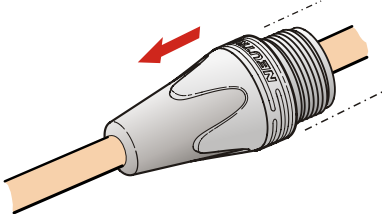
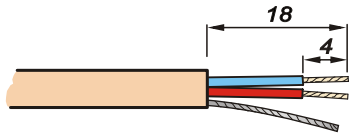
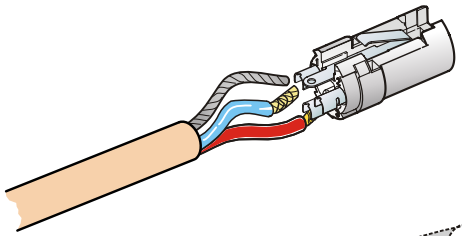
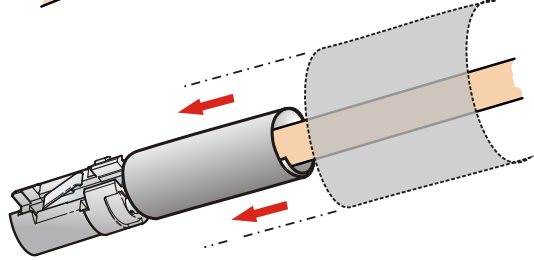
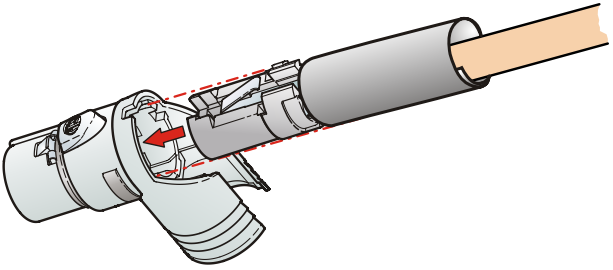
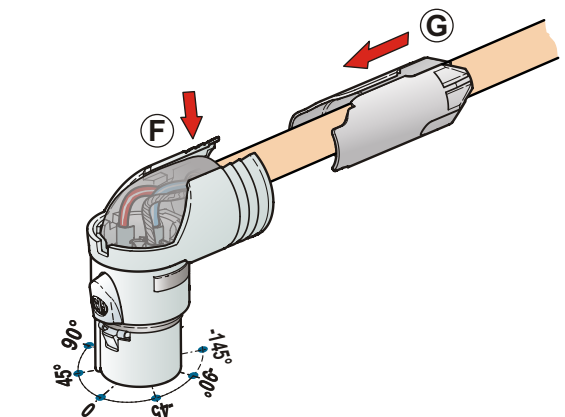


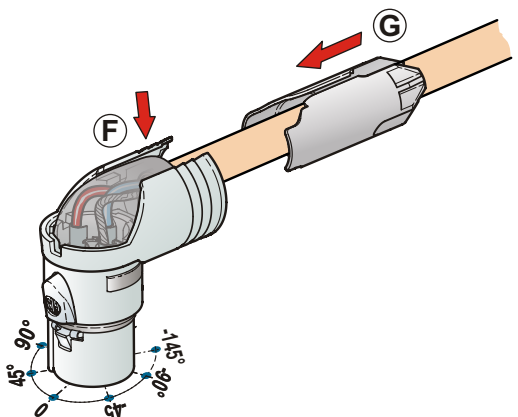

# ASSEMBLY INSTRUCTION

## NC\*FRX & NC\*MRX | XLR Cable Connector

- (A)** Slide the boot onto the cable.
- (B)** Prepare cable as shown.
- (C)** Insert wires into the terminals and solder them.
- (D)** Position the sleeve over the cables.
- (E)** Slide insert into the housing until it snaps in.  
*Align insert with housing.*
- (F)** Position the cable.
- (G)** Slide the chuck into the housing.  
*Pay attention to position chuck as shown.*
- 
- 
- 
- 
- 
- 
- 

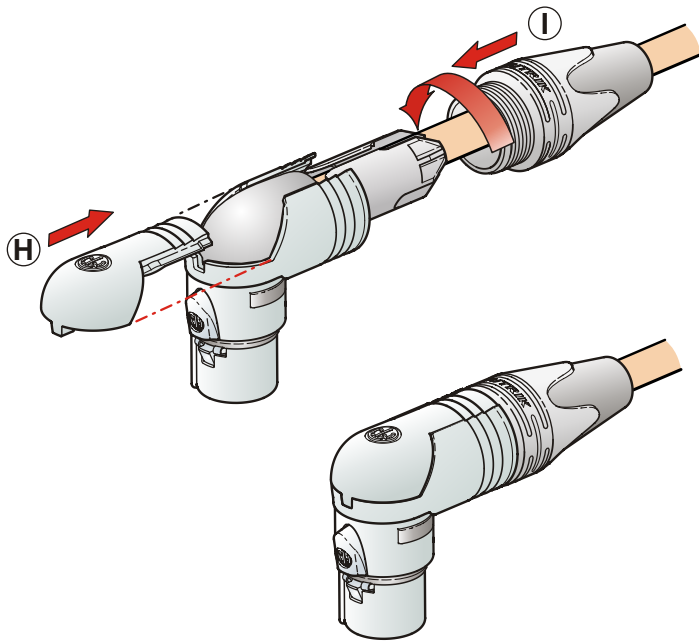


**H** Position the cover.

Before placing the cover choose the orientation of cable outlet by turning housing.

**I** Finish the assembly by turning the bushing onto the connector.

### Disassembly of the insert

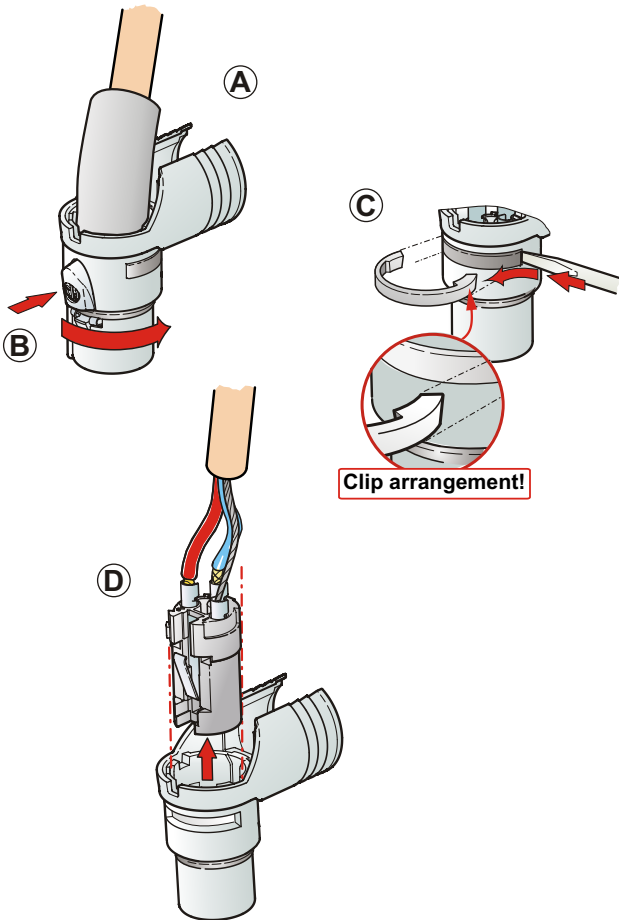

**A** Remove cover and chuck.

**B** Push latch and turn housing approx. a half turn until housing can be separated.

**C** Lift the locking clip by help of a screw driver.

**D** Remove insert.