




ASSEMBLY INSTRUCTION

NP*X Series | 1/4" Professional Phone Plug

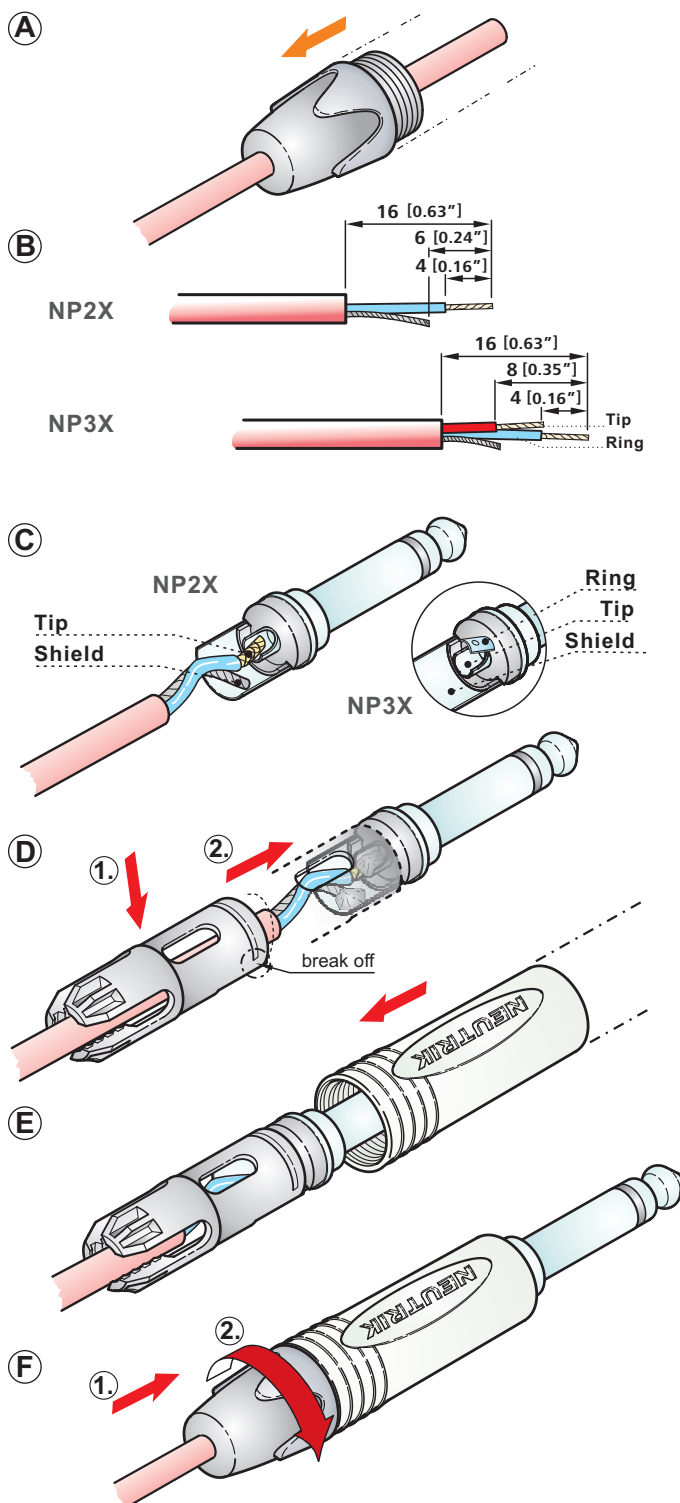

- A** Slide the boot onto the cable.
- B** Prepare cable as shown.
- C** Solder the wire ends.
- D** Position the chuck onto the cable and align chuck with plugfinger.
Attention:
If using a cable with O.D. > 5.50 mm [0.216"] break away this part of the chuck.
- E** Slide the housing onto the plugfinger with the chuck.
- F** Finish the installation by tighten the bushing onto the connector.

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93
 NEUTRIK USA Inc. USA T: +1 732 / 901 9488 F: +1 732 / 901 9608
 NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439
 NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511
 NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796
 NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052

Draft. Nr.: BDA 142-0 / 3102M1321 | Update: 06.11.2010 | Data subject to change without prior notice. ©2010 NEUTRIK®. ALL RIGHTS RESERVED.

www.neutrik.com

NEUTRIK