




ASSEMBLY INSTRUCTION

NP2C & NP3C | 1/4" Professional Phone Plug

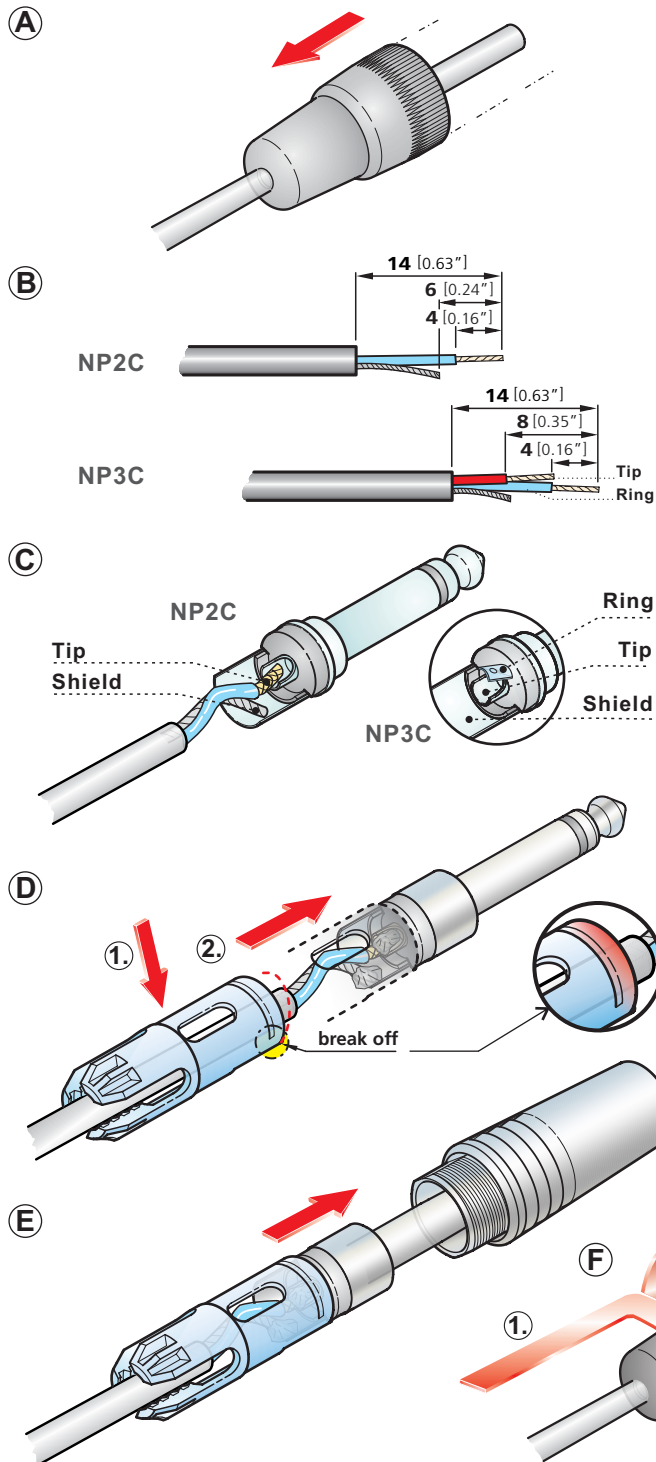

A Slide the boot onto the cable.

B Prepare the cable as shown.

Cable O.D.: 4.0 - 7.0 mm [0.157 - 0.276"]
Wire size: 1 mm² (AWG 18)

C Solder the wire ends.

D Position the chuck onto the cable and align chuck with plugfinger.

Attention:
If using a cable with O.D. > 5.50 mm [0.216"]
break away this part of the chuck.

E Slide the housing onto the plugfinger with the chuck.

F Finish the installation by tightening the bushing onto the connector.



Find more details of Professional Phone Plug on www.neutrik.com.

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93
NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704 / 438 9202
NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439
NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511
NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796
NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052
NEUTRIK India Pvt. Ltd. IND T: +91 / 982 05 43 424 F: +91 / 22 26163 540

Draft. Nr.: BDA 460-0 / 3102M1111 | Update: 28.07.2015 | Data subject to change without prior notice. ©2015 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® are registered trademark.

www.neutrik.com

NEUTRIK