



## TWO-PIECE CRIMP BNC/TNC

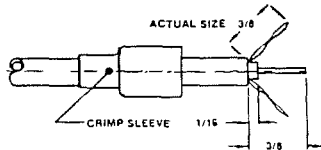


1. Run crimp sleeve down cable.
2. Trim cables as shown, taking care not to nick outer braid.
3. Insert center conductor into the guide hole in the rear of the connector. Then screw the connector on the cable in a clockwise direction



CABLE HOMED

4. Push crimp sleeve into place, sandwiching the braid between the connector and sleeve.



CRIMPED SLEEVE

5. Crimp the sleeve into place with the proper crimp tool.