


1. Using the supplied 3mm and 4mm Screws, attach the Compartment to the Anton/Bauer® Wireless Receiver Plate. The Compartment will fit all Anton/Bauer Plates.
2. To "Piggy-Back" more than one Compartment, simply follow the instructions in Step #1 and stack the Compartments together.
3. A Nylon Screw is included in the package with the Screws and can be screwed into the side of the Compartment for additional support.

**Installation of Foam Bumper Strips**

Foam Bumper Strips should be installed for added protection and a better fit.

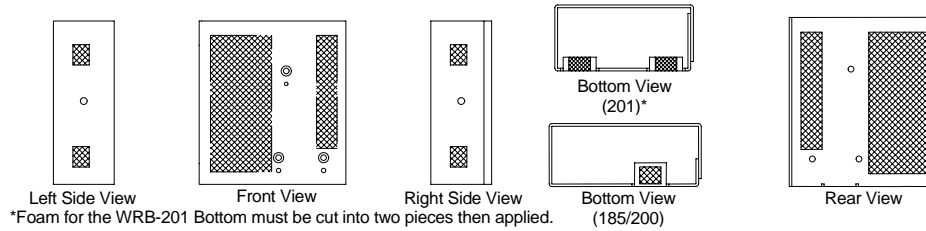

\*Foam for the WRB-201 Bottom must be cut into two pieces then applied.

**World Headquarters** 14 Progress Drive, Shelton, CT U.S.A.      Tel (203) 929-1100      support@antonbauer.com  
**Europe** Eurode Business Center, 6461KB Kerkrade, The Netherlands      Tel +31 45-563-9220      eurosupport@antonbauer.com  
[www.antonbauer.com](http://www.antonbauer.com)

 **Available Separately**

**ABWMK-KIT**  
**Universal Mounting Plate for Wireless Receivers**

- Allows user to use the same Wireless Receiver Plate for ALL Anton/Bauer Batteries.
- Allows a Receiver to be mounted on either the side of the Battery, behind the Battery, or both.
- Will accommodate WRB-185/ WRB-200/ WRB-201 Wireless Receiver Compartments.

