


Approved Copy

A7595-0342 Rev **B**

DA-E751 Sht 1 of 1



QR-RED Installation Instructions

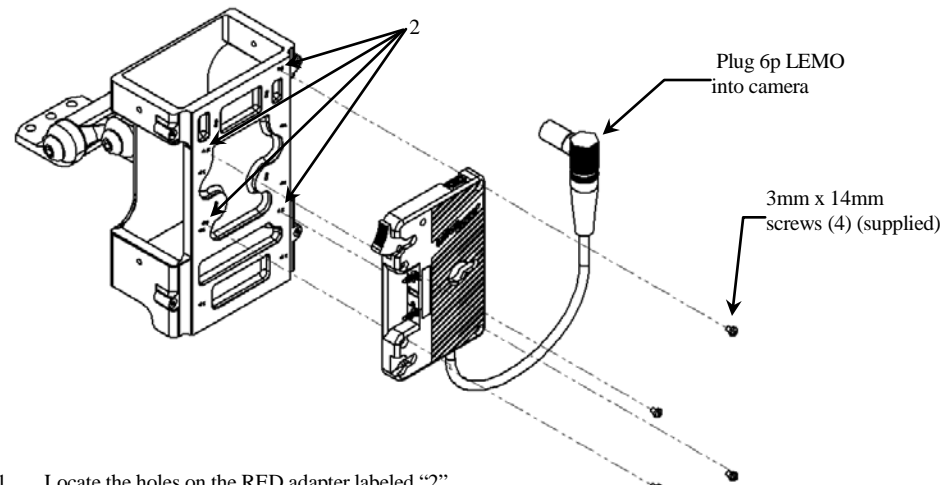

1. Locate the holes on the RED adapter labeled "2".
2. Attach the QR-RED to the adapter using the supplied 3 mm x 14 mm screws.
3. Plug the 6p LEMO connector into the connector on the camera body.

Anton/Bauer Inc., 14 Progress Drive, Shelton, Connecticut 06484 USA • (203) 929-1100 • Fax (203) 925-4988 • support@antonbauer.com
 Europe, B.V. Eurode Business Center, Eurode-Park 1-2, 6461 KB Kerkrade, The Netherlands • (+31) 45 5639220 • Fax (+31) 45 5639222 • eurosupport@antonbauer.com
 Singapore Office - Anton/Bauer, 6 New Industrial Road, # 02-02 Hoe Huat Ind. Bld., Singapore 536199 • (+65) 62975784 • Fax (+65) 62825235



www.antonbauer.com

7595-0342 Rev B

Approvals

C. O'NEILL 2/7/13

Artwk Design Supplier

Anton/Bauer

Drafted By

T. DESROSIERS
2/5/13

Checked By

N/A