


SPLIT SECURITY DOOR

1 DETERMINE LOCATION.


2 REMOVE SOME SCREWS FOR MOUNTING HINGE SIDE OF DOOR.

3 INSTALL DOOR USING PREVIOUSLY REMOVED SCREWS.


4 REPEAT STEPS 1 THRU 3 FOR STRIKE SIDE OF DOOR.

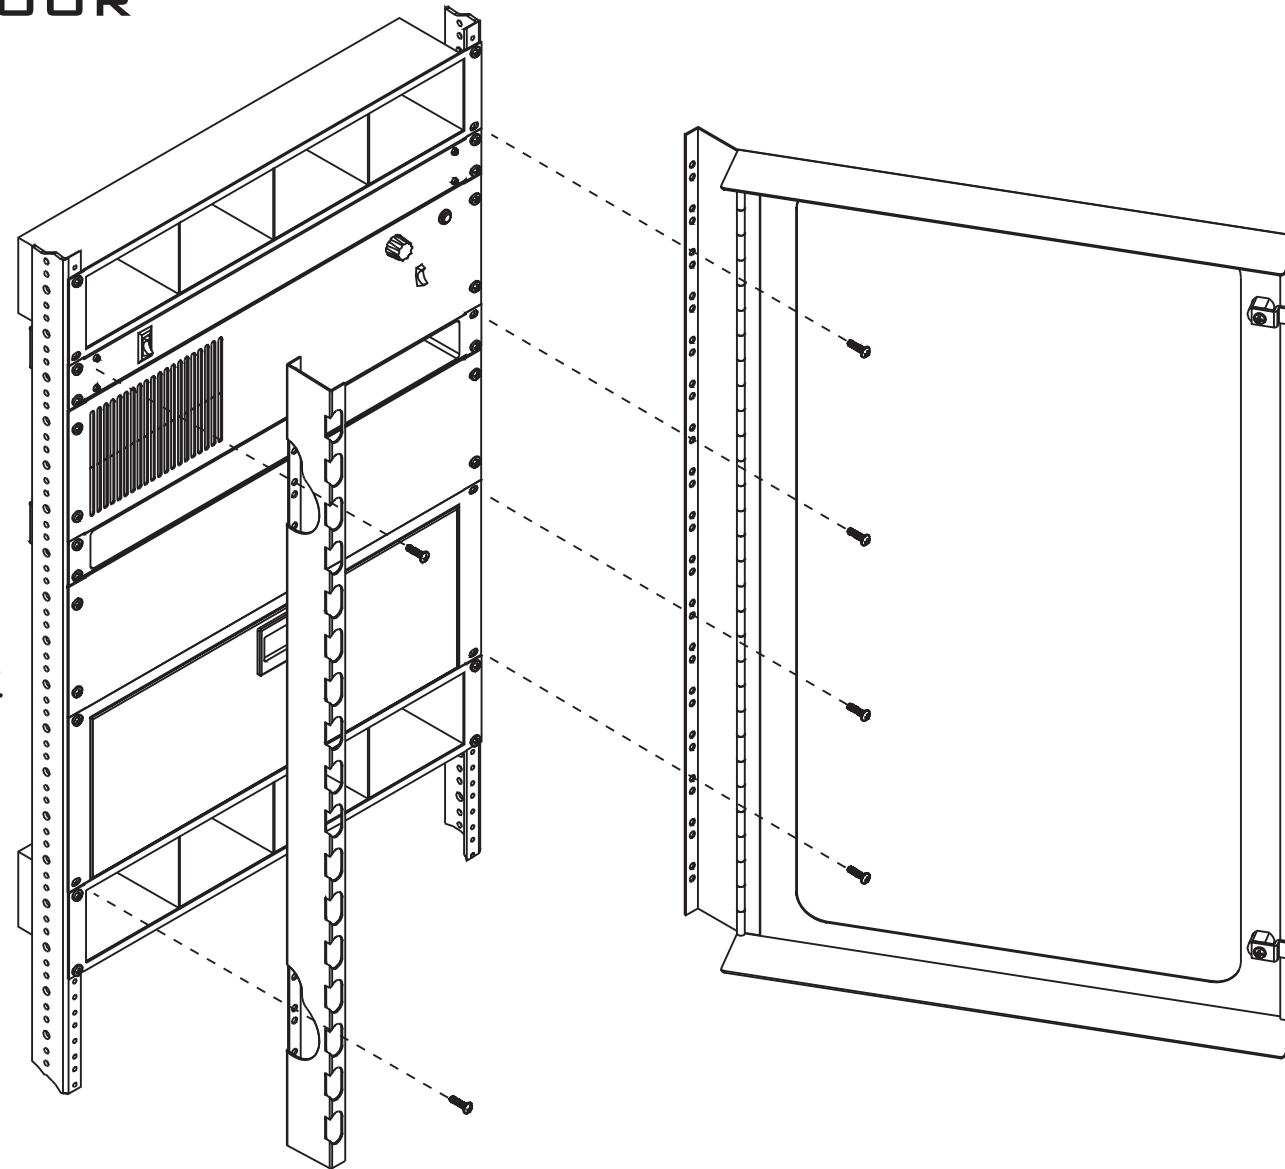

DOOR MEMBERS REST ON SCREW HEADS.

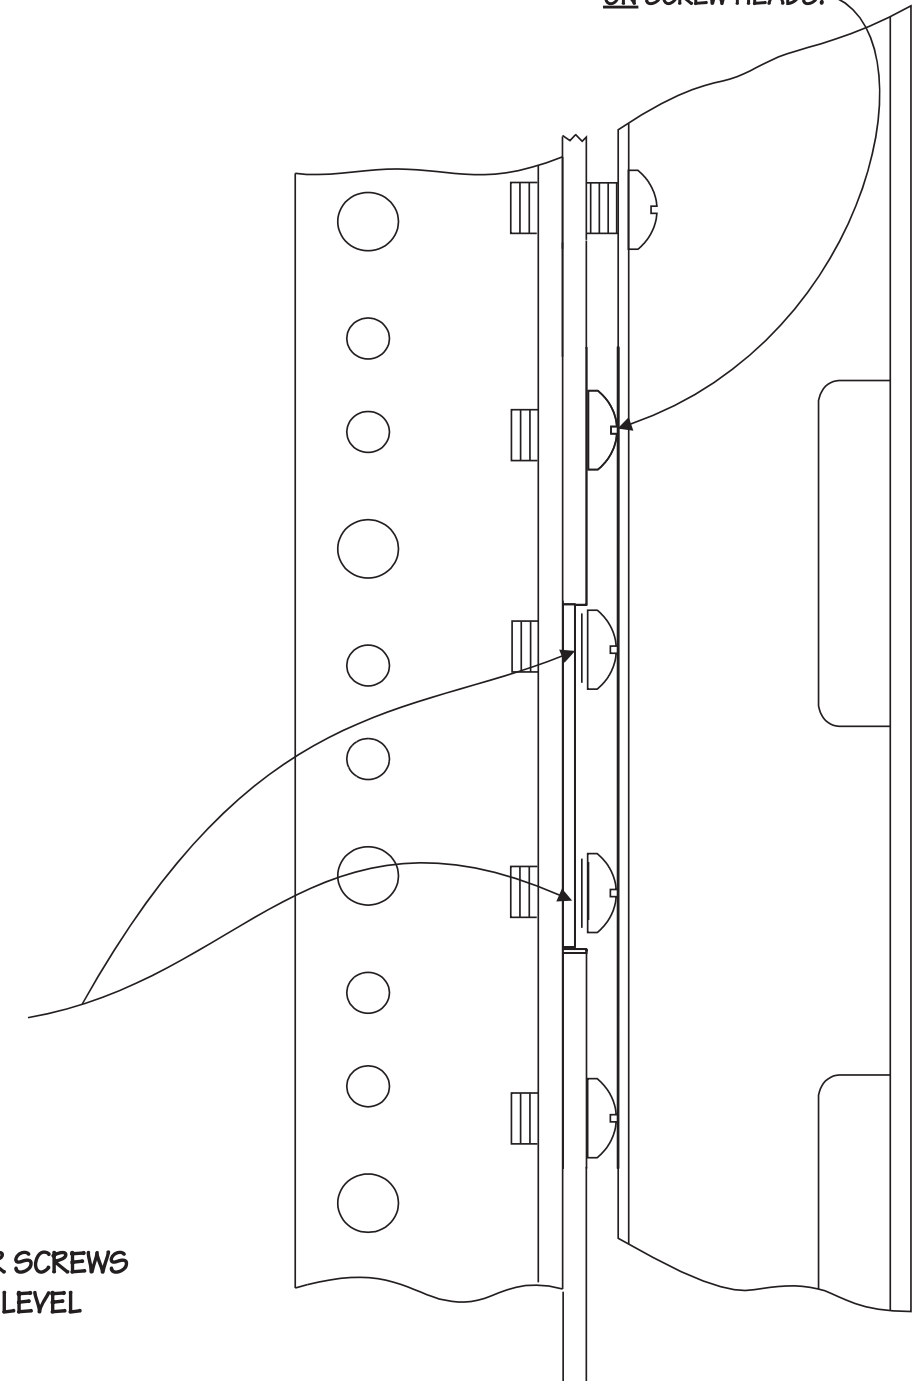

SPECIAL NOTE: (YOUR OPTION)
DUE TO VARYING PANEL THICKNESS
IT MAY BE NECESSARY TO SHIM UNDER SCREWS
MOUNTING THIN PANELS TO PROVIDE A LEVEL
MOUNTING PLANE.

Instruction # I-2102	Rev. E	Date: 1/23/04	
Part # SPLIT SECURITY DOOR	Assembly: full		
Page: 1 of 1	Voice 973-839-1011 Fax 973-839-1976		Middle Atlantic Products, Inc.
			www.middleatlantic.com