WTPS70 Series Cart Instructions

T x1

A x1



E x8




Tools Required

- Rubber Mallet
- Wrench




F x4




legs for units with

cabinet pack

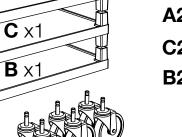

D2 x2

D1 x4

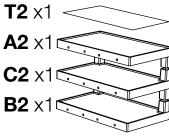











Q x12


S x12 **R** x12

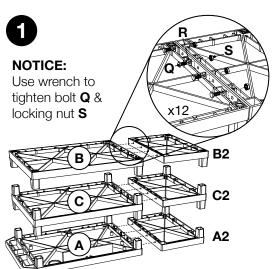


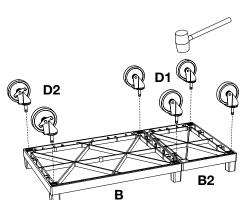




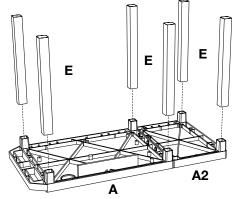


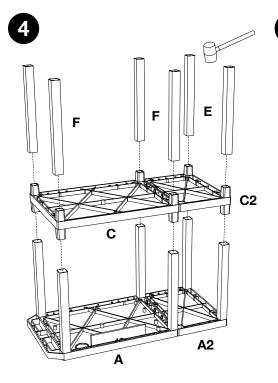

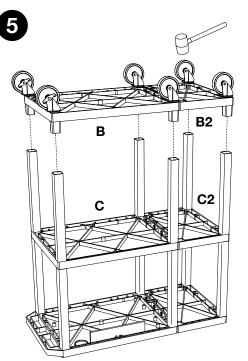

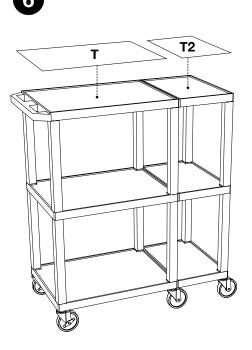


Flat Panel Desktop Mount Instructions

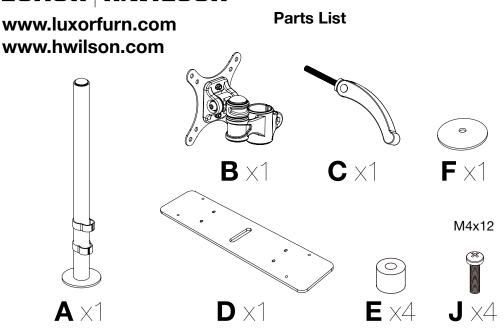

Tools Required


- Phillips Screwdriver
- 13mm Socket Wrench
- Drill + 3/8" or 9mm Drill Bit (Not required on units with pre-drilled hole)

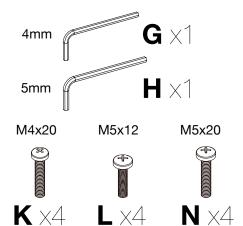


Self Install Instructions:

For plastic ribbed shelf drill into sections where the cross ribs intersect. For other surfaces make sure there is 3" x 12" of clearance for the mounting plate.


WARNING: Please follow the cautionary guidelines included with your drill.

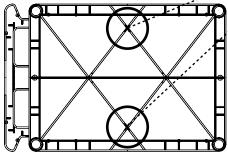


Bottom of Luxor Top Shelf

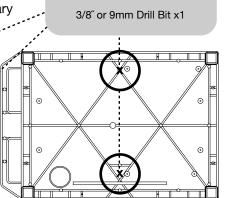

Bottom of H.Wilson Top Shelf

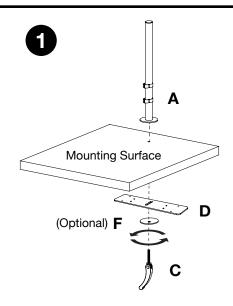

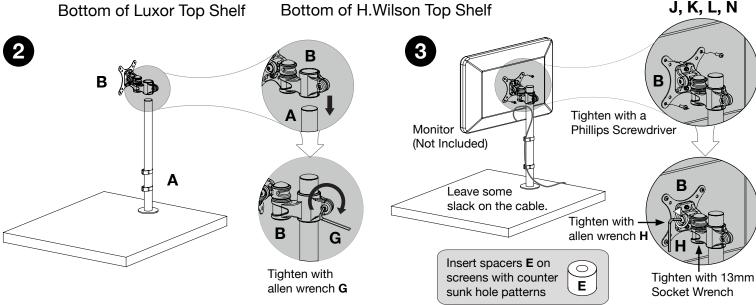

Front Pullout Shelf Instructions


Tuffy Cart

www.luxorfurn.com www.hwilson.com

Parts List



- Phillips Screwdriver













Lay the top shelf of your Tuffy cart upside down and Install the four legs intended for this shelf.



Slide and align runner **H** & **G** onto the legs and tighten screw **N** with a screwdriver.

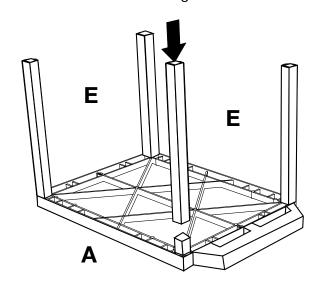


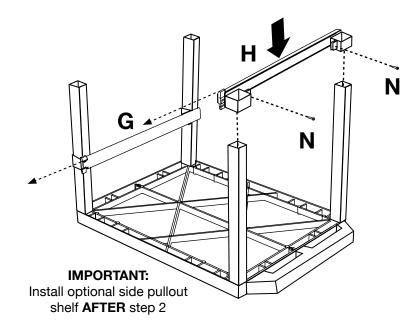


Take pullout shelf **K** and bracket **L** and screw together into the unfinished surface of shelf **K** with screw **M**.



Mount pullout shelf **K** to runner **H** & **G** so that the edge of the shelf snaps into the runner hooks.

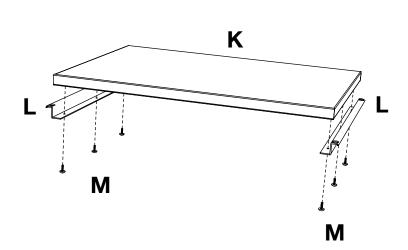

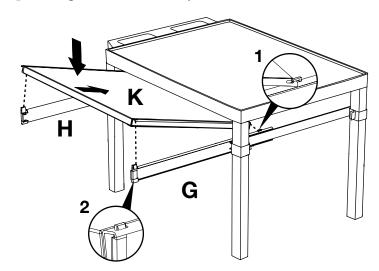


You have now completed your pullout shelf.

www.luxorfurn.com www.hwilson.com

Electric Assembly Instructions

Number of outlets may vary.

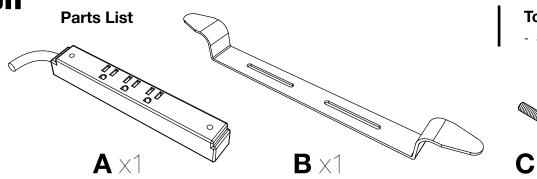

Tools Required

- Screwdriver





