



### WALL INSTALLATION:

#### Auralex® EZ-Stick™ Pro Tabs included:

**NOTE: EZ-Stick Pro Tabs are permanent and will cause damage to mounting surface or product upon removal.**

- 1 Using a level, locate where the panels will hang. Use a pencil to mark the final **SonoLite Panel** locations on the walls, and **SonoLite Bass Trap** locations in the corners of the room where the walls and/or ceiling meet.
- 2 Spot clean the target attachment points on wall with rubbing alcohol.
- 3 Separate the **EZ-Stick Pro** tabs from each other. Remove the white release layer from the tab and attach to the rear surface of the **SonoLite Panel**, on the fabric, just inboard of the panel edge. Attach to the rear mitered surface of the **SonoLite Bass Trap**. Press firmly with the heel of your hand and hold for 30 seconds for best adhesion. Repeat for the remaining tabs.  
*(use 4 tabs per panel)*
- 4 Remove the second release layer from all of the **EZ-Stick Pro** tabs by pulling on the unadhered end of the brown release paper. Align the panel with the locating marks on the wall and press firmly on the front side of the panel, opposite the tabs to adhere to the wall.

#### SonoLite™

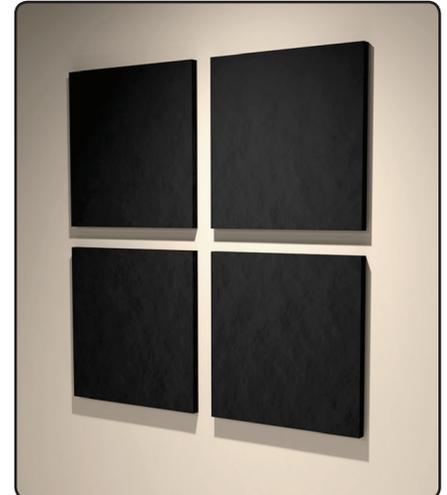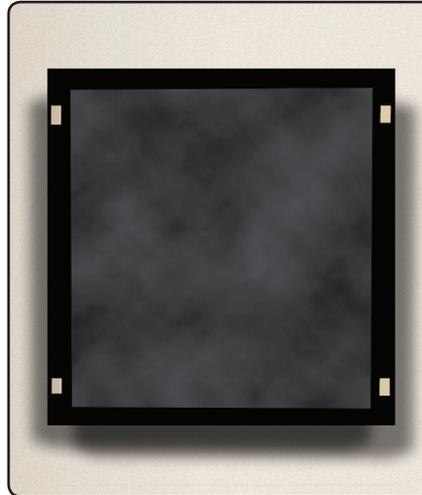

#### SonoLite™ Bass Trap



Thank you for purchasing **SonoLite™ Absorption Panels**. They are a great solution to improve both the aesthetics and sonic clarity of any home studio or small home theater.