

2. **Bracket Installation:** Attach interface to back of the display using the M10 Hex Head Bolts and nylons spacers. Use the set of spacer that provide the best depth for your display. (see Figure 4 & Figure 5). Do not over tighten screws.

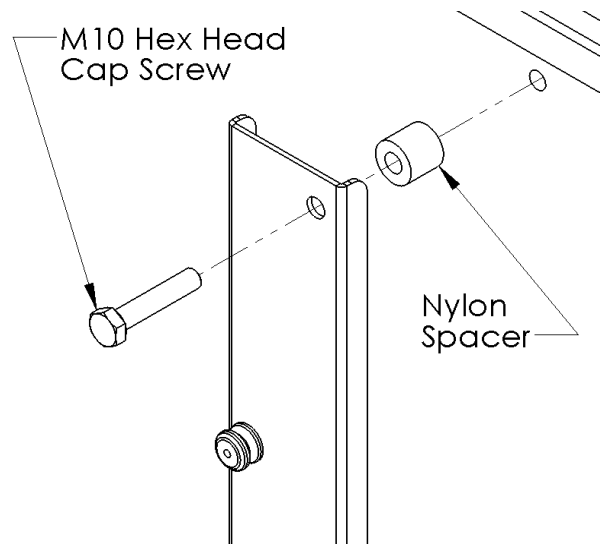


Figure 4

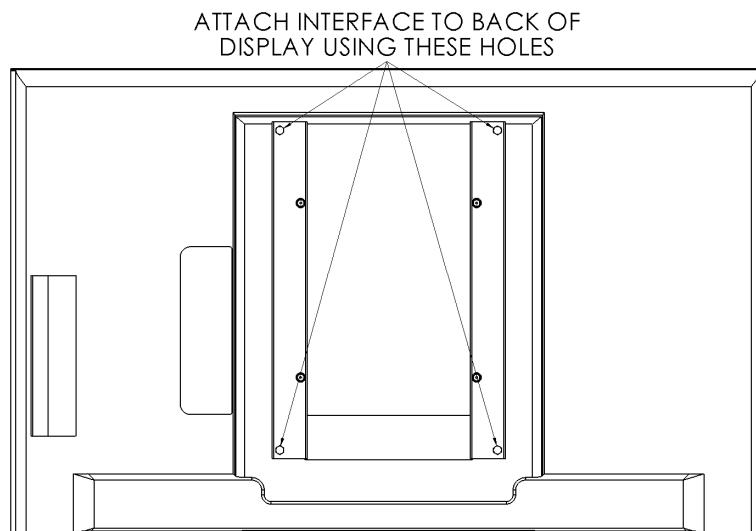


Figure 5

3. Follow the Chief mount instruction manual for screen installation.

