


PWB-320XL Box Installation


1. ASSEMBLE PWB-320-AC3 AND MAKE ELECTRICAL CONNECTIONS AS REQUIRED IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL CODES. INSTALL AS SHOWN.  
(6 AVAILABLE POSITIONS FOR PWB-320XL)

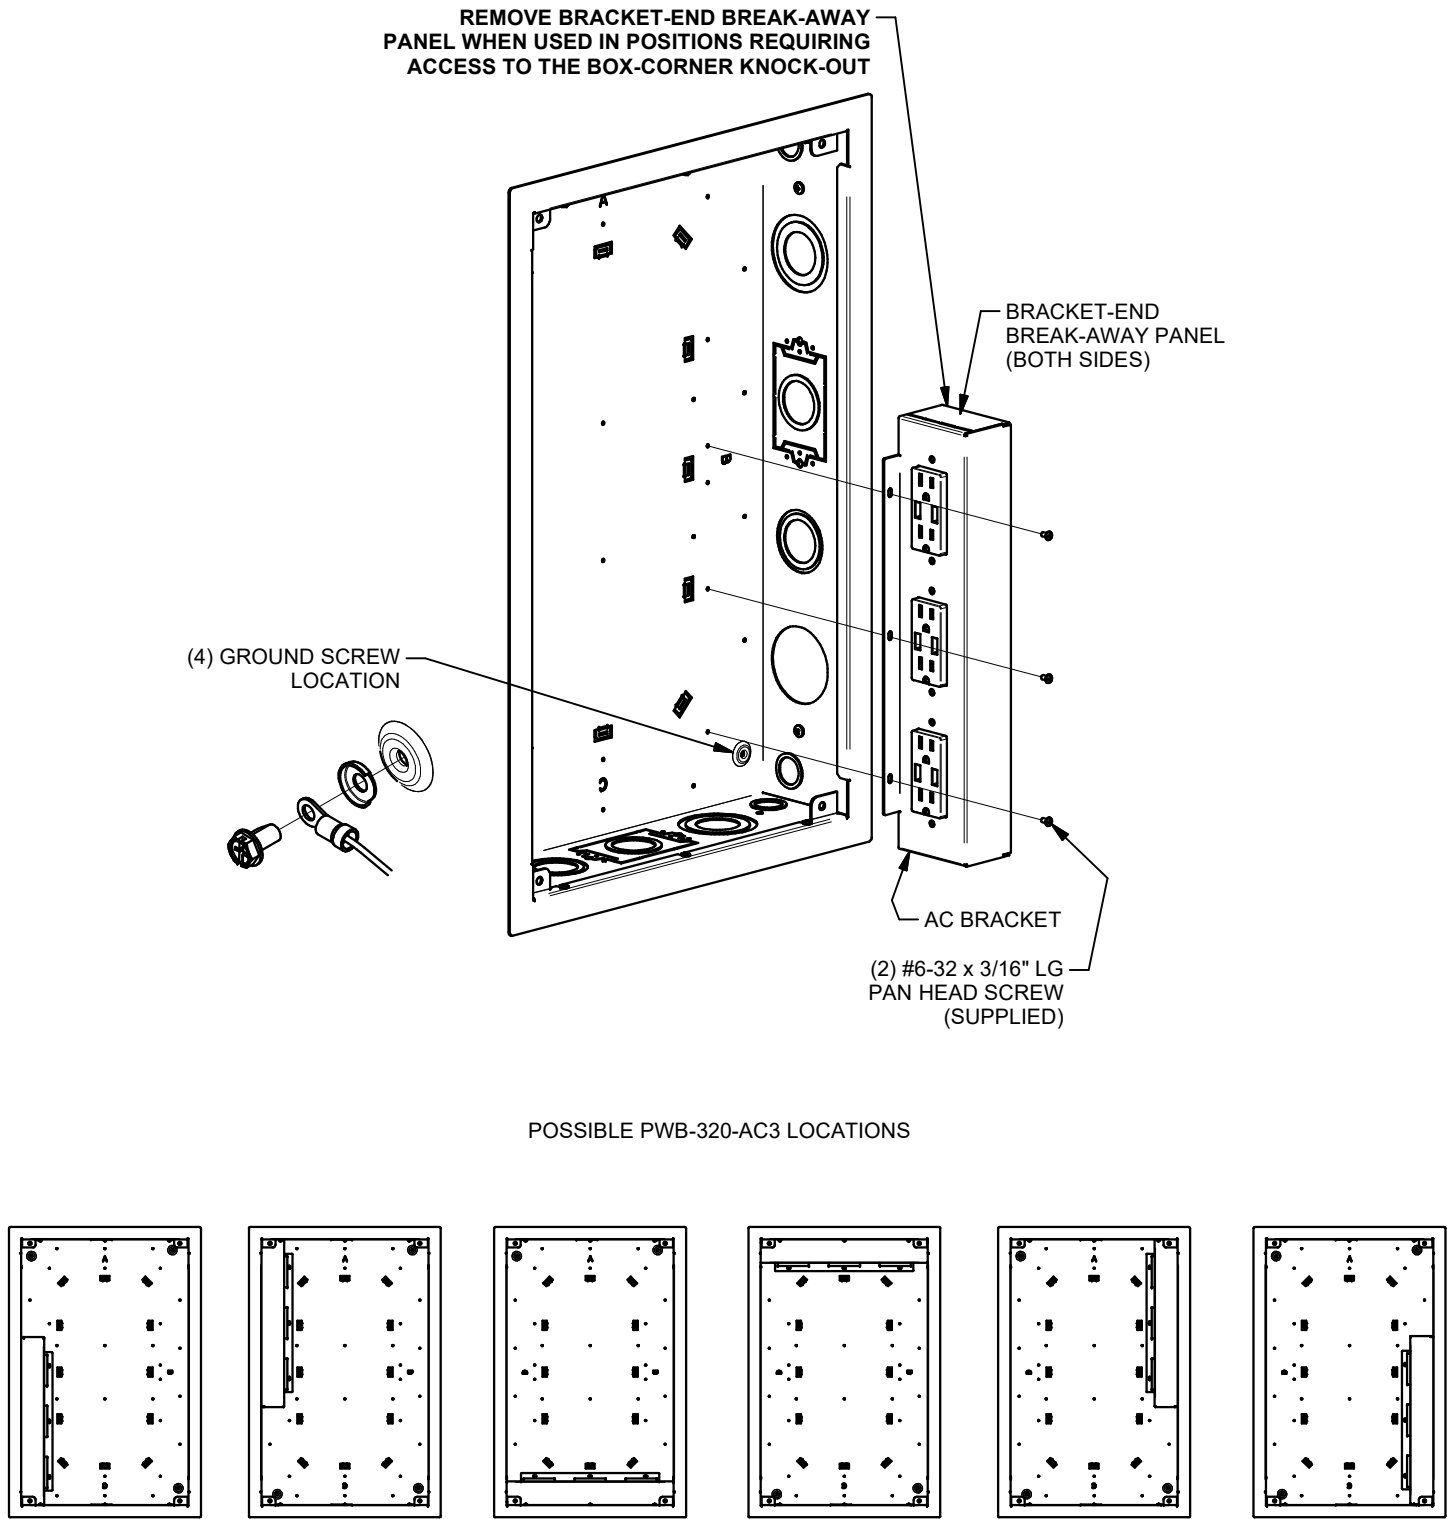

PWB-320/323-AC2 / PWB-320/323-AC3 Installation Instructions  
244 Bergen Boulevard, Woodland Park, NJ 07424, Phone: 973.785.4347 - Fax: 973.785.4207


PWB-320/323 Box Installation

1. AC BRACKET CAN BE MOUNTED HORIZONTALLY OR VERTICALLY.

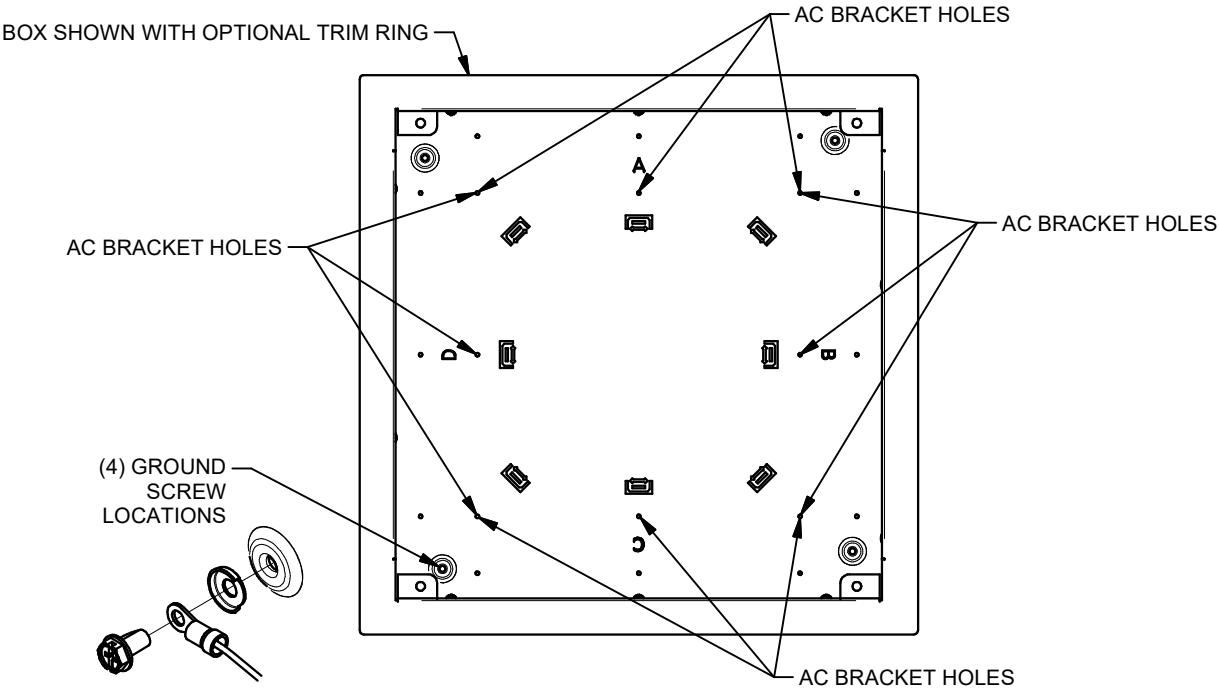


- 2a. ASSEMBLE PWB-320-AC2 AND MAKE ELECTRICAL CONNECTIONS AS REQUIRED IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL CODES. INSTALL AS SHOWN.  
(8 AVAILABLE POSITIONS FOR PWB-320-AC2)  
(4 AVAILABLE POSITIONS FOR PWB-323-AC2)

- 2b. ASSEMBLE PWB-323-AC3 AND MAKE ELECTRICAL CONNECTIONS AS REQUIRED IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL CODES. INSTALL AC BRACKET AS SHOWN IN ANY OF THE 4 AVAILABLE POSITIONS.

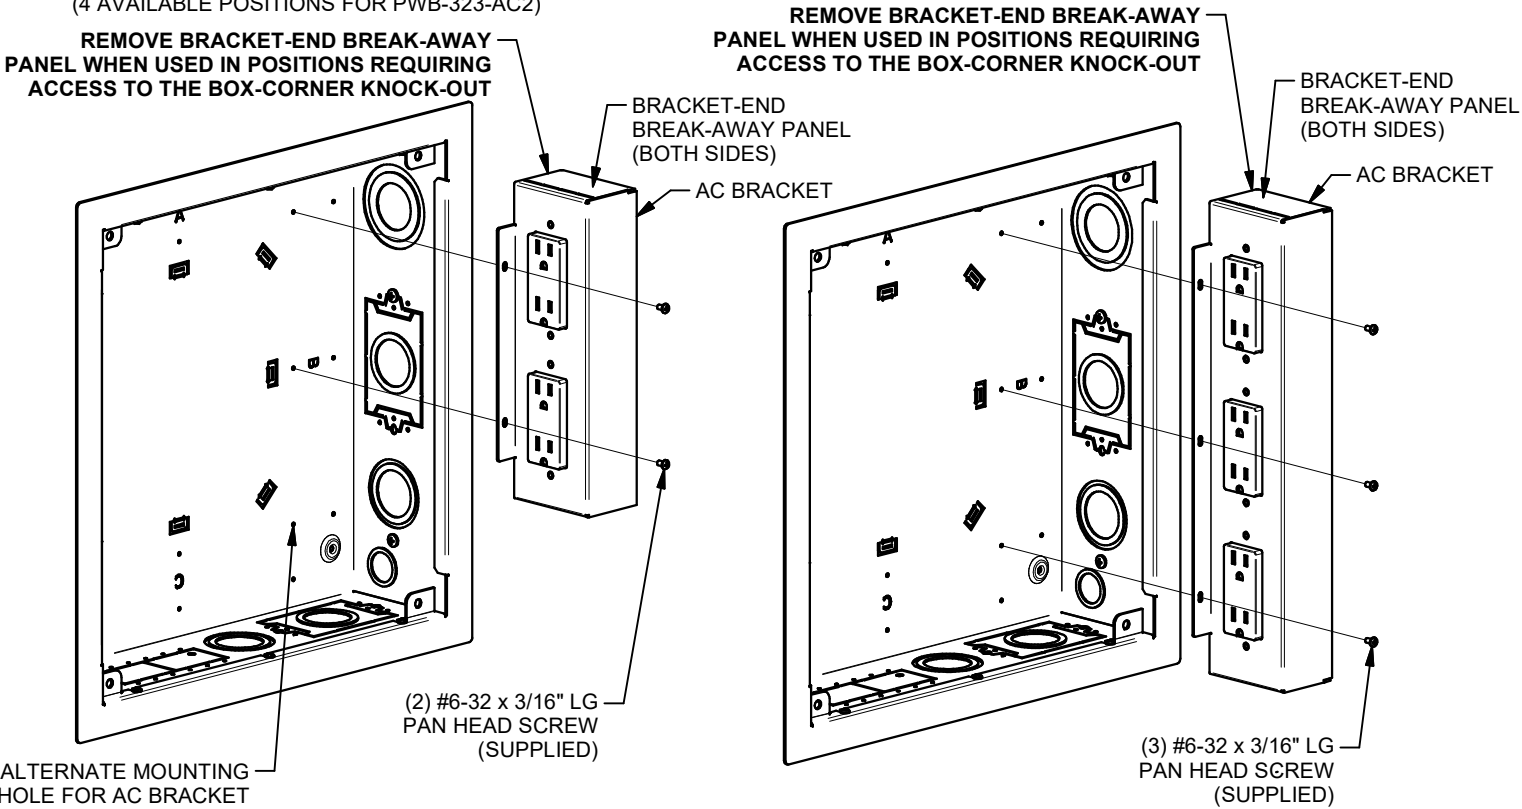


PWB-HVBX Box Installation

1. ASSEMBLE PWB-320-AC2 AND MAKE ELECTRICAL CONNECTIONS AS REQUIRED IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL CODES. INSTALL AS SHOWN. (2 AVAILABLE POSITIONS FOR PWB-HVBX)

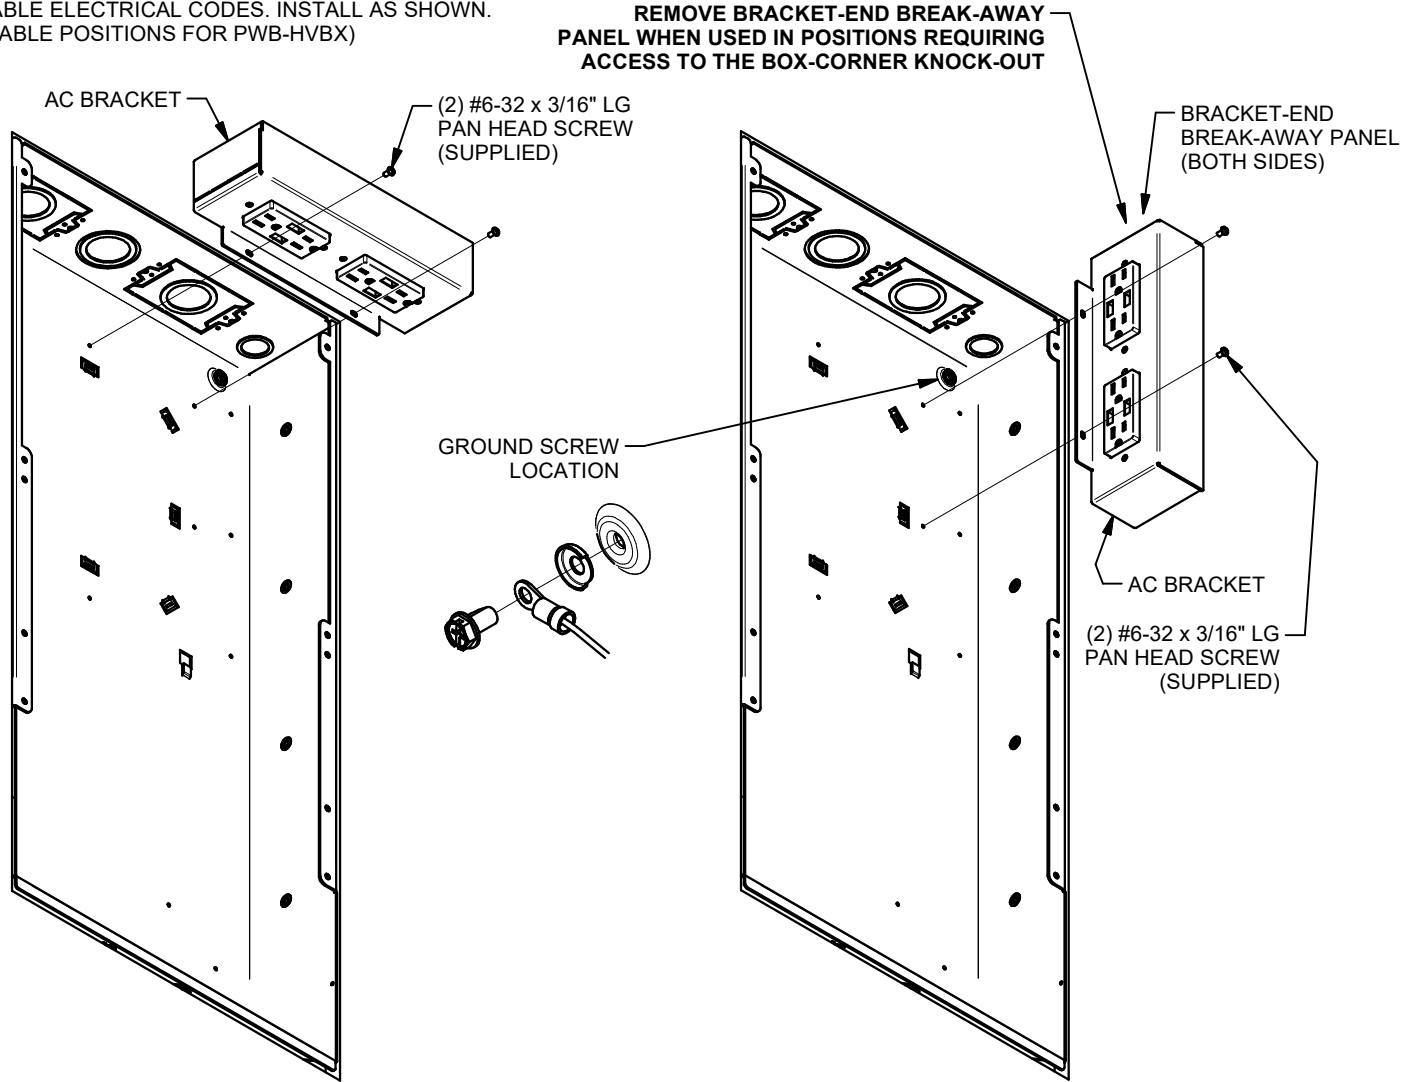


2. SHELF MOUNTING BRACKETS (SOLD SEPARATELY) WILL HAVE TO BE SHORTENED IF INSTALLED AS SHOWN.

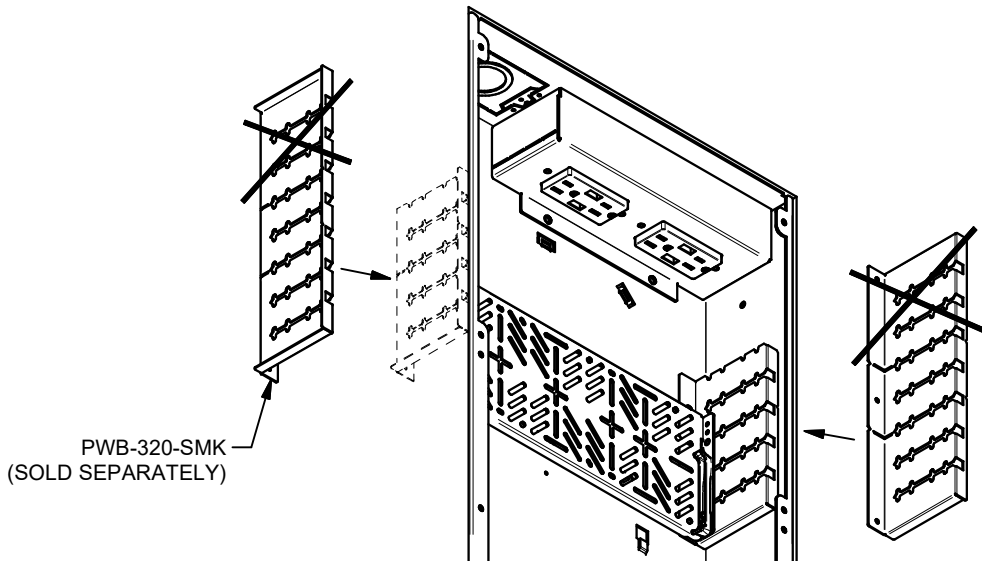

PWB-320XL Box Installation

1. ASSEMBLE PWB-320-AC2 AND MAKE ELECTRICAL CONNECTIONS AS REQUIRED IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL CODES. INSTALL AS SHOWN. (8 AVAILABLE POSITIONS FOR PWB-320XL)

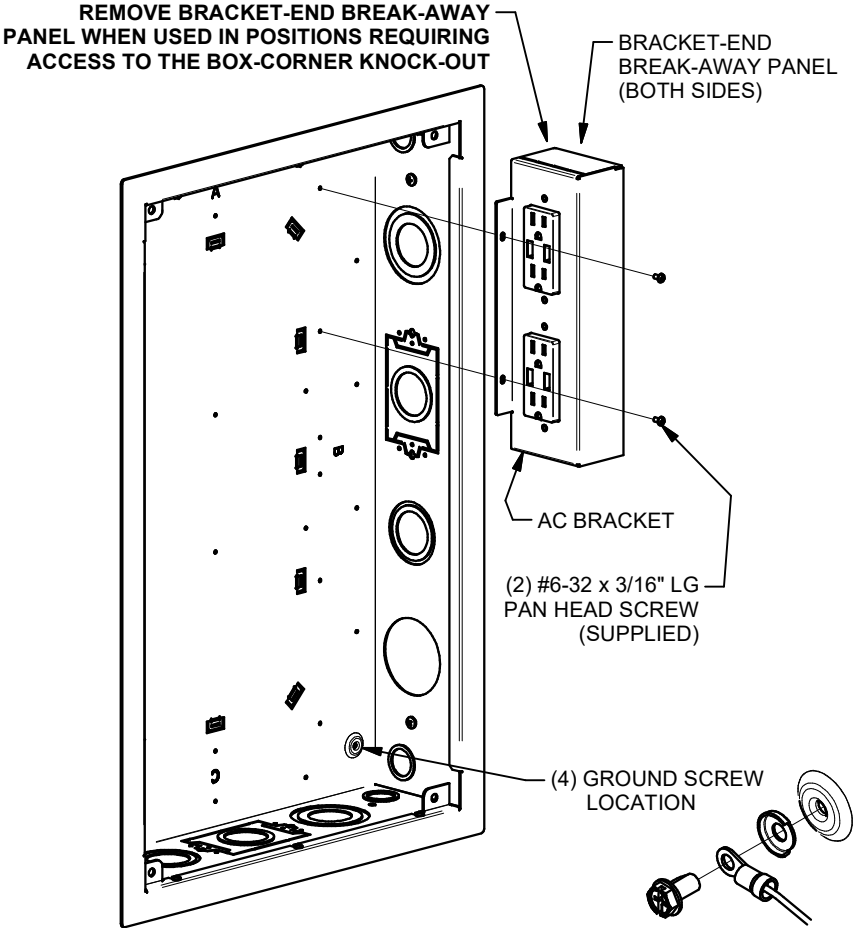

POSSIBLE PWB-320-AC2 LOCATIONS

