





1. Using a hole saw, drill a 1½" hole in ceiling tile.

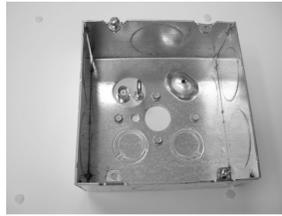

Continue with steps 2 through 4.

Optional Plenum Box
Cut out area in ceiling tile to accommodate plenum box.

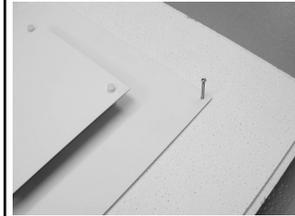

2. Insert 2" long screws from toggle bolt through each corner hole on back plane of CX-22 (4 places). Push through ceiling tile material.



3. On back side of tile, place large washer over screw end, flat against ceiling tile and screw toggle wing into place as shown. Repeat for each corner.



4. Attach user supplied plenum coax and included stainless safety wire.