



HANDLING INSTRUCTION

opticalCON | FOPS-SPLIT Pulling Sock

POSITIONING




- Ⓐ Open metal zippe and put the fan-out of the used opticalCON split cable inside the pulling sock.



- Ⓑ To avoid stronger tensile force on the connector, the split housing has to be placed directly behind the integrated velcro strip!



- Ⓒ Close metal zipper to protect the opticalCON connectors from heavy contamination as mud and dirt.

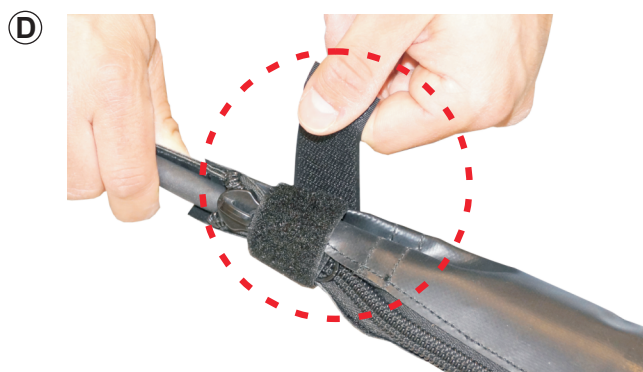

- Ⓓ Tighten the velcro strap to secure the split housing and pulling sock.

FINISH






A



B

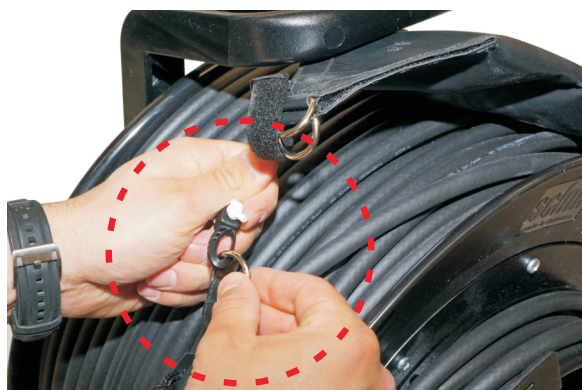

STORAGE

- A Reel up attached lettered pulling sock on the cable drum.

- B Secure opticalCON pulling sock with the black hook on the metal grommet.

NOTE: The proper length of the elastic cord can be individually adjusted according to the outer diameter of the used drum.



C



- C If the elastic cord is not required hook it onto the cotton grommet inside the opticalCON pulling sock.

FINISH



NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93
NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704 / 438 9202
NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439
NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511
NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796
NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052