



ASSEMBLY INSTRUCTION

NL4FX / NL4FRX

speakON® SPX Series | Lockable Loudspeaker Connector

IMPORTANT SAFETY INSTRUCTION




Electrical Rating acc. UL & CSA:

USR: 40A/250V, CNR: 25A/250V

“CAUTION: NOT FOR INTERRUPTING CURRENT”

“ATTENTION: NE PAS UTILISER POUR COUPER LE COURANT”

Attention: speakON is not to be used as an AC mains or power supply connector!

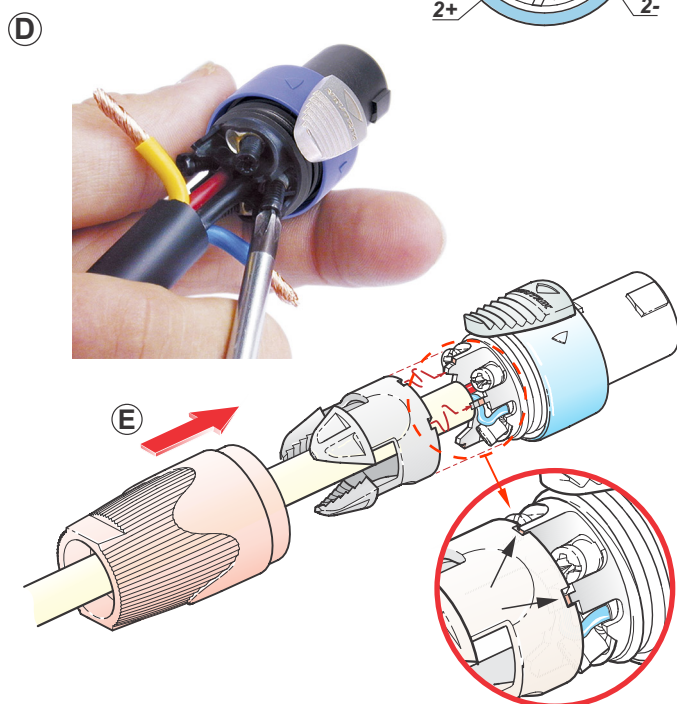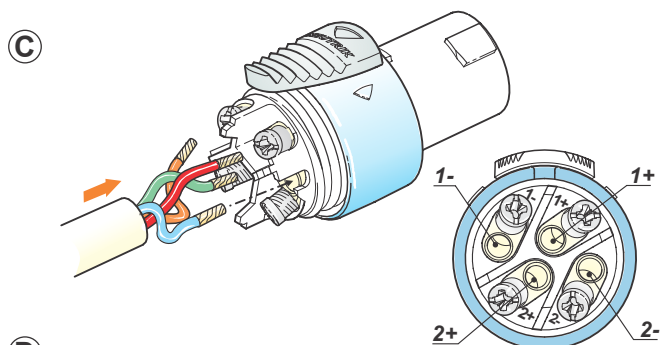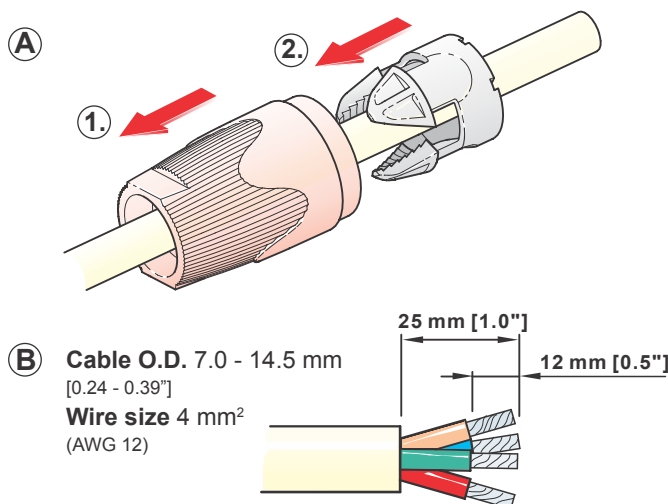

Assembly of the Connector:

A Place the bushing and chuck over cable.

B Prepare the cable as shown.

Important is the stripping length of 25 mm and 12 mm.

C Insert wires into terminals and secure clamp terminals with screw driver (POZIDRIV® #1) at max. torque 0.8 Nm.
For 6 mm² (AWG 10) remove screws, clamping sheet and solder.

D For easy wiring especially on big cables, first screw on the inner conntacts 1+ and 2+ and afterwards the outer contacts 1- and 2- !

E Push chuck up to housing .

Important: Align the chuck by positioning the nose into the recess.

F Tighten the bushing


INFO to the screw driver:



DO NOT USE!

POZIDRIV® #1


Philips

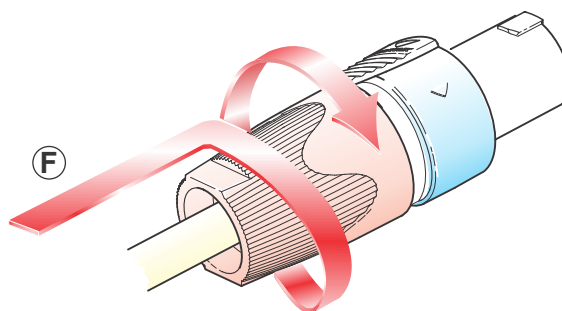




Assembly of the Conversion Kit LRX:

A

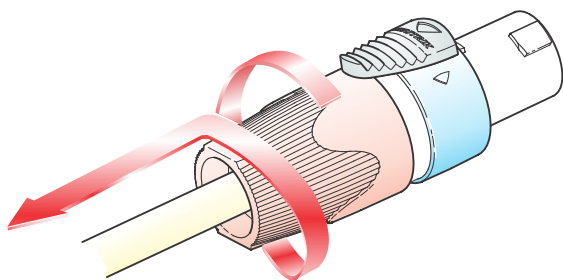

A Open the bushing.

B

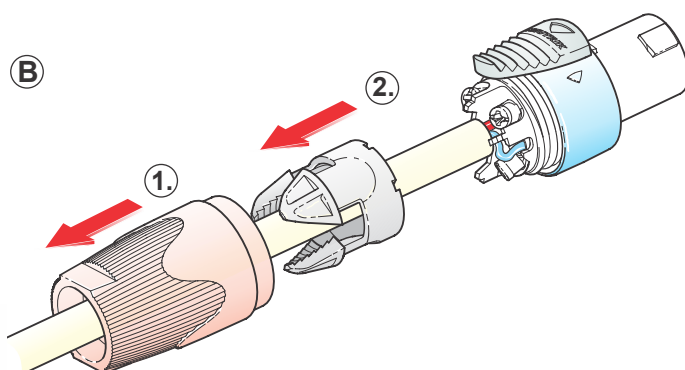

B Slide the bushing and the chuck back.

C Bend the cable as shown.

D Position the two conversion shells to fit on the connector thread.

E Press together and fix by screw.



F Slide the chuck onto the housing and fasten the bushing.

Important: Align the chuck by positioning the nose into the recess.

C

D

E

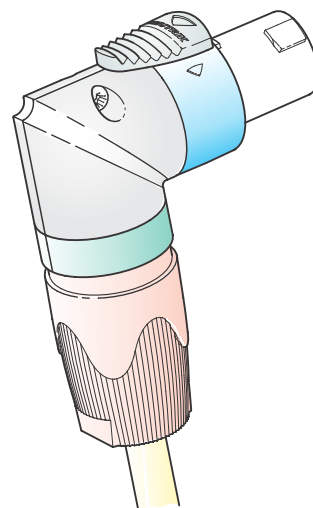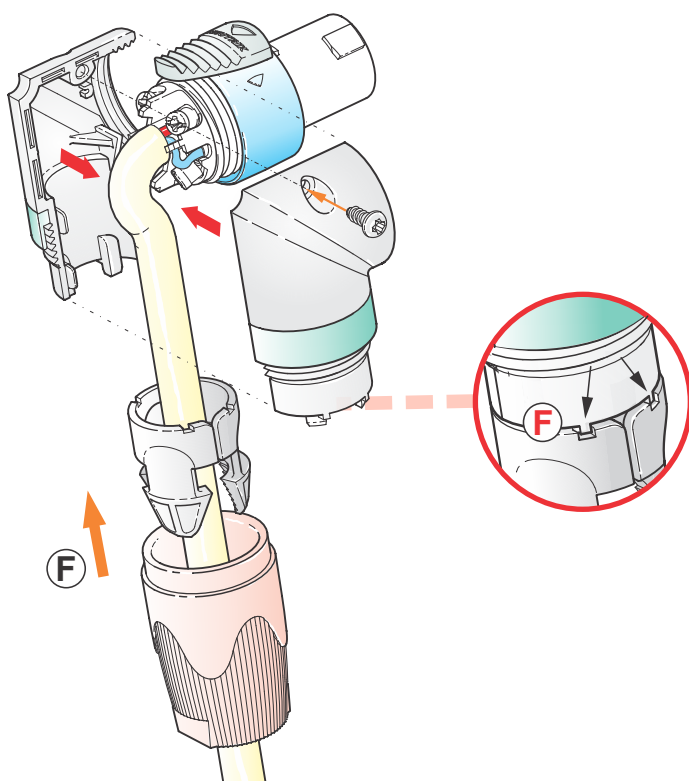

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93
NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704 / 438 9202
NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439
NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511
NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796
NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052
NEUTRIK India Pvt. Ltd. IND T: +91 / 982 05 43 424 F: +91 / 22 26163 540

Draft. Nr.: BDA 114 | Update: 25.10.2016 | Data subject to change without prior notice. ©2016 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® is a registered trademark.

www.neutrik.com

NEUTRIK®