

Installation and Set-Up for M2000-LP

Low-Profile Security Masking System

Step 1

Remove the M2000-LP from its package.

Step 2

Install the M2000-LP where desired.

The M2000-LP is designed to mount in either ceiling or floor plenums.

See Figure 1 for recommended installation in above ceiling plenum spaces.

See Figure 2 for recommended installation in raised floor plenum spaces.

Step 3

Terminate service loop to the amplifier output line.
(Black is negative, Red is positive)


Note: Strain relief is not designed to accommodate conduit.

Step 4

Set tap selector switch to desired power setting.



M2000-LP Wiring Block Diagram

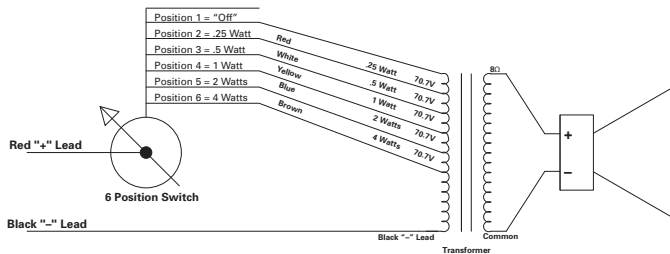

Technical Specifications

Loudspeaker Transformer Taps Height Depth Width	Two 2" x 4" Paper Cone Speakers .25, .5, 1, 2, & 4 Watts, plus an Off Setting 2 ⁵ / ₈ " (67mm) 7" (178mm) 7 ¹ / ₂ " (191mm)
--	---

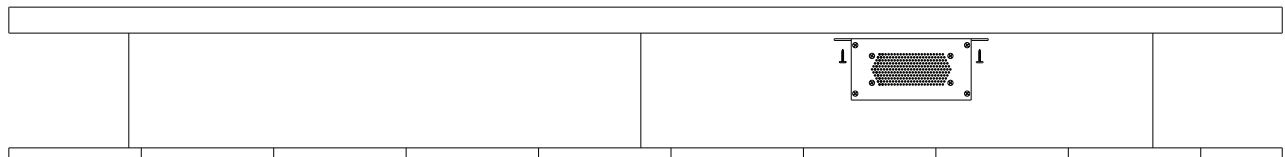


Figure 1

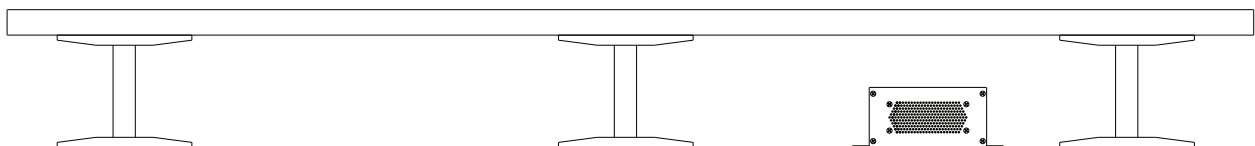


Figure 2