



ASSEMBLY INSTRUCTION

NL2FX / NL2FRX

speakON® SPX Series | Lockable Loudspeaker Connector

IMPORTANT SAFETY INSTRUCTION




Electrical Rating acc. UL & CSA:

USR: 40A/250V, CNR: 25A/250V

“CAUTION: NOT FOR INTERRUPTING CURRENT”

“ATTENTION: NE PAS UTILISER POUR COUPER LE COURANT”

Attention: speakON is not to be used as an AC mains or power supply connector!

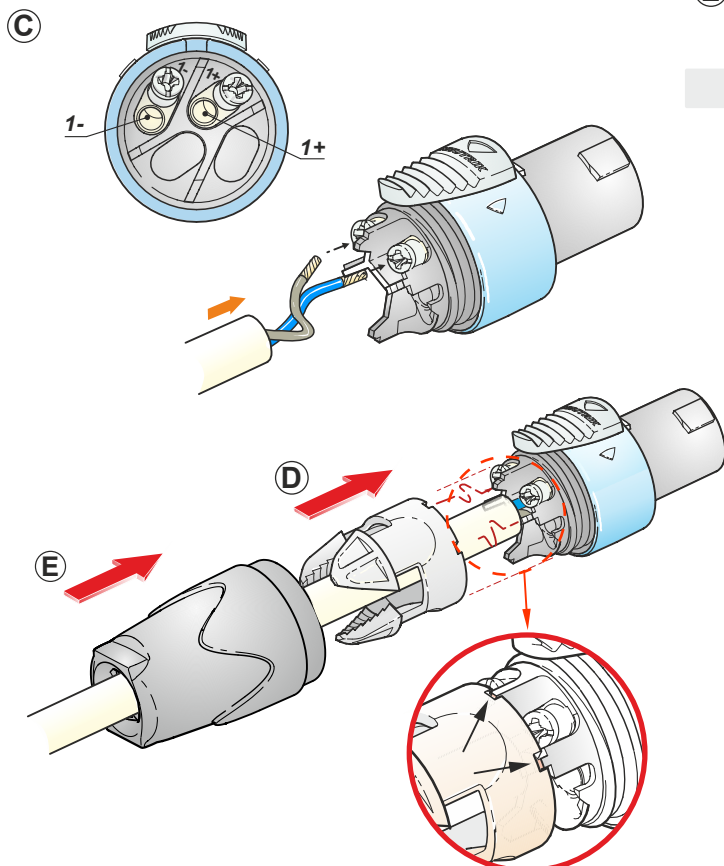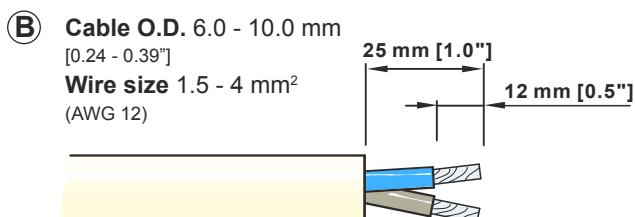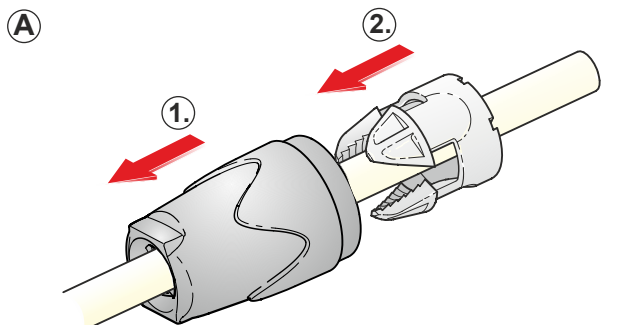

Assembly of the Connector:

A Place bushing and chuck over cable.

B Prepare cable as shown.

Important is the stripping length of 25 mm and 12 mm.


C Insert wires into terminals and secure clamp terminals with screw driver (POZIDRIV® #1) at max. torque 0.8 Nm.
For 6 mm² (AWG 10) remove screws, clamping sheet and solder.

D Push chuck up to housing .

Important: Align the chuck by positioning the nose into the recess.

E Finish installation by turning the bushing onto the connector.


INFO to the screw driver:

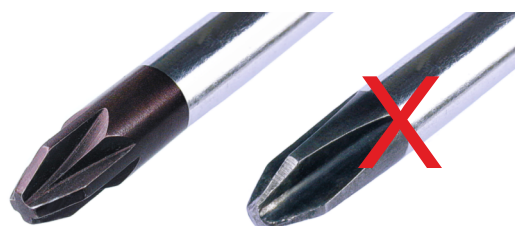

DO NOT USE!




POZIDRIV® #1

Philips

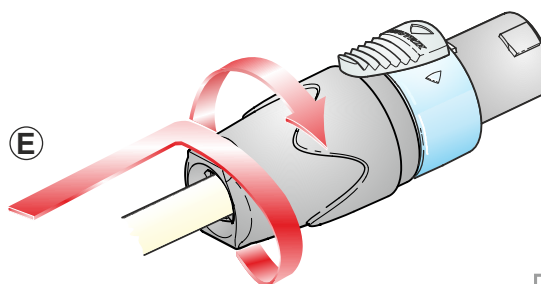



Assembly of the Conversion Kit LRX:

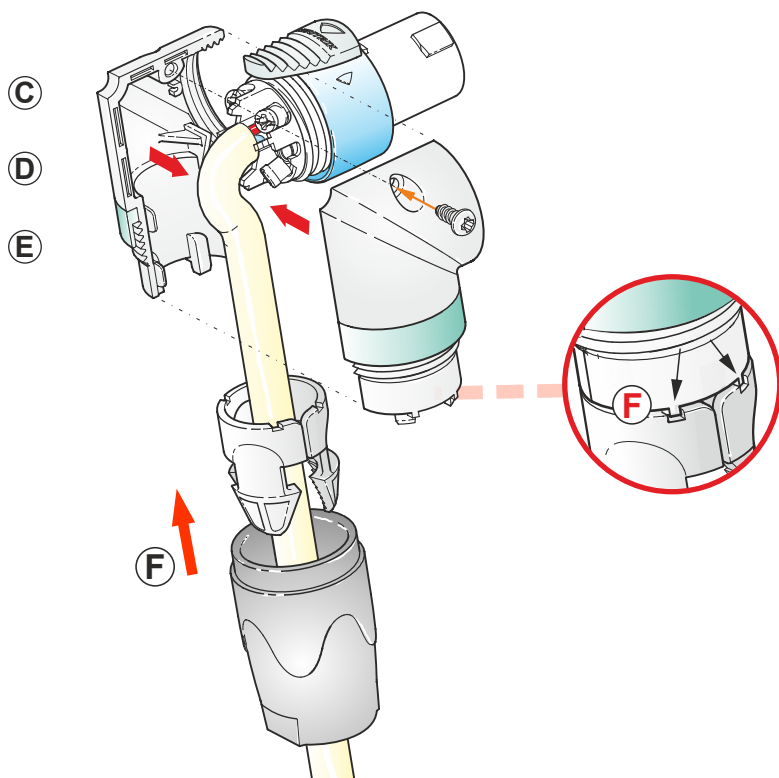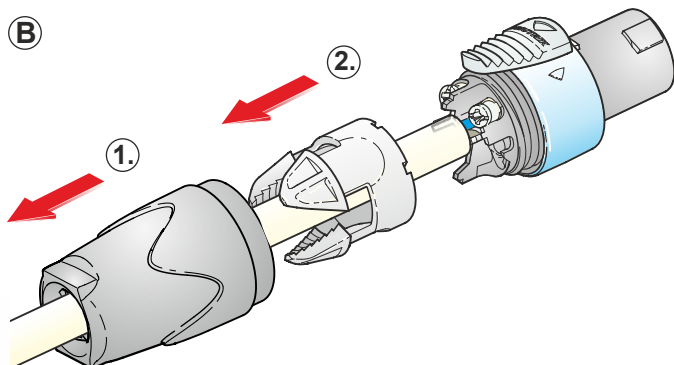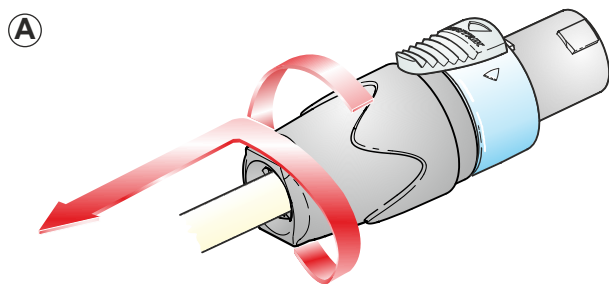

- A** Open the bushing.
- B** Slide the bushing and the chuck back.
- C** Bend the cable as shown.
- D** Position the two conversion shells to fit on the connector thread.
- E** Press together and fix by screw.
- F** Slide the chuck onto the housing and fasten the bushing.

Important: Align the chuck by positioning the nose into the recess.



Find more details of speakCON on www.neutrik.com.

NEUTRIK AG
NEUTRIK USA Inc.
NEUTRIK (UK) Ltd.
NEUTRIK Vertriebs GmbH

LI
USA
UK
DE/NL/AT/DK

T: +423 / 237 24 24
T: +1 704 / 972 3050
T: +44 1983 / 811 441
T: +49 8131 / 280 890

F: +423 / 232 53 93
F: +1 704 / 438 9202
F: +44 1983 / 811 439
F: +49 8131 / 280 830

NEUTRIK France
NEUTRIK Tokyo Ltd.
NEUTRIK Hong Kong Ltd.
NEUTRIK India Pvt. Ltd.

FR
JP
HK
IND

T: +33 1 / 4131 6750
T: +81 3 / 3663 4733
T: +852 / 2687 6055
T: +91 / 982 05 43 424

F: +33 1 / 4131 0511
F: +81 3 / 3663 4796
F: +852 / 2687 6052
F: +91 / 22 26163 540

Draft. Nr.: BDA 348 | Update: 22.11.2016 | Data subject to change without prior notice. ©2016 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® is a registered trademark.